مقدمه تصميم القواعد السطحيه .

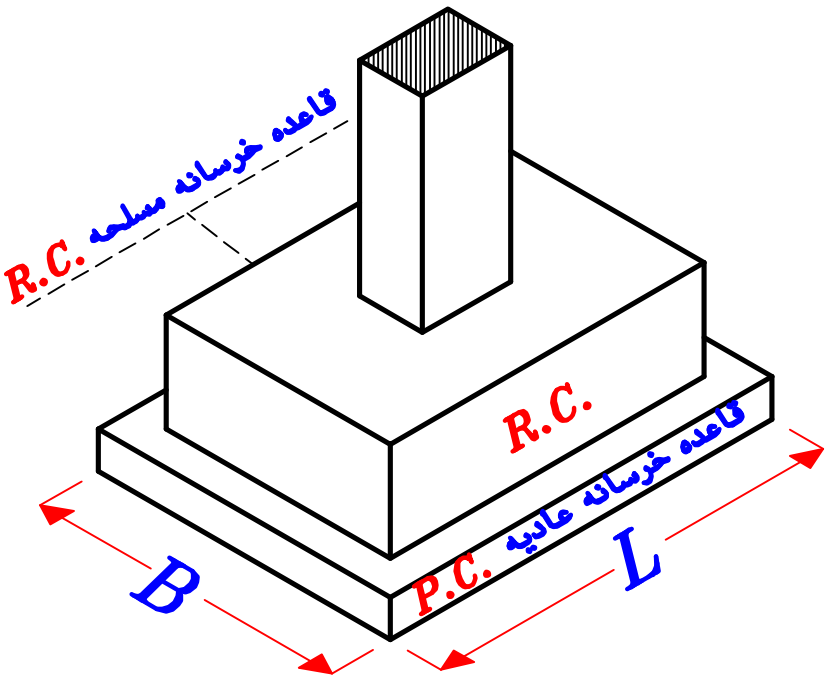

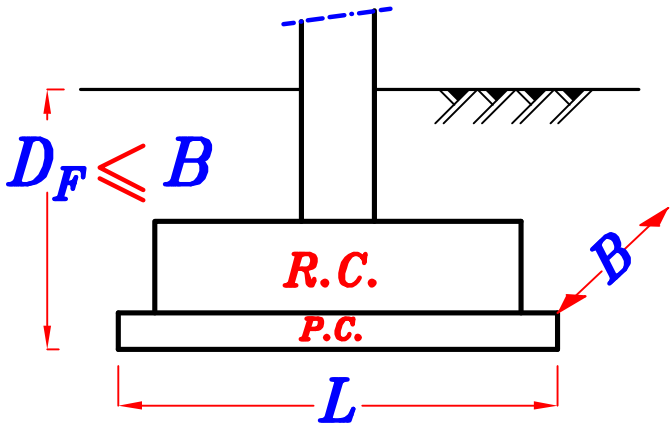

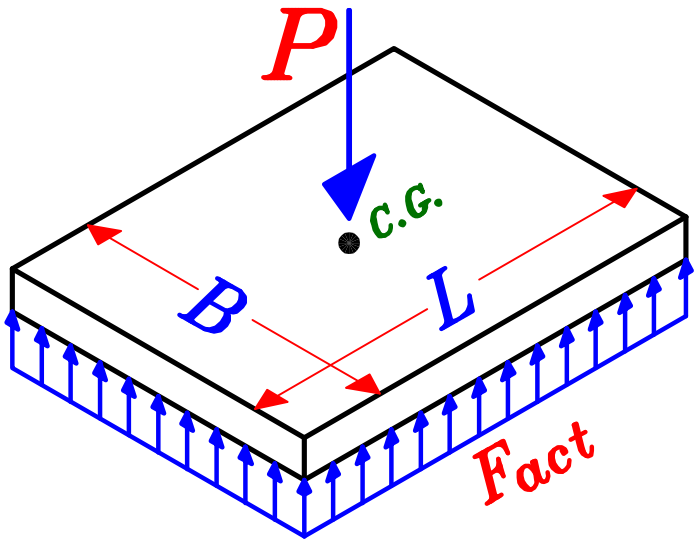

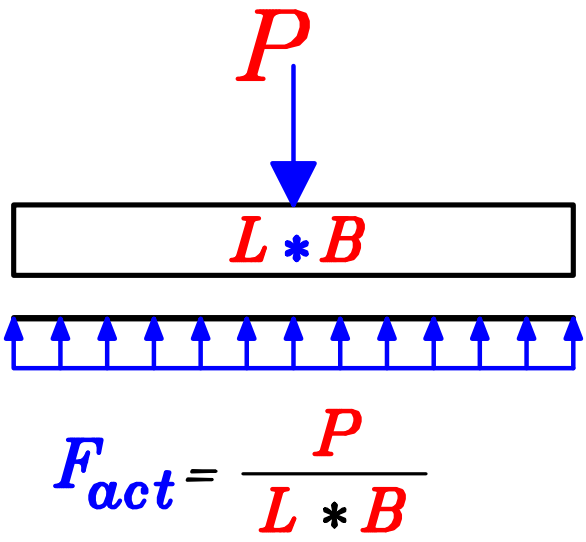

الهدف من استخدام القواعد السطحيه (***Shallow Foundations***)

هو تحويل حمل (***Load***) العمود المركز الى اجهاد منتظم (***uniform stress***) على التربه .

و ذلك لانه من الافضل لتربه التأسيس تحمل اجهادات منتظمه (***uniform stresses***)

عن تحمل أحمال مركزه (***Concentrated Loads***) من الاعمده .

و ذلك لتفادى حدوث اختراق (***punching***) للعمود داخل التربه .

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

المبدأ الأساسى فى تصميم القواعد السطحيه .

يعتمد التصميم البسيط للقواعد السطحيه على عمل اجهاد منتظم (***uniform stresses***) على القواعد يمثل رد فعل تربه التأسيس .

و لتحقيق ذلك يجب أن تكون القاعده جاسئه (***Rigid Footing***)

و ذلك عن طريق اختيار سُمك (***depth***) كبير للقاعده .

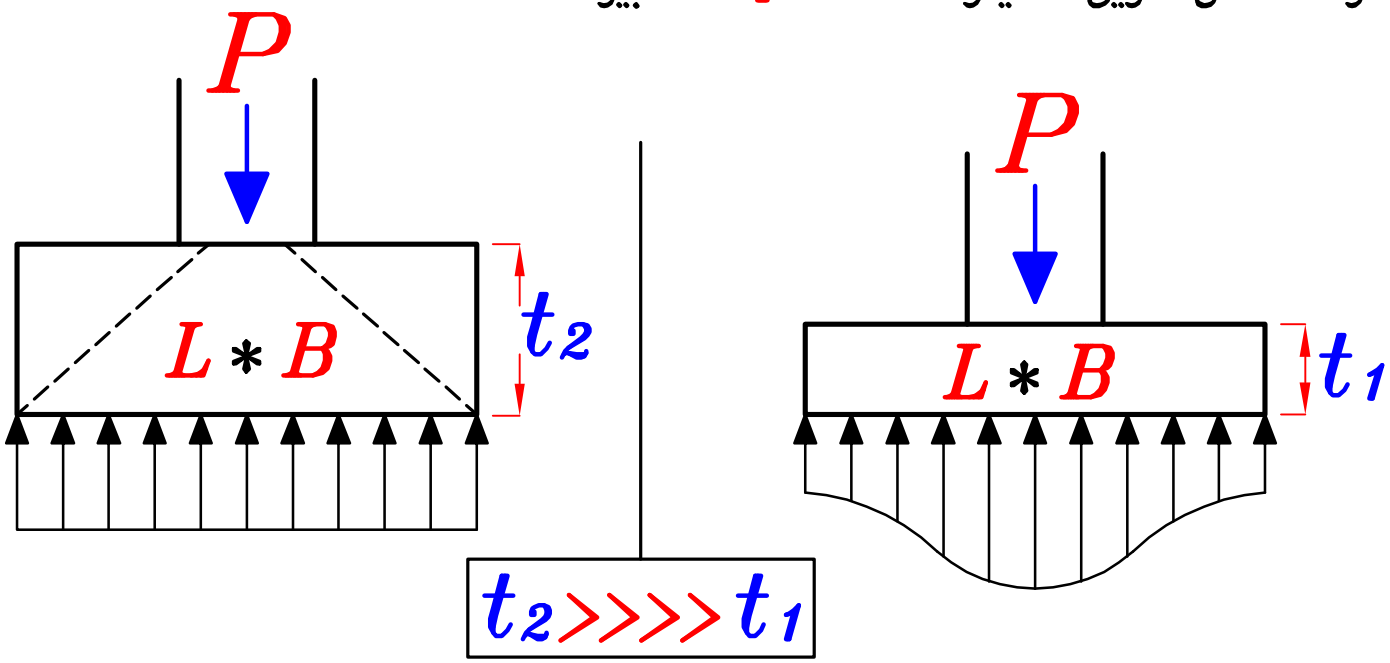

Footing (2)

Rigid Footing

- Area $L * B$
- Column Load P

Uniform contact stress.

Footing (1)

Flexible Footing

- Area $L * B$
- Column Load P

Non-Uniform contact stress.

لعمل قاعده جاسئه (***Rigid Footing***) يجب اختيار (***depth***) كبير للقاعده .

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

توجد عده أنواع و أشكال للقواعد السطحيه يتم أختيارها تبعا لـ :-

١- شكل العمود أو الحائط المحمول على القاعده .

٢- الحمل على العمود و المسافات بين الاعمده .

٣- وجود حد جار (*property Line*) بجوار الاعمده .

Types of Shallow Foundations.

أنواع القواعد السطحيه .

1- Strip Footing . القواعد الشريطيه

- هى قواعد طوليه لحمل الحوائط الساندة و الاسوار .

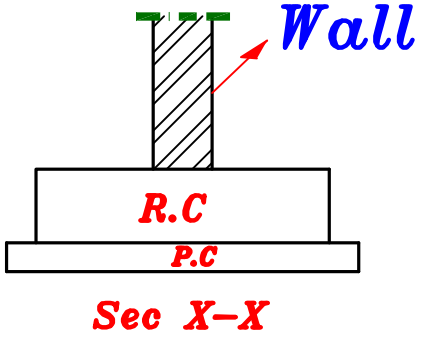

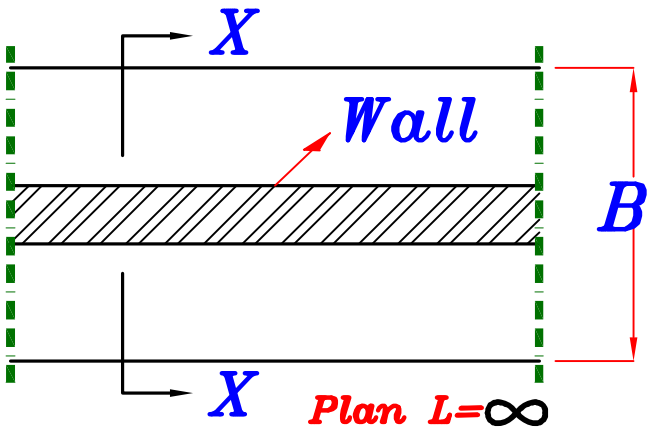

2- Isolated Footing . القواعد المنفصله

- هى قواعد ذات مساحه محدده ($L * B$) تنفذ لتحمل عمود واحد فقط و لها اشكال مختلفه منها :-

a - Squared Isolated Footing. قواعد مربعه

- تستخدم فى حالة :

- عمود مربع .
- عمود دائرى .
- يُمكن مع الاعمده المستطيله لكنه غير مفضل .

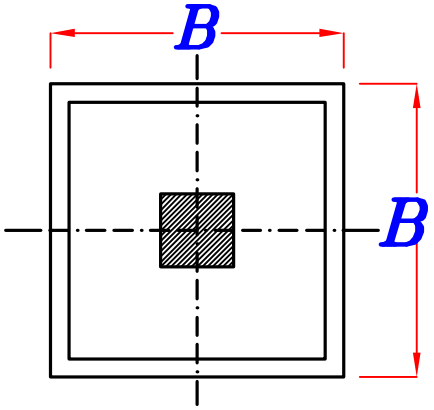

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

b - Haunched Square Isolated Footing.

- هى قواعد منفصله ذات سُمك متغير (كبير عند العمود و يقل عند الاطراف).

و تستخدم مع الاعمده ذات الاحمال الكبيره جدا مثل اعمده الكبارى .

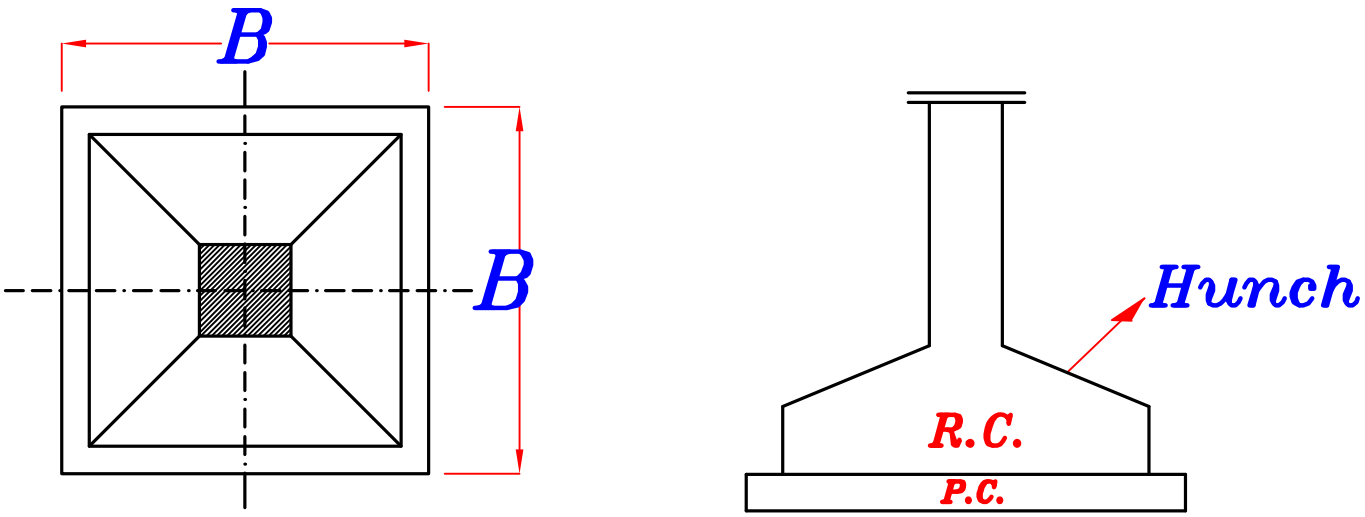

c - Rectangular Isolated Footing. قواعد مستطيله

- تستخدم فى حالة :
  - الاعمده المستطيله .
  - يُمكن مع الاعمده المربعه لكنه غير مفضل .

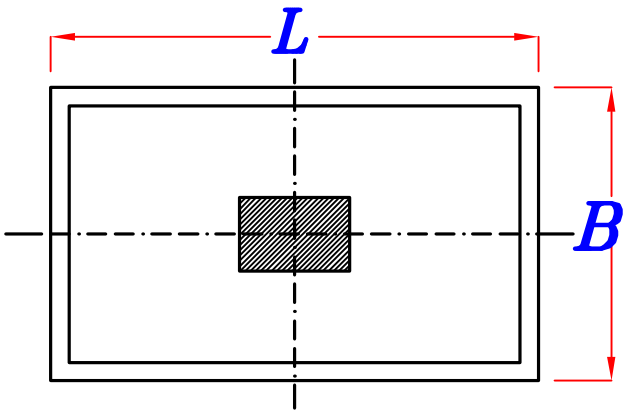

d - Circular Isolated Footing. قواعد دائريه

- تستخدم فقط مع الاعمده الدائرية

* و هى صعبه و مكلفه فى التنفيذ لذلك يستخدم بدلا منها القواعد المربعه .

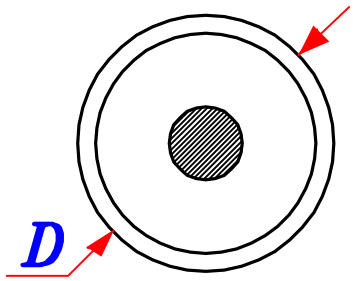

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

3- Combined Footing. القواعد المشتركه

- هى قواعد تحمل عمودين أو أكثر و لها شكلان :-

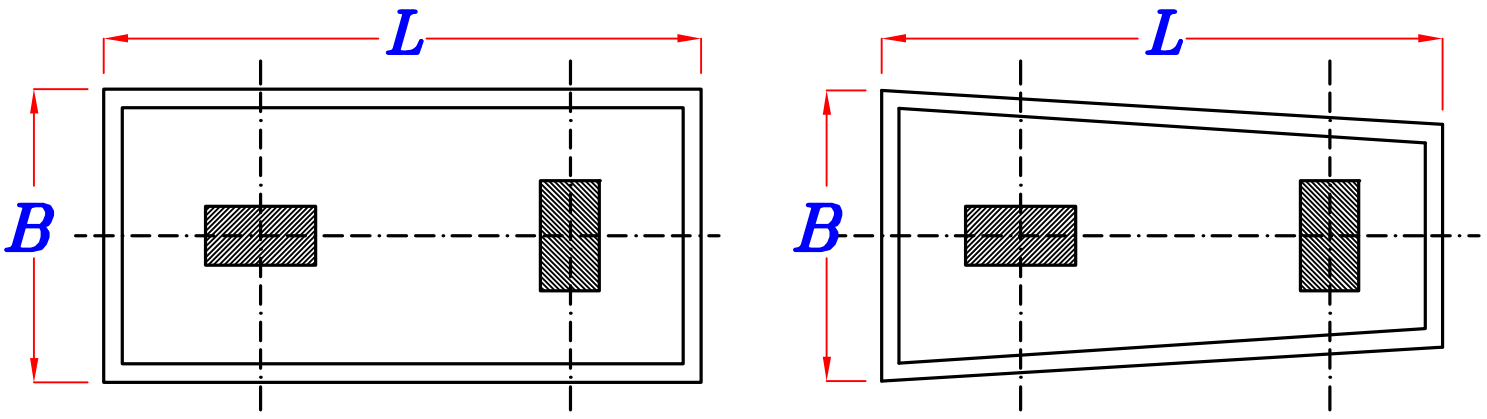

Rectangular Trapezoidal

4- Strap Beam.

- هى كمره عميقه (مقلوبه) تتحمل عمودين و تربطهما سويا ثم ترتكز على قاعدتين منفصلتين .

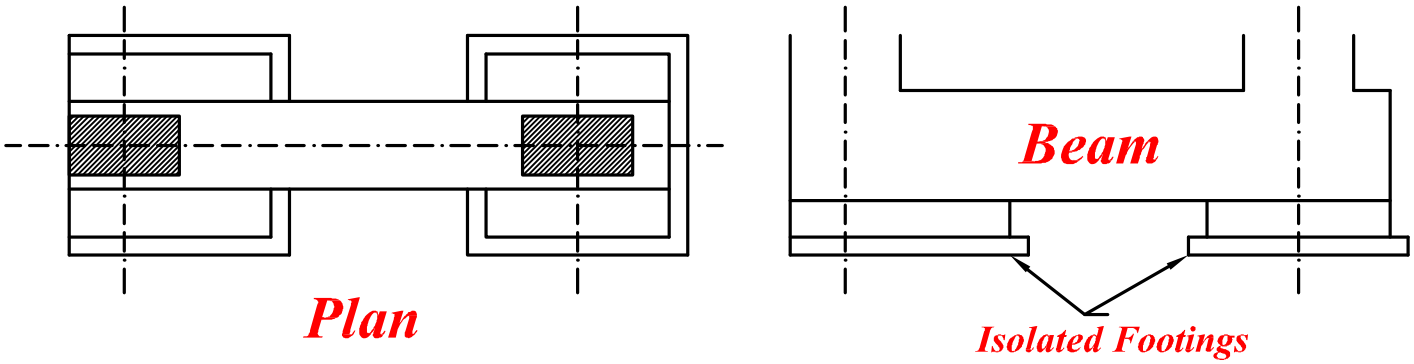

5- Raft. (اللبشه)

- هى قاعده واحده تتحمل جميع أعمده المنشأ بكافه أشكال الاعمده و كذلك ال Cores , Shear Walls

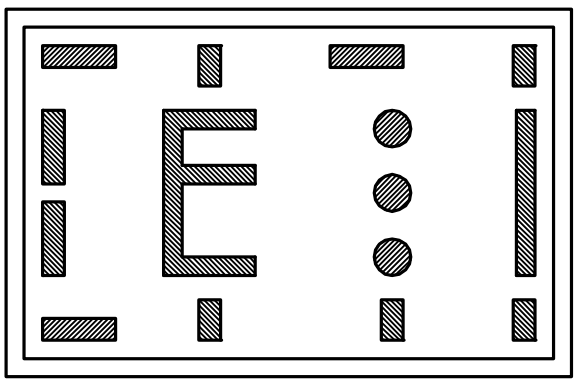

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Components Of Shallow Foundations

دائما تتكون أى قاعده من جزئين :-

1- Plain Concrete Footing (P.C.)

2- Reinforced Concrete Footing (R.C.)

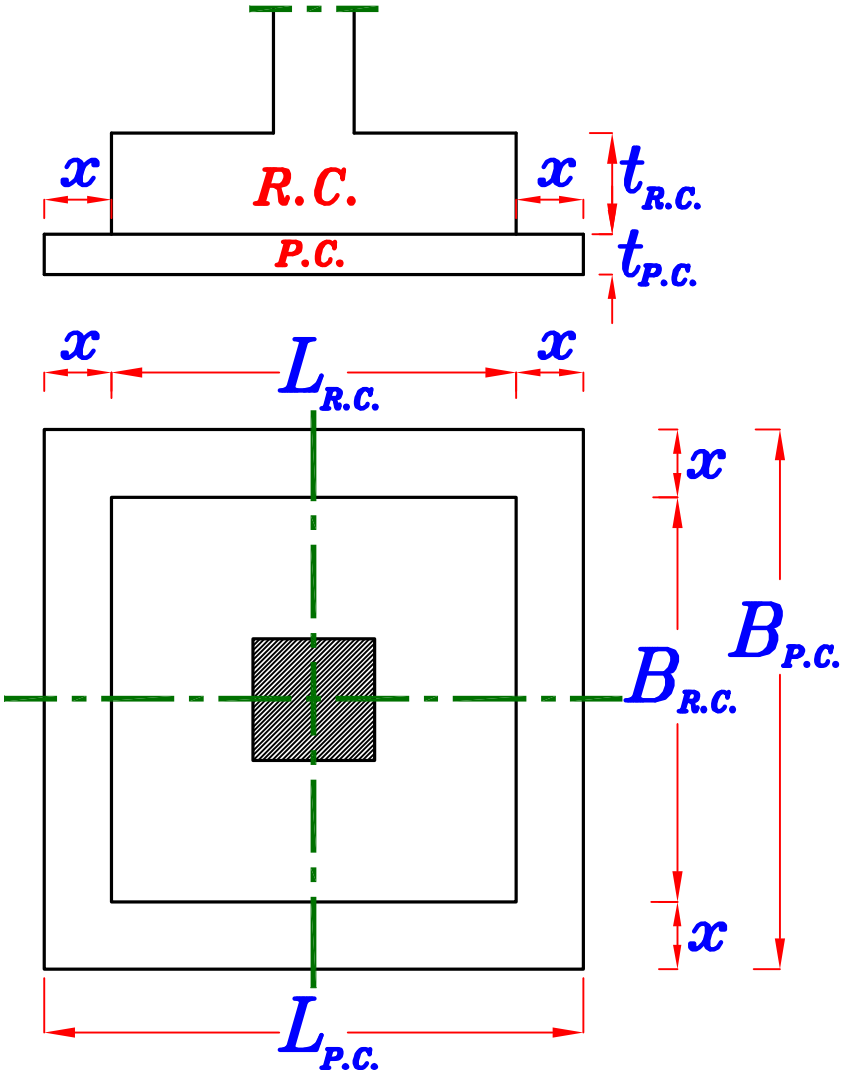

* وظيفه القاعده العاديه (P.C.) :-

١- تكون بمثابه فرشه أسفل القاعده المسلحه لضمان تسويه السطح الذى سوف يُرص عليه حديد التسليح و كذلك ليكون الحديد بعيدا عن حبيبات التربه لما قد تحمله التربه من أملاح قد تؤدى الى صدأ الحديد.

٢- وجود القاعده العاديه يحسن كثيرا من توزيع اجهاد القاعده من حمل الصمود على تربه التأسيس.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

ملحوظه هامه :

تكون أبعاد القاعده العاديه ($L_{P.C.}$, $B_{P.C.}$) أكبر من أبعاد القاعده المسلحه ($L_{R.C.}$, $B_{R.C.}$) بمقدار (X) من كل جهه .

حيث المسافه (X) تمثل بروز القاعده العاديه عن المسلحه و تؤخذ بما يكفى لمنع حدوث إنهيار بالقص على هذا الجزء .

Diagonal tention failure due to stress Concentration at P.C footing lower corner

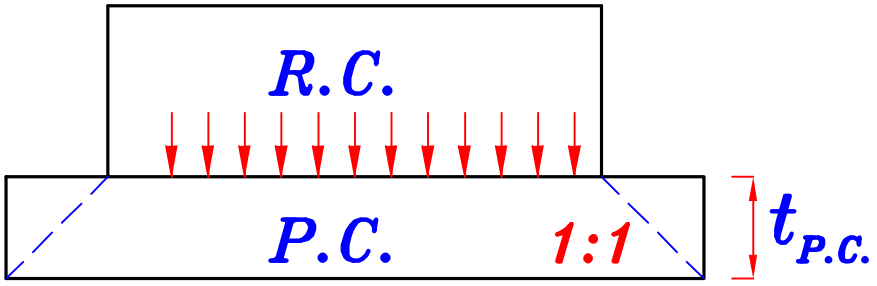

" Recommended " $X = t_{P.C.}$

و بالتالى تكون العلاقه بين القاعدتين المسلحه و العاديه دائما كالاتى :-

$$L_{R.C.} = L_{P.C.} - 2\,t_{P.C.}$$

$$B_{R.C.} = B_{P.C.} - 2\,t_{P.C.}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Allowable stress of concrete.

(1) $q_{s\,cu}$ = Allowable shear stress in Foundations.

$$q_{s\,cu} = 0.16 \sqrt{\frac{F_{cu}}{\gamma_c}} \quad (N/mm^2)$$

$$\gamma_c = 1.5$$

(2) $q_{p\,cu}$ = Allowable punching shear stress in Foundations.

$$q_{p\,cu} = 0.316 \left(0.5 + \frac{a}{b}\right) \sqrt{\frac{F_{cu}}{\gamma_c}} \quad (N/mm^2)$$

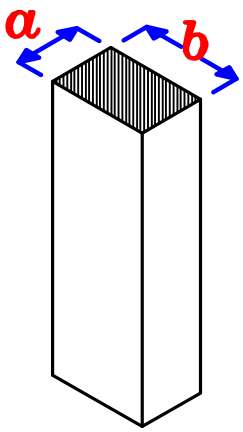

عرض العمود = a

عمق العمود = b

حيث

$\frac{a}{b} < 0.5$ بشرط

IF $\frac{a}{b} > 0.50$ taken = 0.50

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Requirments For design of shallow Foundations.

لتصميم أى قاعده لابد من توافر المعلومات الاتيه :

* Givens :-

1- Column load حمل العمود

2- Column dimensions أبعاد العمود

3- Allowable bearing capacity q_{all}

4- $t_{P.C.}$ can be assumed.

5- F_{cu} , F_y

* Concrete dimensions of shallow Foundations.

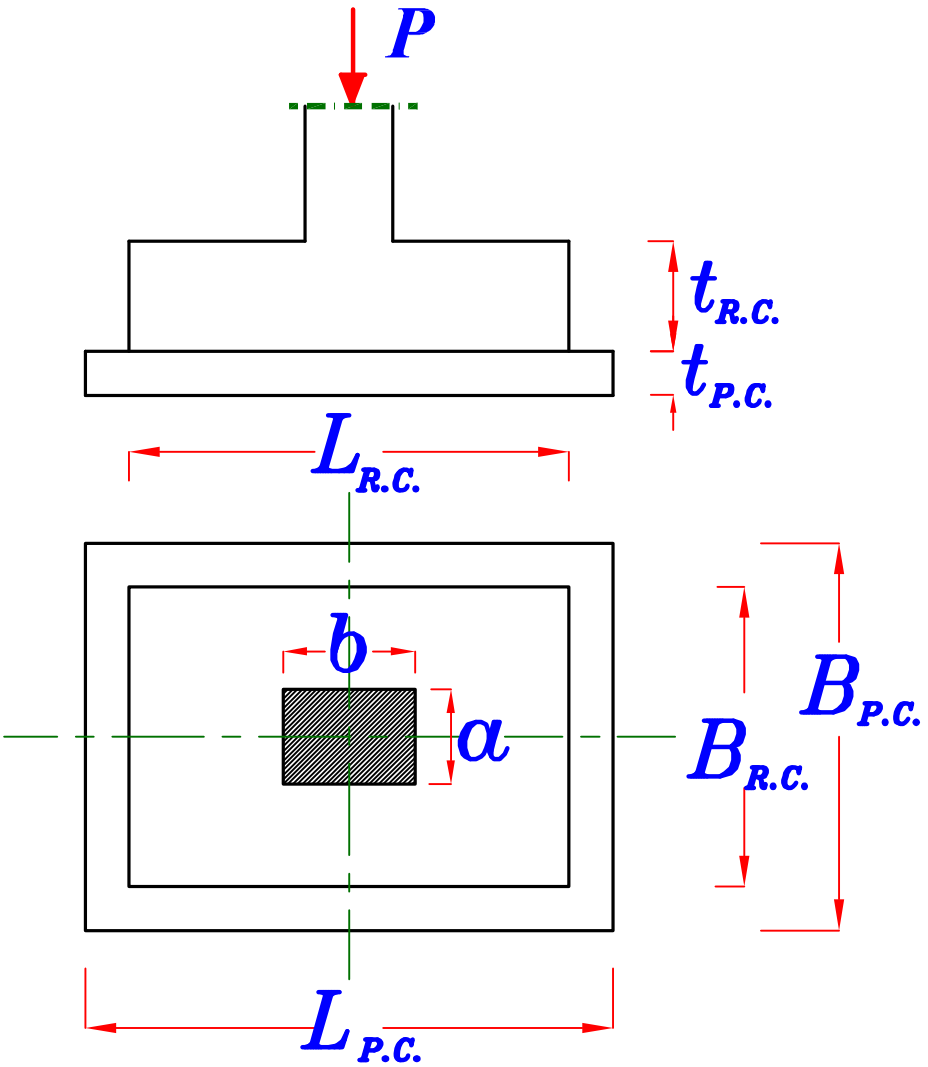

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

المبادئ الاساسيه لحسابات أبعاد أى قاعده.

① $t_{P.C.}$ *is assumed* $10 \longrightarrow 40$ *cm*

$t_{P.C.} = 10 \longrightarrow 20$ *cm* فرشه نظافه و لا تؤخذ فى حسابات التصميم

$t_{P.C.} = 20 \longrightarrow 40$ *cm* تعتبر قاعده عاديه و تؤخذ فى حسابات التصميم

② *To calculate the area of the Footing.*

Actual Stress on Soil = Allawable Stress of soil

$$F_{act} = \frac{P_{Col.}\,(working)\ (kN)}{Area\ of\ Footing\ (m^2)} = q_{all}\ (Bearing\ Capacity\ of\ the\ soil)\ (kN/m^2)$$

where:

* $P_{Col.}\,(working)$ هو الحمل على العمود المراد عمل قاعده له و يكون (*working*) و يكون محسوب مسبقا من تصميم العمود من (*load distribution*)

* *Area of Footing* (m^2) أقل مساحه مطلوبه للقاعده

IF $t_{P.C.} \geqslant 20$ *cm* و تكون مساحه القاعده العاديه

IF $t_{P.C.} < 20$ *cm* و تكون مساحه القاعده المسلحه

* q_{all} (*Bearing Capacity of the soil*)

هو أكبر اجهاد تتحمله التربه (kN/m^2) و يتم تحديده من تقرير التربه .

$$Area\ of\ Footing\ (m^2) = \frac{P_{Col.}\,(working)\ (kN)}{q_{all}\ (kN/m^2)}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

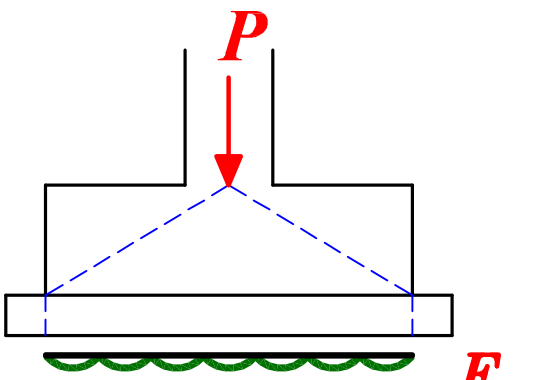

$t_{P.C.} < 20\ cm$

• عند استخدام قاعده عاديه ذات سمك $t_{P.C.}$ صغير فان حمل العمود يتوزع داخل القاعده المسلحه ثم ينتقل مباشره [تقريبا] الى تربه التاسيس دون اعاده توزيع داخل القاعده العاديه نظرا لعدم وجود المسافه الكافيه $t_{P.C.}$ لاعاده توزيع الاجهاد .

$$\therefore F_{act} = \frac{P}{A_{R.C.}} = q_{all}$$

$$\therefore \boxed{A_{R.C.} = \frac{P}{q_{all}}}$$

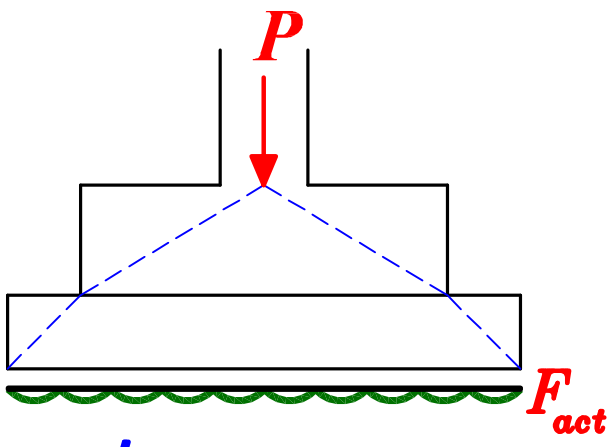

$t_{P.C.} \geq 20\ cm$

• عند استخدام قاعده عاديه ذات سمك $t_{P.C.}$ كبير فان حمل العمود يتوزع داخل القاعده المسلحه ثم يعاد توزيعه داخل القاعده العاديه نظرا لوجود المسافه الكافيه $t_{P.C.}$ لتوزيع الاجهاد للتربه .

$$\therefore F_{act} = \frac{P}{A_{P.C.}} = q_{all}$$

$$\therefore \boxed{A_{P.C.} = \frac{P}{q_{all}}}$$

* Minimum dimensions of R.C. Footing.

• يجب ألا تقل أبعاد و تسليح القواعد الخرسانيه المسلحه عن الاتى :-

• لا يقل عرض القاعده المسلحه عن $80\ cm$

$$\boxed{B_{R.C.\ minimum} = 80\ cm}$$

• لا يقل سُمك القاعده المسلحه عن $40\ cm$

$$\boxed{t_{R.C.\ minimum} = 40\ cm}$$

$$\boxed{d_{R.C.\ minimum} = 33\ cm}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

ملاحظات عامه على تفاصيل رسم القواعد [عامه لانواع القواعد]

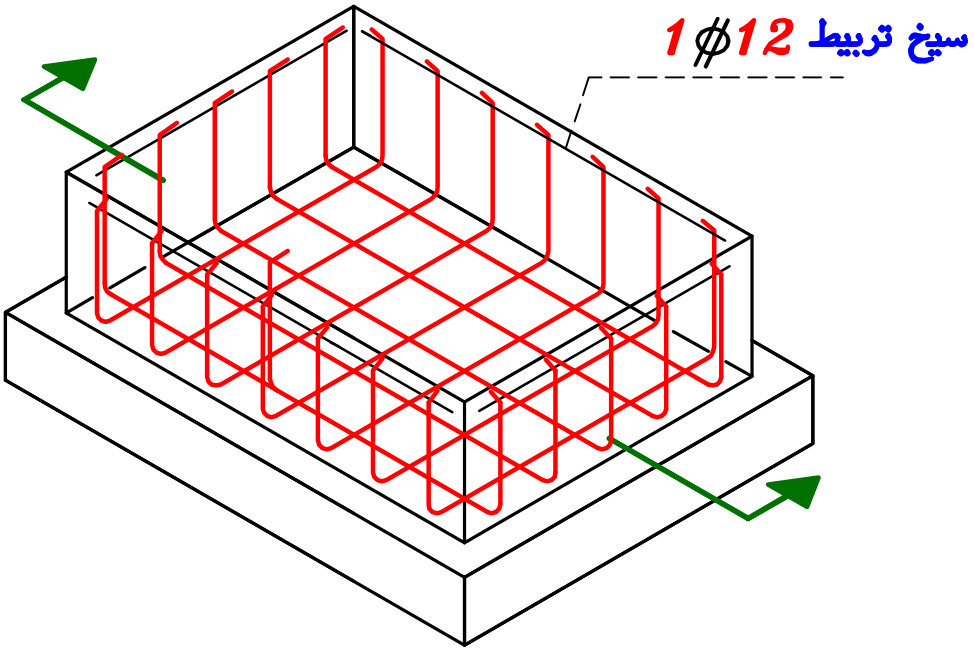

Sec X–X

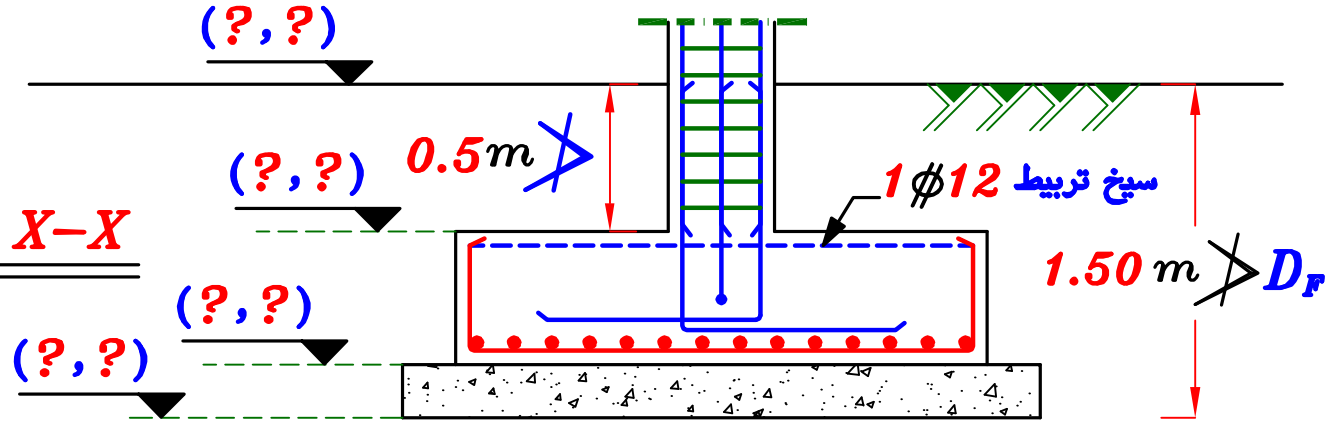

Plan

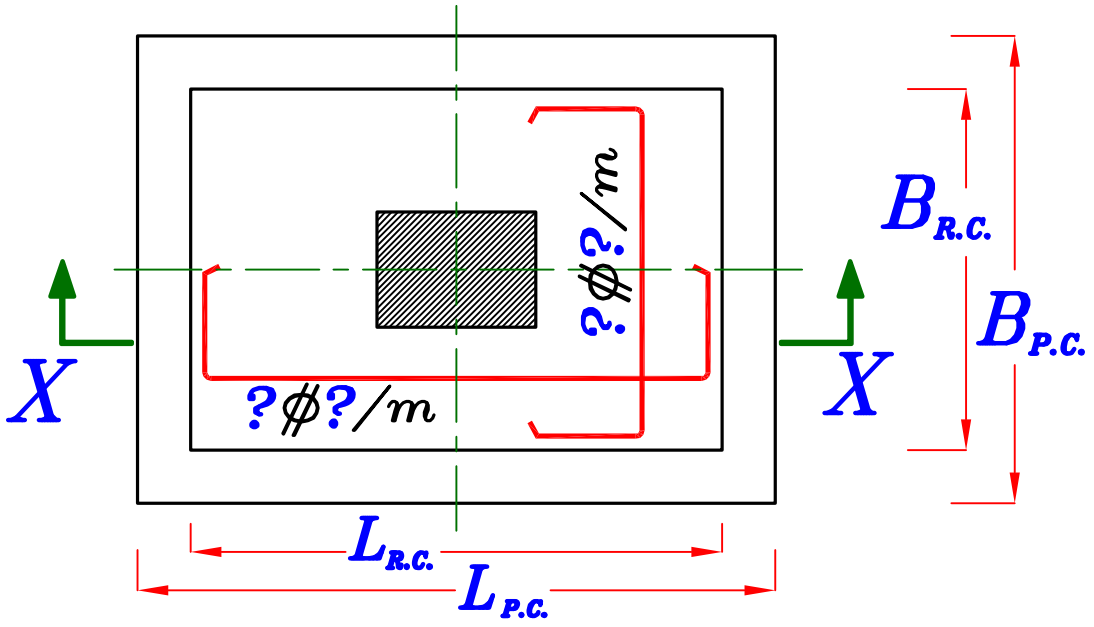

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

- دائما حديد القواعد يكون سفلى فى الحالات الاتيه

- *Strip Footings*
- *Isolated Footings*

- يكون حديد القواعد سفلى+علوى فى الحالات الاتيه

- *Strip Footings* ← *in case of* $t_{R.C.} \geqslant 100\ cm$
- *Isolated Footings* ← حيث توضع شبكه علويه $5\phi 12/m'$
- *Combined Footings*
- *Strap beams*

- يوضع سيخ تربيط $1\phi 12$ عند أعلى الاسياخ فقط فى حاله القواعد المنفصله .

- أقل قطر سيخ يمكن استخدامه فى القواعد هو $\phi 12$
و أقل عدد للاسياخ فى المتر هو 5 و أكبر عدد هو 10

$$A_{s\,min}$$

$$A_{s\,min}\ (mm^2/m) = \left\{ \begin{matrix} 1.5\,d\ (mm) \\ 5\phi 12/m' \end{matrix} \right\} \text{الأكبر}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

يجب مراعاه الاتى فى الـ x-section

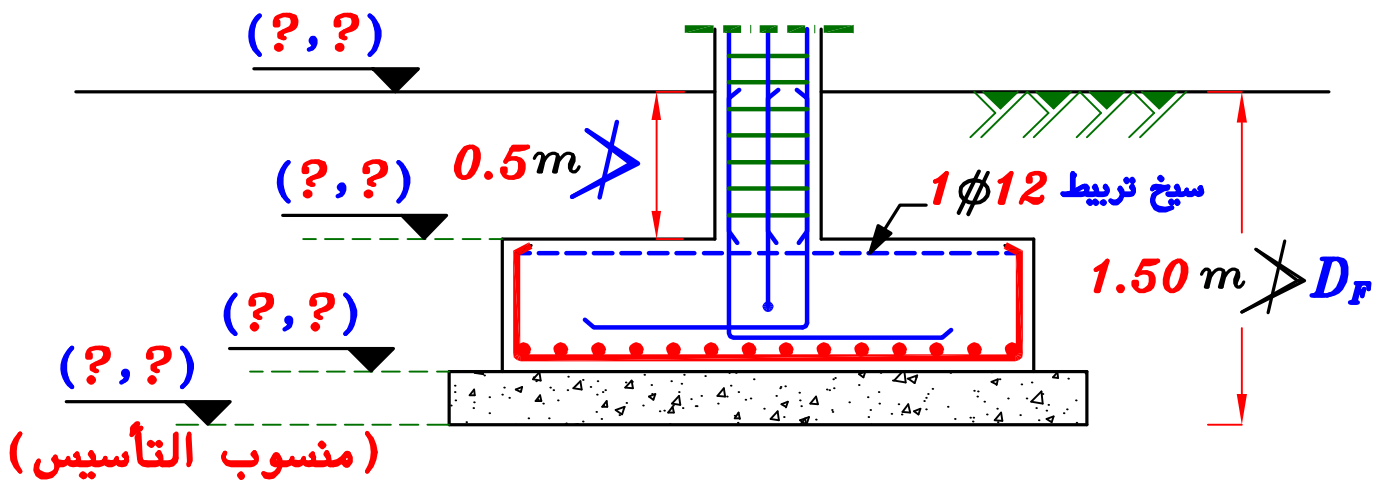

- يتم تهشير القاغده العاديه
- رسم حديد التسليح فى الاتجاهين و كتابة قيمه التسليح عليه

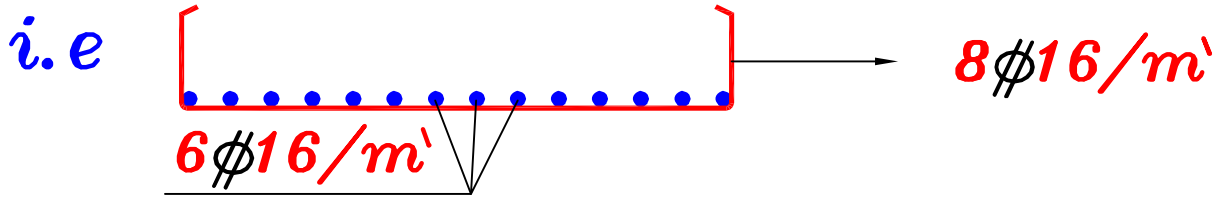

- يجب مراعه وضوح الـ Cover = 7cm = 70 mm

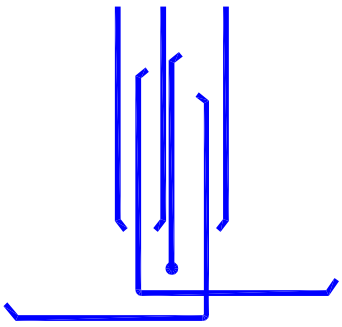

- يتم رسم حديد العمود و كيفيه اتصاله بالقاعده .
- يجب توضيح أماكن توقيف حديد العمود للاشاير

- يتم كتابه المناسيب للاتى :

١- التربه
٢- بدايه القاعده المسلحه
٣- بدايه القاعده العاديه
٤- نهايه القاعده العاديه (منسوب التأسيس)

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

يجب مراعاه الاتى فى ال Plan

Plan

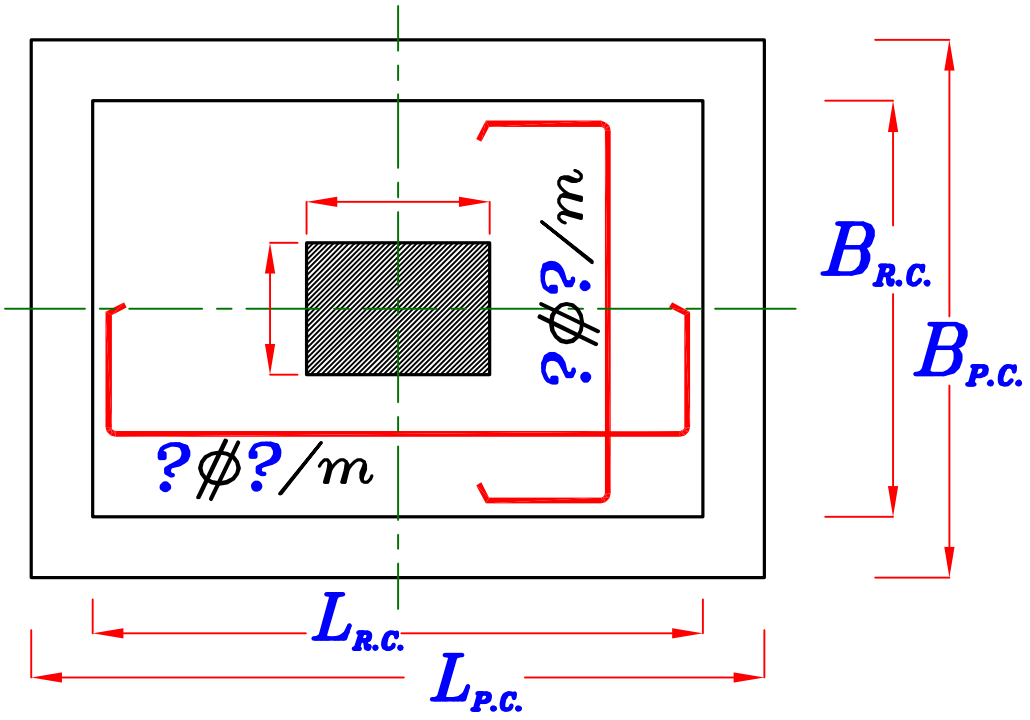

- رسم القاعده العاديه و المسلحه
- رسم محاور العمود مع توقيع العمود بأبعاده و تهشير العمود
- تفريد الحديد فى الاتجاهين مع مراعاه ال **Cover** و أن ركبه السيخ لا تزيد عن ال **depth**

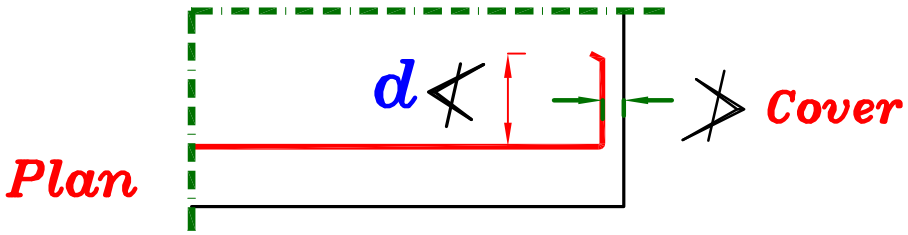

- كتابه قيم التسليح على الاسياخ ?ϕ?/m
- وضع أبعاد كامله لل **Column , P.C Footing , R.C Footing**

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

1 Design of strip Footings. تصميم القواعد الشريطيه .

هى قواعد طوليه لحمل الحوائط الساندة و الاسوار .

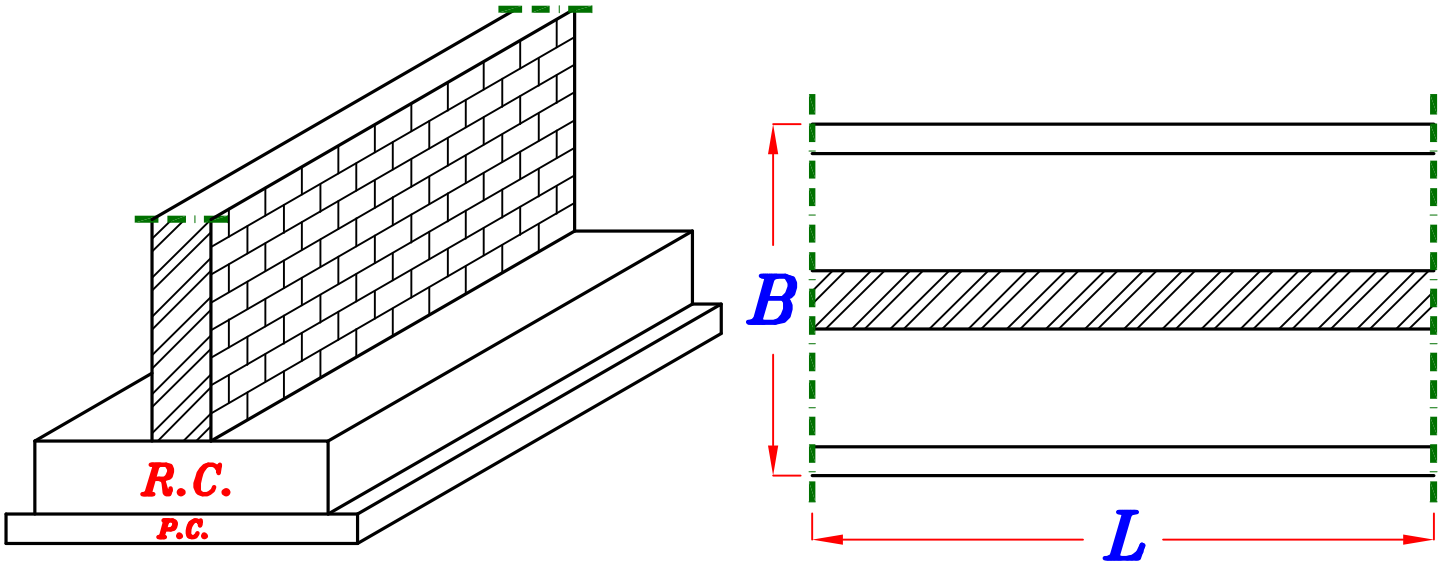

- فى هذه النوعيه من القواعد يكون الطول L كبيرا جدا بالنسبه للعرض B لذلك نأخذ شريحه فى الاتجاه الطولى عرضها ١,٠ م و بقيه الطول بالمثل .

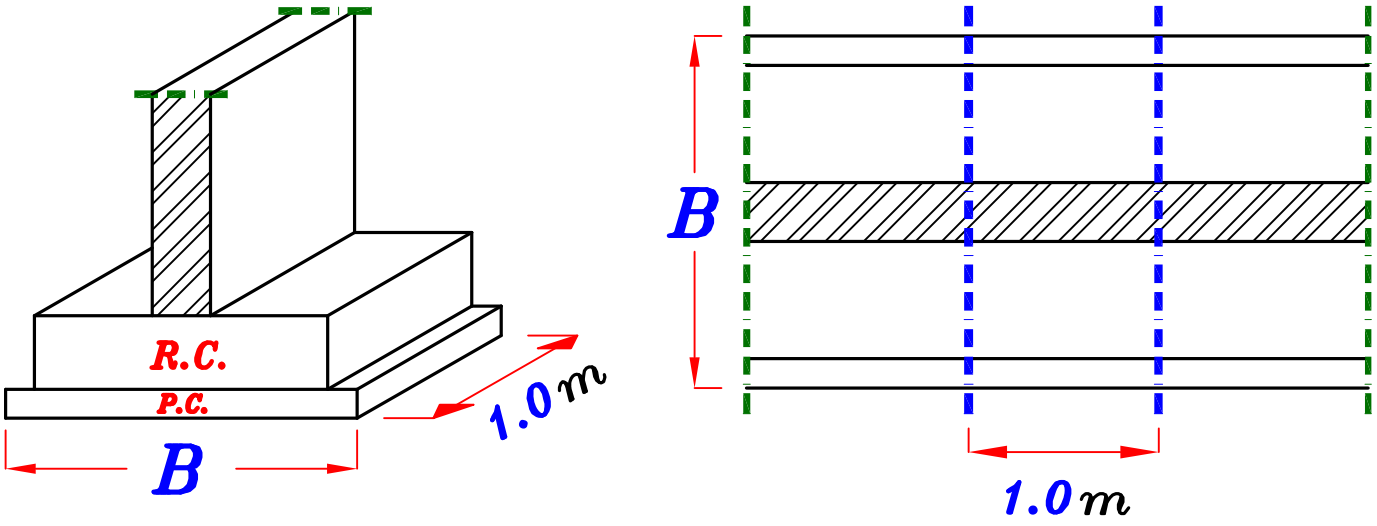

∴ نتعامل مع شريحه فى القاعده أبعادها $B * 1.0\ m$

* Given :-
  * Load of wall $= P_w =$ ✓✓ kN/m
  * $q_{all} =$ ✓✓ kN/m^2
  * $b_w =$ ✓✓ wall thickness
  * $t_{P.C.} =$ ✓✓

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

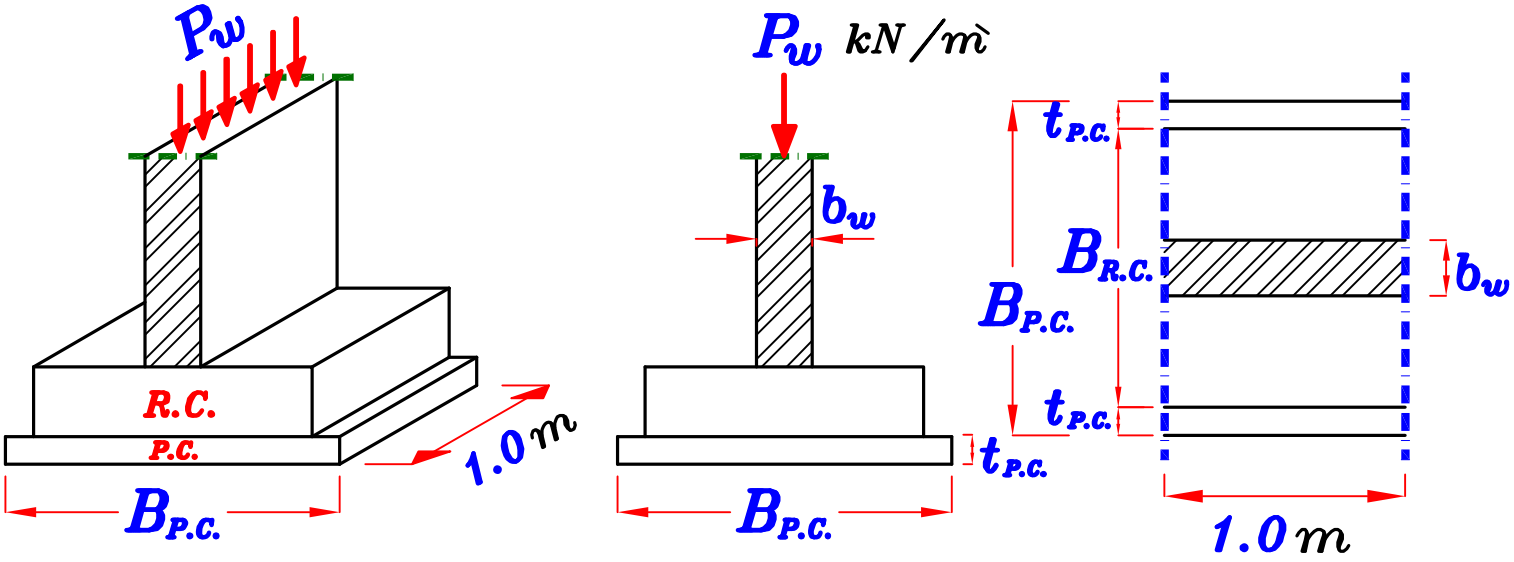

Steps of design.

1– Calculate the Footing area (Width of R.C. Footing.)

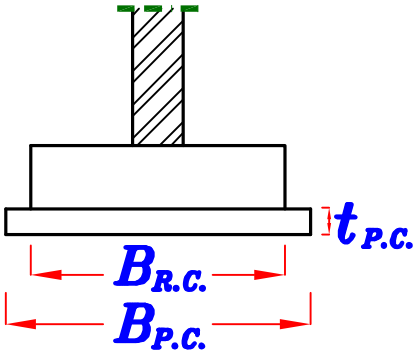

IF $t_{P.C.} \geq 20\ cm$

$$A_{P.C.} = \frac{P_w}{q_{all}} = \surd\surd\ m^2 = B_{P.C.} * 1.0\ m \quad \text{get } B_{P.C.}$$

$$B_{P.C.} = \frac{P_w}{q_{all}}$$

$$B_{R.C.} = B_{P.C.} - 2\ t_{P.C.}$$

IF $t_{P.C.} < 20\ cm$

$$A_{R.C.} = \frac{P_w}{q_{all}} = \surd\surd\ m^2 = B_{R.C.} * 1.0\ m \quad \text{get } B_{R.C.}$$

$$B_{R.C.} = \frac{P_w}{q_{all}}$$

$$B_{P.C.} = B_{R.C.} + 2\ t_{P.C.}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

2– Design the critical sections For moment. (Depth of R.C. Footing.)

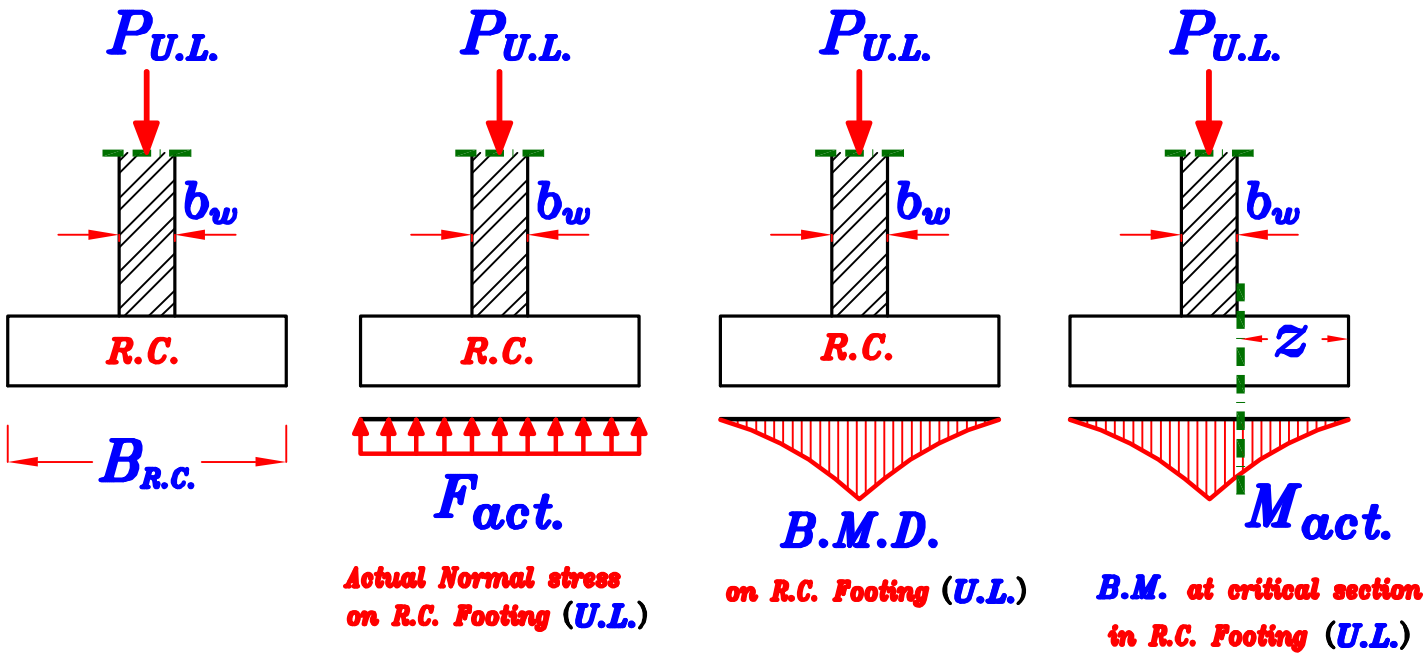

$$B_{R.C.} = \checkmark\checkmark \ m$$

$$P_{U.L.} = P_w * 1.5 \quad (kN)$$

– Actual Normal stress on R.C. Footing (U.L.)

$$F_{act.} = \frac{P_{U.L.}}{B_{R.C.} * 1.0\ m} \quad (kN/m`)$$

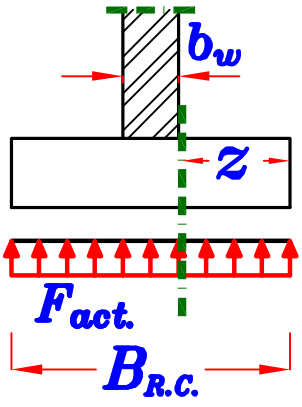

– Critical section of bending at R.C. Footing.

القطاع الحرج للعزوم يكون عند وش الحائط من أى جهه .

$$Z = \frac{B_{R.C.} - b_w}{2} \quad (m)$$

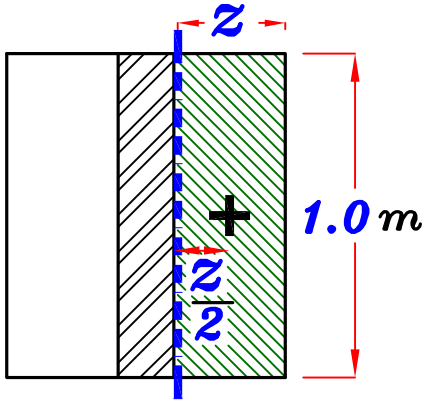

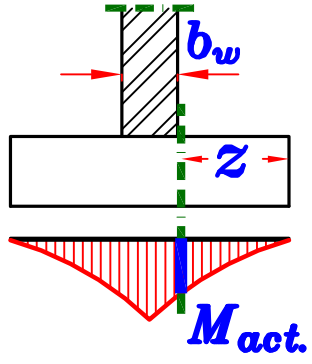

$$Force = Stress * Area$$

$$Force = F_{act.} * Z * 1.0\ m$$

$$Moment = Force * Distance$$

$$M_{act.} = \left(F_{act.} * Z * 1.0\right) \frac{Z}{2} \quad (kN.m/m`)$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

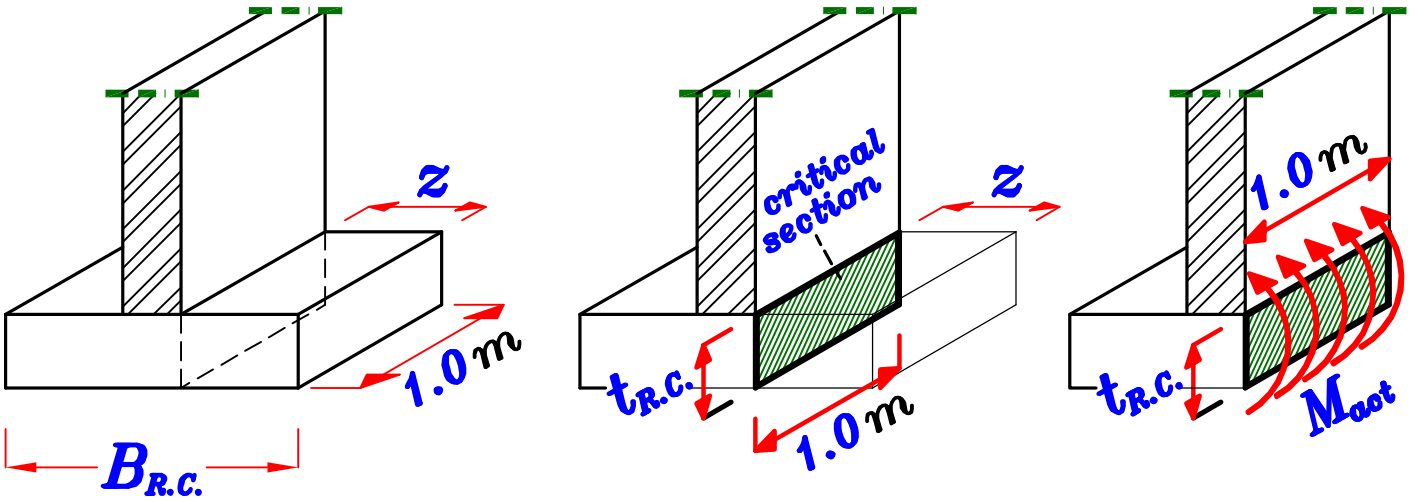

Critical section

القطاع الذى سيتم تصميمه فى القاعده

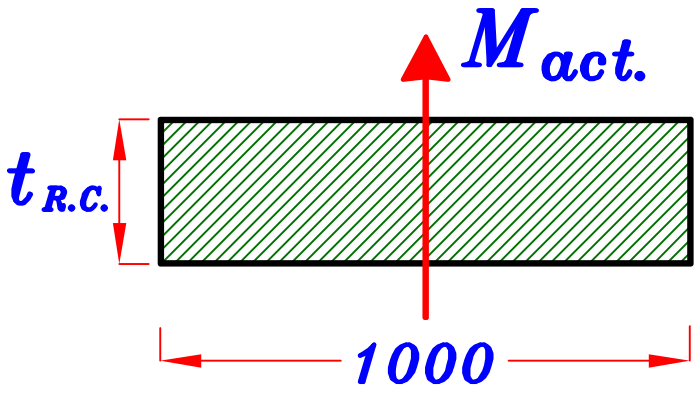

$$d_{(mm)} = C_1 \sqrt{\frac{M_{act.}\,(kN.m) * 10^6}{F_{cu}\,(N/mm^2) * 1000\,(mm)}}$$

Choose $C_1 = (3.5 \rightarrow 5.0)$

C_1 يفضل فى القواعد أن نختار قيمه كبيره ل
حتى تكون تخانه القاعده كبيره
لضمان أن تكون القاعده Rigid

Get d = ✓✓ (mm)

Take cover = 70 mm

يفضل أن يكون الـ cover فى القواعد كبير
لحمايه الحديد من الصداء .

$$t_{R.C.} = d + cover\ (70\ mm)$$

تقرب لاقرب ٥٠ مم بالزياده

$t_{R.C.\ minimum} = 400\ mm$

$d_{R.C.\ minimum} = 330\ mm$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

3 – Check Shear.

Critical section of shear at R.C. Footing.

حمل الحائط يتوزع من أعلى الى أسفل داخل القاعده بميل (1:1) أى بزاويه ميل 45° أى يكون تأثيره على القاعده على عرض ($b_w + 2d$)

فتكون المنطقه فى منتصف القاعده ($b_w + 2d$) عليها أقل اجهادات قص

حيث تكون قيمته تساوى $F_{act.}$ رد فعل التربه على القاعده $P_{U.L.}$ مطروحا منه حمل الحائط

فيكون القطاع الحرج الذى عليه أكبر اجهادات قص على بعد d من وش الحائط من أى جهه لانه أول قطاع عليه رد فعل الارض فقط و بالتالى يكون عليه أكبر Shear stress .

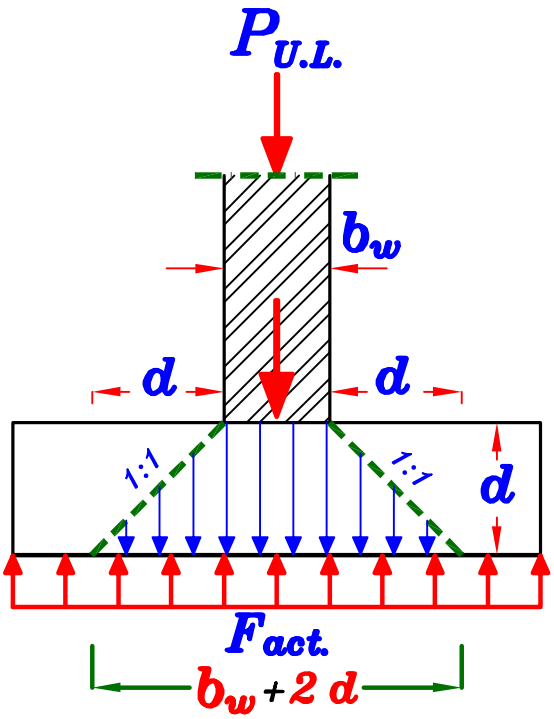

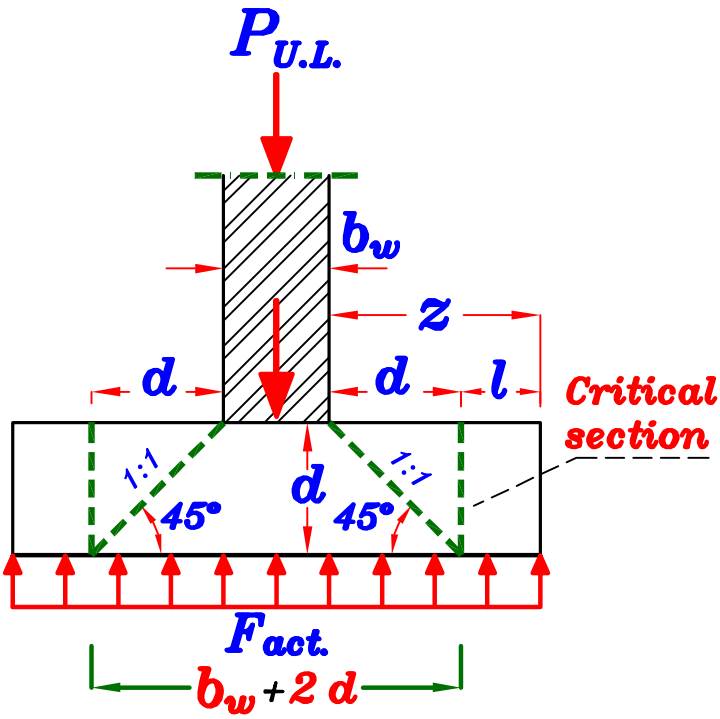

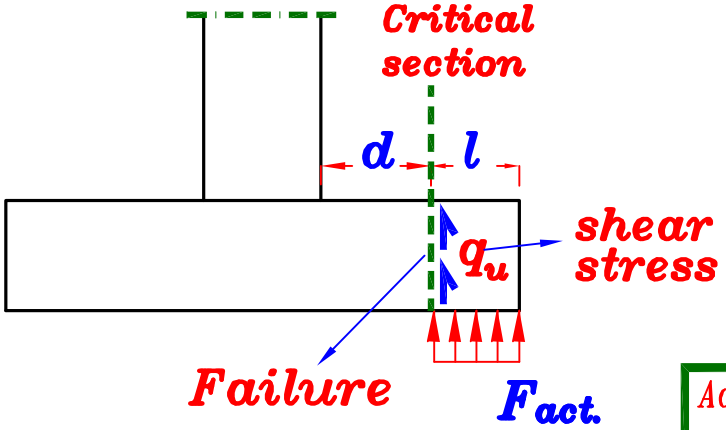

[Shear Failure]

لذلك يجب التحقق من أن اجهاد القص على جانب السطح المتوقع للانفصال لا يتعدى مقاومه الخرسانه فى القص

Actual Shear stress	⩽	Allowable Shear stress
q_u	⩽	q_{su}

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

* Calculate $l = z - d$ (m)

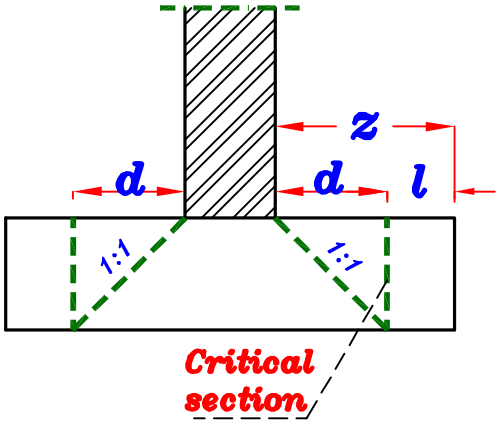

* Calculate Actual shear Force. (Q_u)

$$Q_u = F_{act.} * l * 1.0\ m \quad (kN)$$

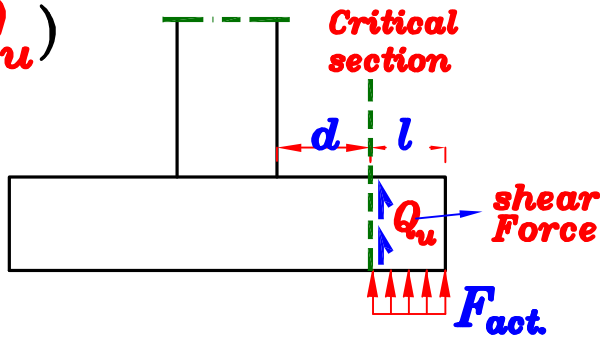

* Calculate Actual shear stress. (q_u)

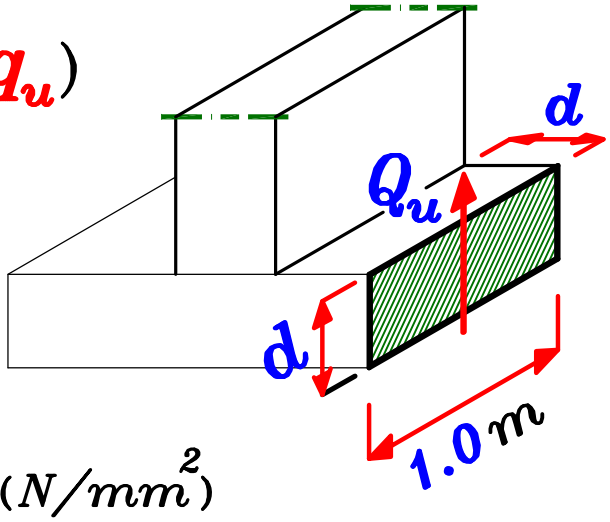

$$q_u = \frac{Q_u}{b * d} = \frac{Q_{u\,(kN)} * 10^3}{1000 * d\ (mm)} \quad (N/mm^2)$$

* Calculate Allowable shear stress. (q_{su})

$$q_{su} = 0.16\sqrt{\frac{F_{cu}}{\gamma_c}} \quad (N/mm^2)$$

لاحظ أنه فى القواعد نعتمد فقط على مقاومه الخرسانه فى القص لانه لا توجد كانات حيث يصعب تشكيلها بالابعاد الضخمه للقواعد .

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

* Compare between

Actual shear stress (q_u) & Allowable shear stress (q_{su})

* IF $q_u \leqslant q_{su}$ ⟶ Safe shear stresses

No need to increase dimensions.

* IF $q_u > q_{su}$ ⟶ Unsafe shear stresses

We have to increase dimensions.

IF Unsafe shear stresses increase $t_{R.C.}$ by 100 mm

then Calculate:

$$d = t_{R.C.} - 70 \ mm$$

$$l = z - d \quad (m)$$

$$Q_u = F_{act.} * l * 1.0 \ m \quad (kN)$$

$$q_u = \frac{Q_u \ (kN) * 10^3}{1000 * d \ (mm)} \quad (N/mm^2)$$

then Recheck:

Actual shear stress (q_u) & Allowable shear stress (q_{su})

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

4- Reinforcement of the Footing.

From Step ② We Choose $C_1 = (3.5 \rightarrow 5.0)$

From C_1 Get $\longrightarrow$ J

Get $$A_s = \frac{M_{act.}}{J\, F_y\, d} \quad (mm^2)$$

Check $A_{s\,min}$

$$A_{s\,min}\ (mm^2/m) = \left\{ \begin{array}{l} 1.5\, d\ (mm) \\ 5\, \phi\, 12/m' \end{array} \right\} \text{الأكبر}$$

IF $A_s \geq A_{s\,min} \longrightarrow$ o.k.

IF $A_s < A_{s\,min} \longrightarrow$ Take $A_s = A_{s\,min}$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

5 – Details of Reinforcement.

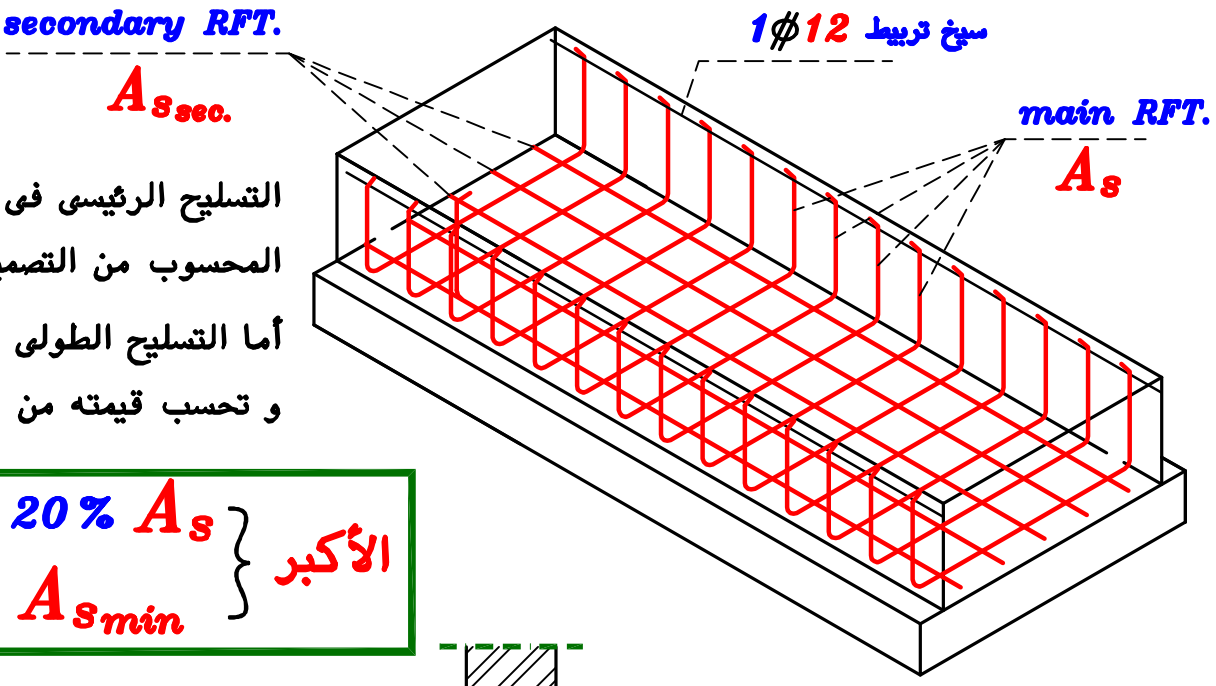

التسليح الرئيسى فى القواعد الشريطيه المحسوب من التصميم يكون تسليح عرضى أما التسليح الطولى فيكون حديد ثانوى و تحسب قيمته من

$$A_{s\,sec.} = \left\{ \begin{matrix} 20\,\%\ A_s \\ A_{s\,min} \end{matrix} \right\} \text{الأكبر}$$

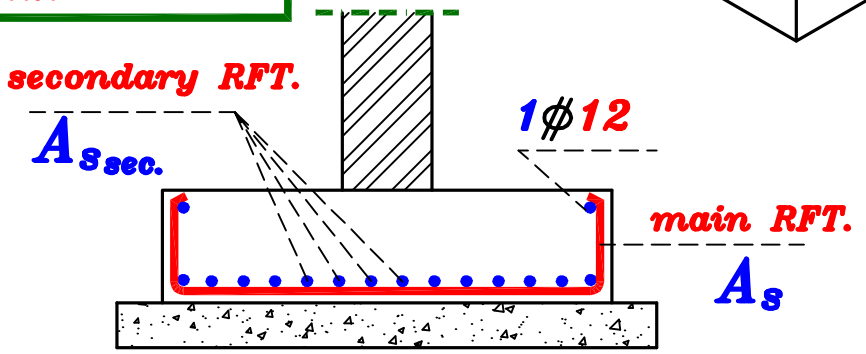

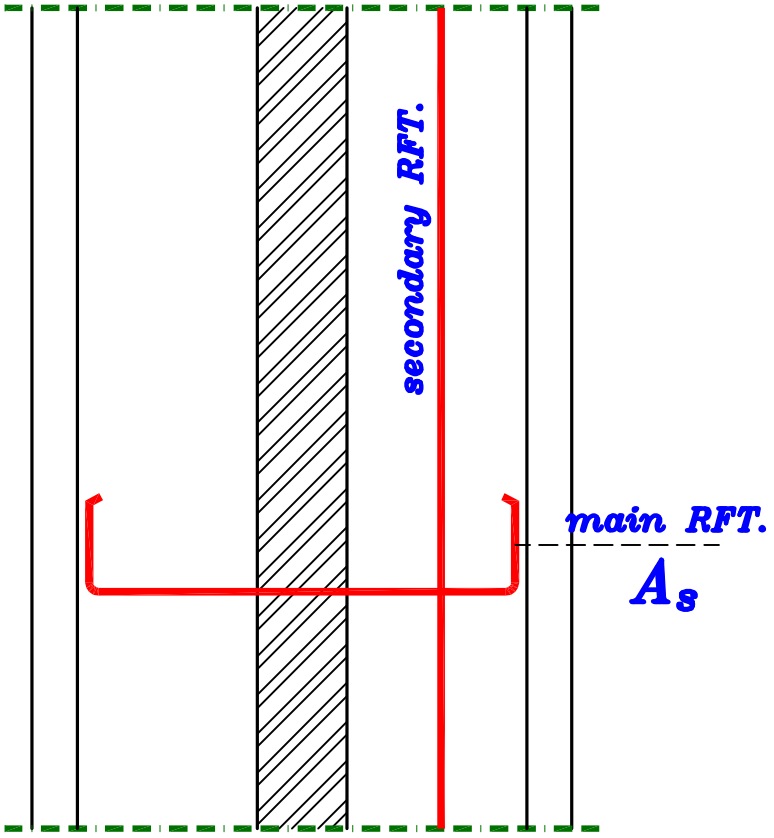

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Example.

It is required to design a strip Footing to Support a R.C retaining wall of thikness 25 cm. The wall working load is 350 kN/m`, and the allowable net bearing capacity in the Footing site is 100 kN/m^2. (F_{cu} = 25 N/mm^2, F_y = 360 N/mm^2). and draw details of RFT. to scale 1:50

Solution.

Data given:

Wall of thickness = 250 mm

P_{wall} (working) = 350 kN/m` $P_{wall}$ (U.L.) = 350 * 1.5 = 525 kN/m`

Bearing capacity of the soil = q_{all} = 100 kN/m^2

F_{cu} = 25 N/mm^2 F_y = 360 N/mm^2

1– *Calculate the Footing area* (*Width of R.C. Footing.*)

Choose $t_{P.C.} = 30\ cm > 20\ cm$

$$B_{P.C.} = \frac{P_w}{q_{all}} = \frac{350\ (kN)}{100\ (kN/m^2)} = 3.50\ m$$

$$B_{R.C.} = B_{P.C.} - 2\ t_{P.C.} = 3.50 - 2 * 0.3 = 2.90\ m$$

$B_{P.C.} = 3.50\ m$ $B_{R.C.} = 2.90\ m$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

2– Design the critical sections for moment. (Depth of R.C. Footing.)

– Actual Normal stress on R.C. Footing (U.L.)

$$F_{act.} = \frac{P_{U.L.}}{B_{R.C.} * 1.0\ m} = \frac{525}{2.90 * 1.0} = 181.03\ \ kN/m`$$

– Critical section of bending at R.C. Foorting.

$$z = \frac{B_{R.C.} - b_w}{2} = \frac{2.90 - 0.25}{2} = 1.325\ m$$

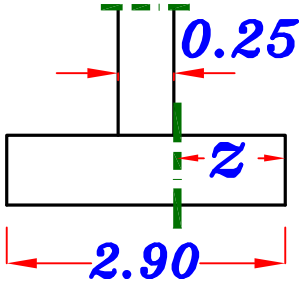

$$M_{act.} = \frac{F_{act.} * z^2}{2} * 1.0\ m$$

$$M_{act.} = \frac{181.03 * 1.325^2}{2} = 158.9\ \ kN.m./m`$$

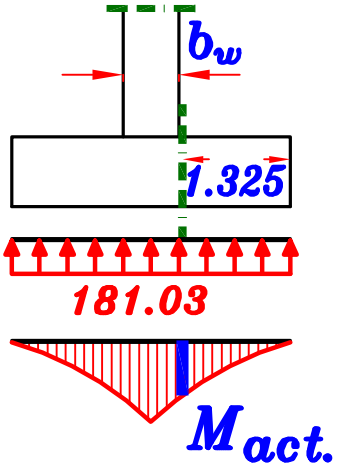

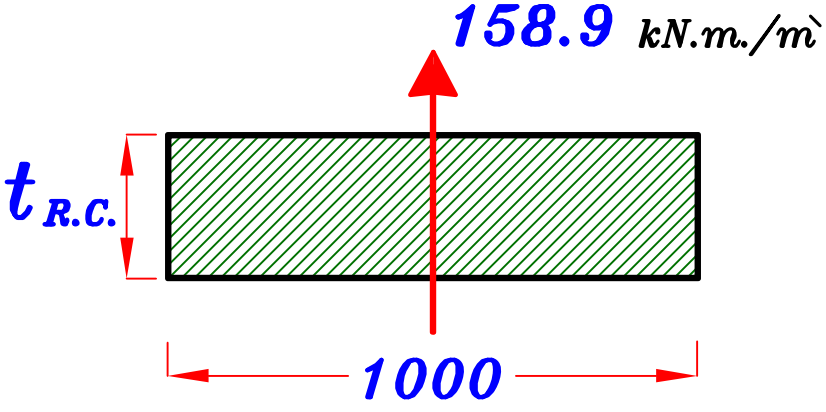

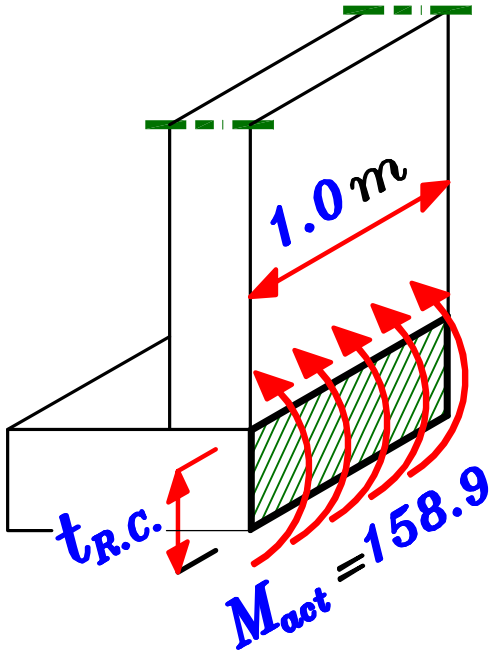

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$$\because\ d = C_1 \sqrt{\frac{M_{act.}}{F_{cu} * b}}$$

Choose $C_1 = 5.0$

$$\therefore\ d = 5.0 \sqrt{\frac{158.9 * 10^6}{25 * 1000}} = 398.6\ mm$$

$$t_{R.C.} = d + 70\ mm = 398.6 + 70 = 468.6\ mm$$

$t_{R.C.} = 500\ mm$ $\qquad$ $d = 430\ mm$

---

3 – Check Shear.

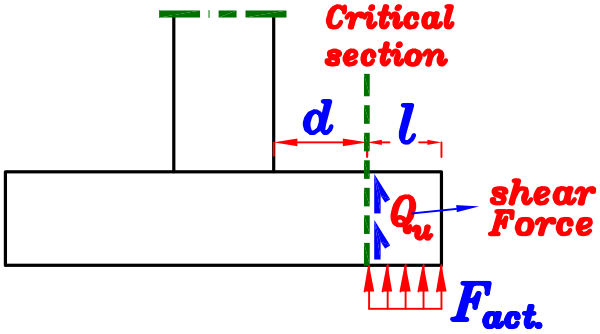

* Critical section For Shear.

$$l = z - d$$

$$l = 1.325 - 0.43 = 0.895\ m$$

* Actual shear Force. (Q_u)

$$Q_u = F_{act.} * l * 1.0\ m = 181.03 * 0.895 * 1.0 = 162.02\ kN$$

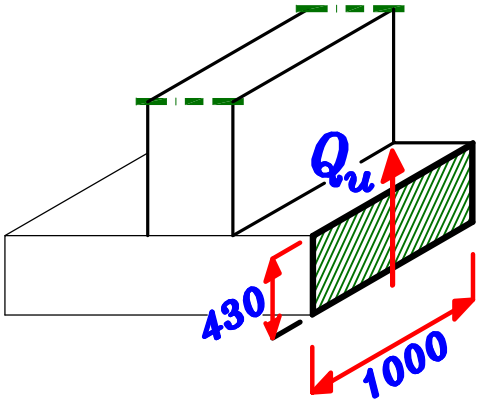

* Actual shear stress. (q_u)

$$q_u = \frac{Q_u}{b * d} = \frac{162.02 * 10^3}{1000 * 430} = 0.376\ N/mm^2$$

* Allowable shear stress. (q_{su})

$$q_{su} = 0.16 \sqrt{\frac{F_{cu}}{\delta_c}} = 0.16 \sqrt{\frac{25}{1.5}} = 0.653\ N/mm^2$$

$q_u < q_{su}$ $\longrightarrow$ Safe shear stresses

No need to increase dimensions.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

4– Reinforcement of the Footing.

From $C_1 = 5.0 \longrightarrow J = 0.826$

$$A_S = \frac{M_{act.}}{J\, F_y\, d} = \frac{158.9 * 10^6}{0.826 * 360 * 430} = 1242.7\ mm^2$$

Check $A_{s\,min}$

$$A_{s\,min} = \left\{ \begin{array}{l} 1.5\, d = 1.5 * 430 = 645 \\ 5\, \phi\, 12/m' = 565 \end{array} \right\} 645\, mm^2$$

$$\therefore\ A_S > A_{s\,min} \longrightarrow \text{o.k.}$$

$$A_S = 1242.7\ mm^2 \qquad \boxed{5\, \phi\, 18/m'}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

5- Details of Reinforcement.

scale 1:50

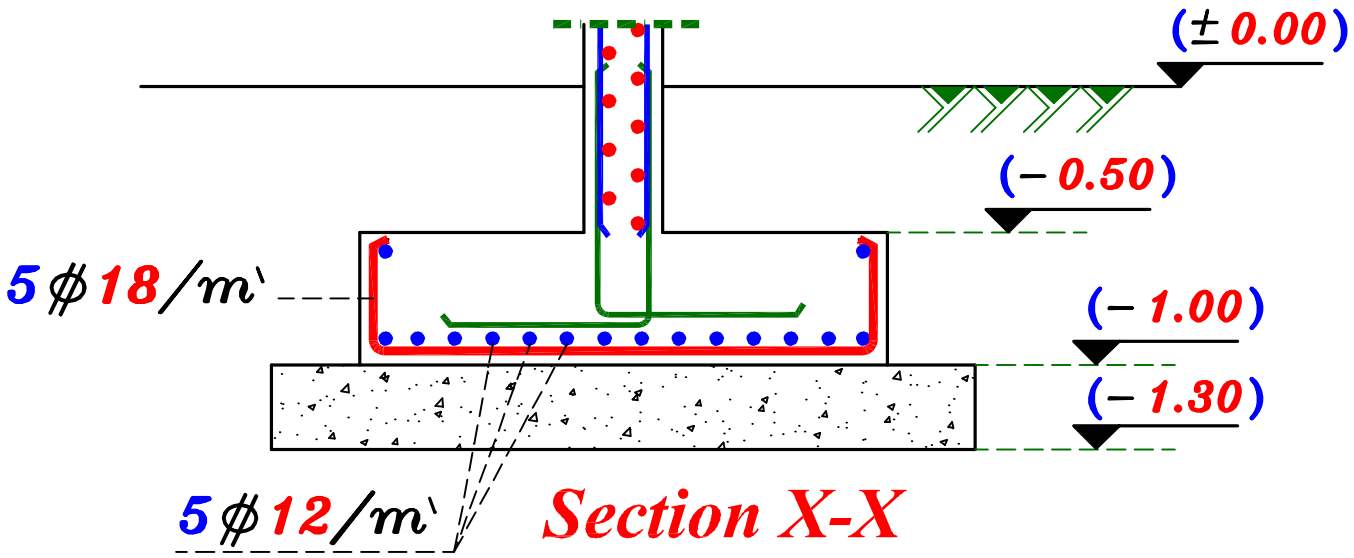

Section X-X

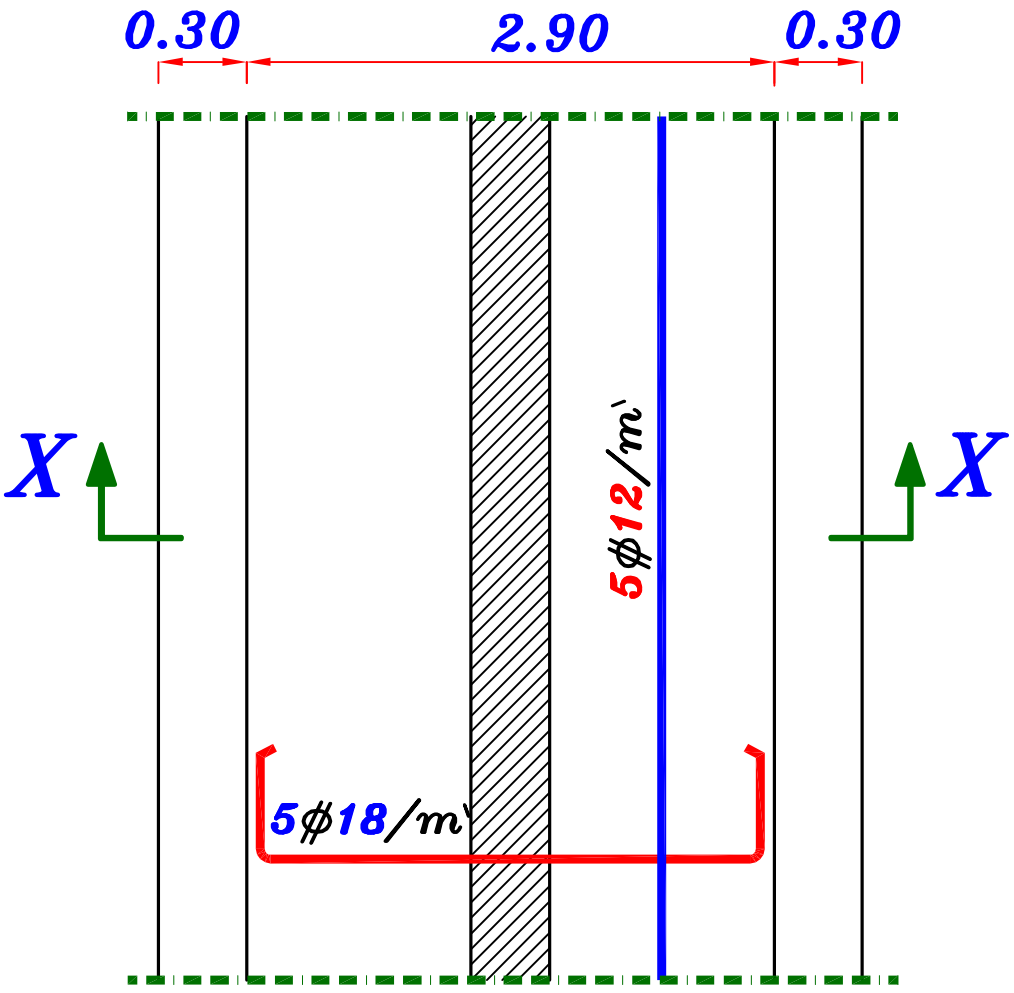

Plan

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Isolated Footings القواعد المنفصله

* هى القواعد التى يرتكز عليها عمود واحد فقط و تكون اما مربع أو مستطيل و يكون العمود مربع أو مستطيل أو دائرى .

* يمكن للقاعده المربعه أن تحمل عمود مستطيل أو مربع و بالمثل القاعده المستطيله .

2 Design of Isolated Square Footings .

تصميم القواعد المنفصله المربعه .

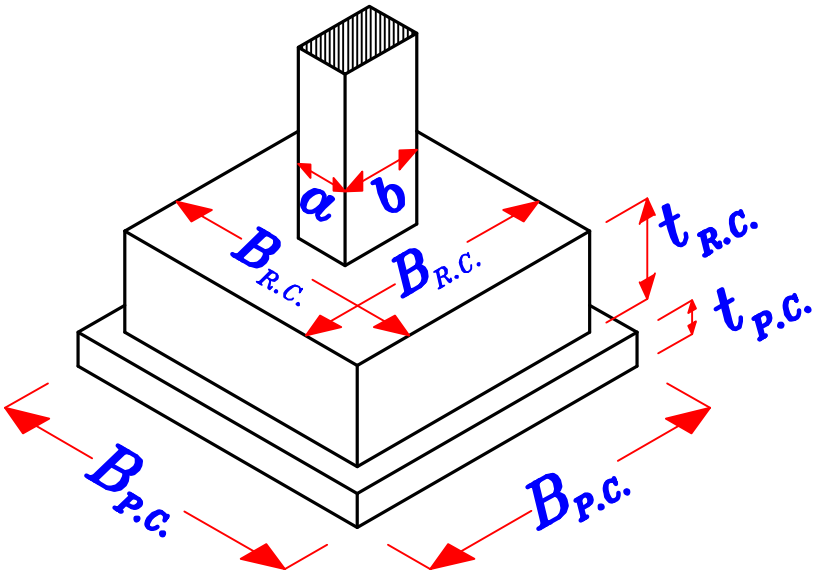

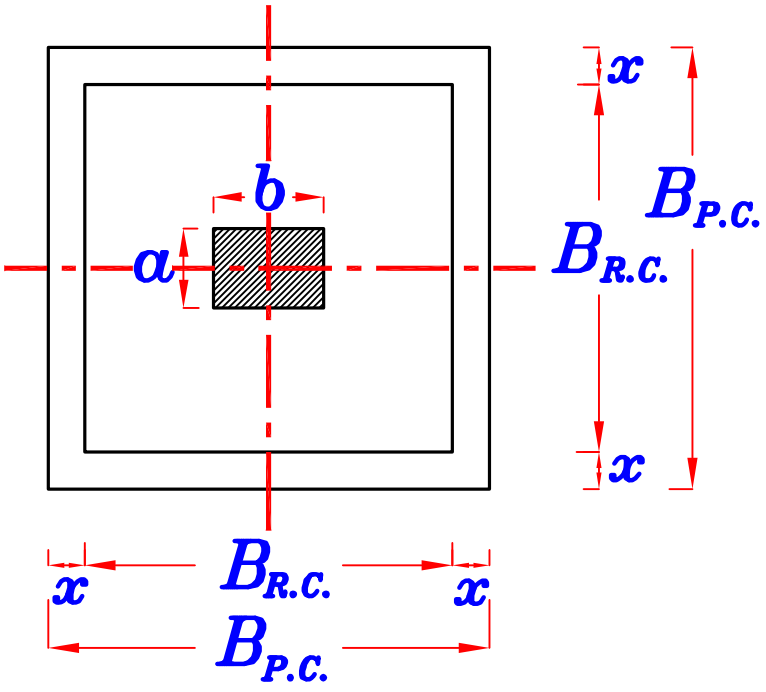

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Steps of design.

* Given :-
  * Load of column $= P_w =$ ✓✓ kN
  * Bearing capacity of soil $= q_{all} =$ ✓✓ kN/m^2
  * Dimensions of the column. $(a * b)$ مستطيل أو مربع
  * $t_{P.C.} =$ ✓✓

1– Calculate the Footing area. (Width of R.C. Footing.)

IF $t_{P.C.} \geqslant 20\ cm$

get $B_{P.C.}$ From

$$A_{P.C.} = \frac{P_w}{q_{all}} = \text{✓✓}\ m^2 = B_{P.C.} * B_{P.C.}$$

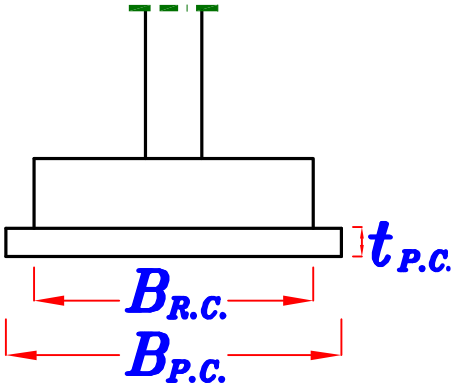

$$B_{P.C.} = \sqrt{\frac{P_w}{q_{all}}}$$

$$B_{R.C.} = B_{P.C.} - 2\ t_{P.C.}$$

IF $t_{P.C.} < 20\ cm$

get $B_{R.C.}$ From

$$A_{R.C.} = \frac{P_w}{q_{all}} = \text{✓✓}\ m^2 = B_{R.C.} * B_{R.C.}$$

$$B_{R.C.} = \sqrt{\frac{P_w}{q_{all}}}$$

$$B_{P.C.} = B_{R.C.} + 2\ t_{P.C.}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

2– Design the critical sections For moment. (Depth of R.C. Footing.)

$B_{R.C.} = \checkmark\checkmark$ m

$$P_{U.L.} = P_w * 1.5 \quad (kN)$$

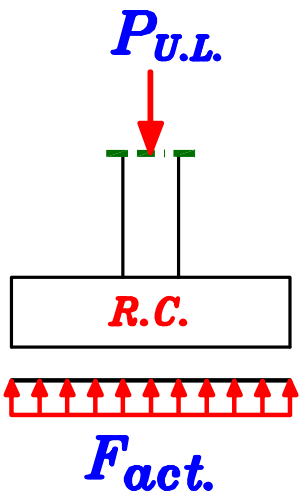

– Actual Normal stress on R.C. Footing (U.L.)

$$F_{act.} = \frac{P_{U.L.}}{B_{R.C.} * B_{R.C.}} \quad (kN/m)$$

– Critical section of bending at R.C. Footing.

ناخذ القطاعات الحرجه للعزوم على وش العمود من الجهتين .

Direction I

$$Z_I = \frac{B_{R.C.} - b}{2} \quad (m)$$

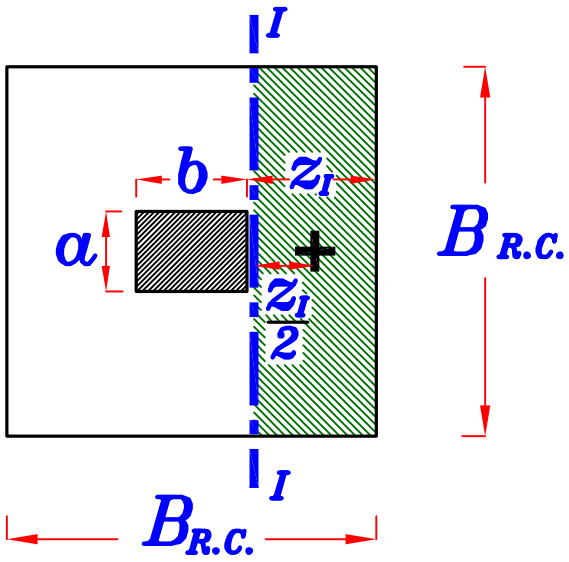

$Force = Stress * Area$

$Force = F_{act.} * Z_I * B_{R.C.}$

$Moment = Force * Distance$

$$M_{I\,act.} = (F_{act.} * Z_I * B_{R.C.}) \frac{Z_I}{2}$$

$(kN.m/B)$

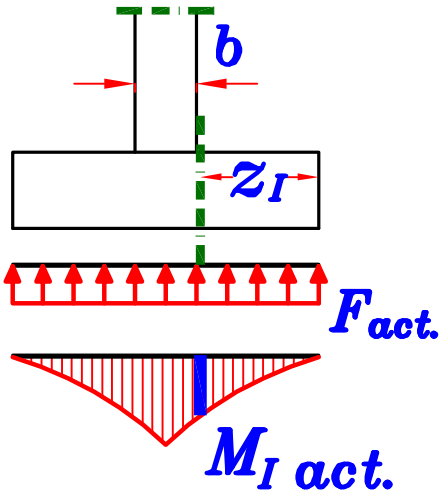

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Direction II

$$z_{II} = \frac{B_{R.C.} - a}{2} \quad (m)$$

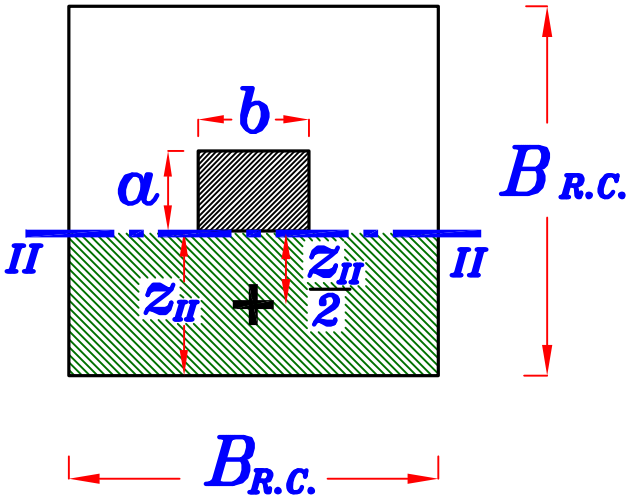

$$Force = Stress * Area$$

$$Force = F_{act.} * z_{II} * B_{R.C.}$$

$$Moment = Force * Distance$$

$$M_{II\,act.} = \left(F_{act.} * z_{II} * B_{R.C.}\right) \frac{z_{II}}{2}$$

$(kN.m/B)$

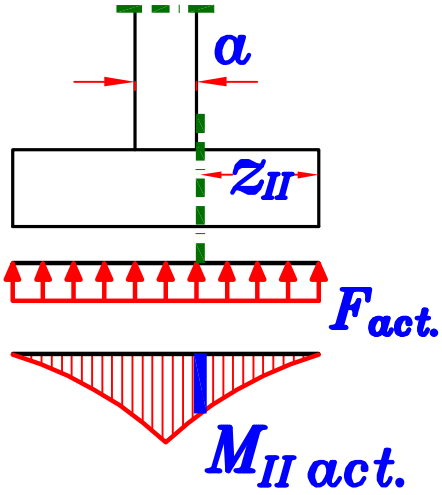

$M_{I\,act.}$ & $M_{II\,act.}$ يتم التصميم على العزم الاكبر من

ملحوظه $M_{I\,act.} < M_{II\,act.}$ لان $z_I < z_{II}$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

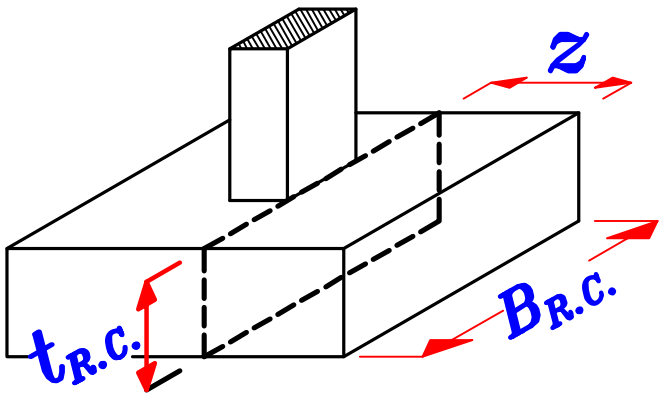

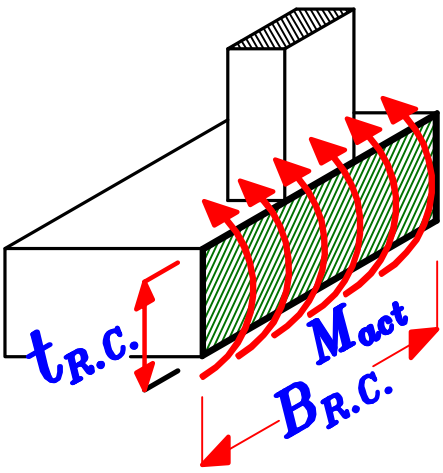

Critical section

القطاع الذى سيتم تصميمه فى القاعده

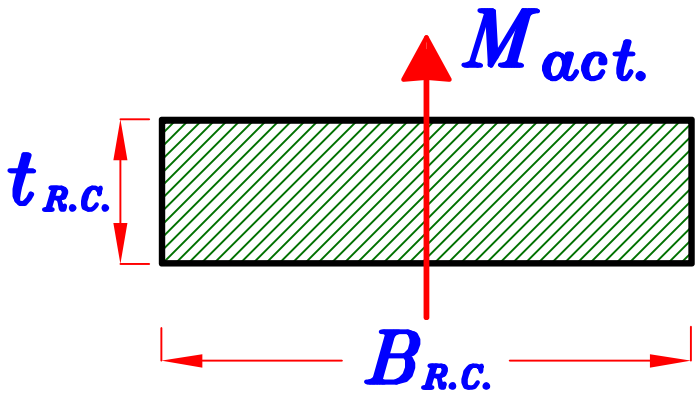

$$d_{(mm)} = C_1 \sqrt{\frac{M_{act.}\,(kN.m) * 10^6}{F_{cu}\,(N/mm^2) * B_{R.C.}\,(mm)}}$$

Choose $C_1 = (3.5 \rightarrow 5.0)$

C_1 يفضل فى القواعد أن نختار قيمه كبيره لـ
حتى تكون تخانه القاعده كبيره
لضمان أن تكون القاعده Rigid

Get $d = \checkmark\checkmark$ (mm)

Take cover = 70 mm

يفضل أن يكون الـ cover فى القواعد كبير
لحمايه الحديد من الصداء .

$$t_{R.C.} = d + cover\ (70\ mm)$$

تقرب لاقرب ٥٠ مم بالزياده

$t_{R.C.\ minimum} = 400$ mm

$d_{R.C.\ minimum} = 330$ mm

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

3 – Check Shear.

Critical section of shear at R.C. Footing.

حمل العمود يتوزع من أعلى الى أسفل داخل القاعده بميل (1:1) أى بزاويه ميل 45° أى يكون تأثيره على القاعده على عرض (a+2 d) & (b +2 d)

فتكون المساحه (b +2 d) * (a+2 d) فى منتصف القاعده عليها أقل اجهادات قص

حيث تكون قيمته تساوى $F_{act.}$ رد فعل التربه على القاعده $P_{U.L.}$ مطروحا منه حمل العمود

فيكون القطاع الحرج الذى عليه أكبر اجهادات قص على بعد d من وش العمود من أى جهه

لانه أول قطاع عليه رد فعل الارض فقط و بالتالى يكون عليه أكبر Shear stress .

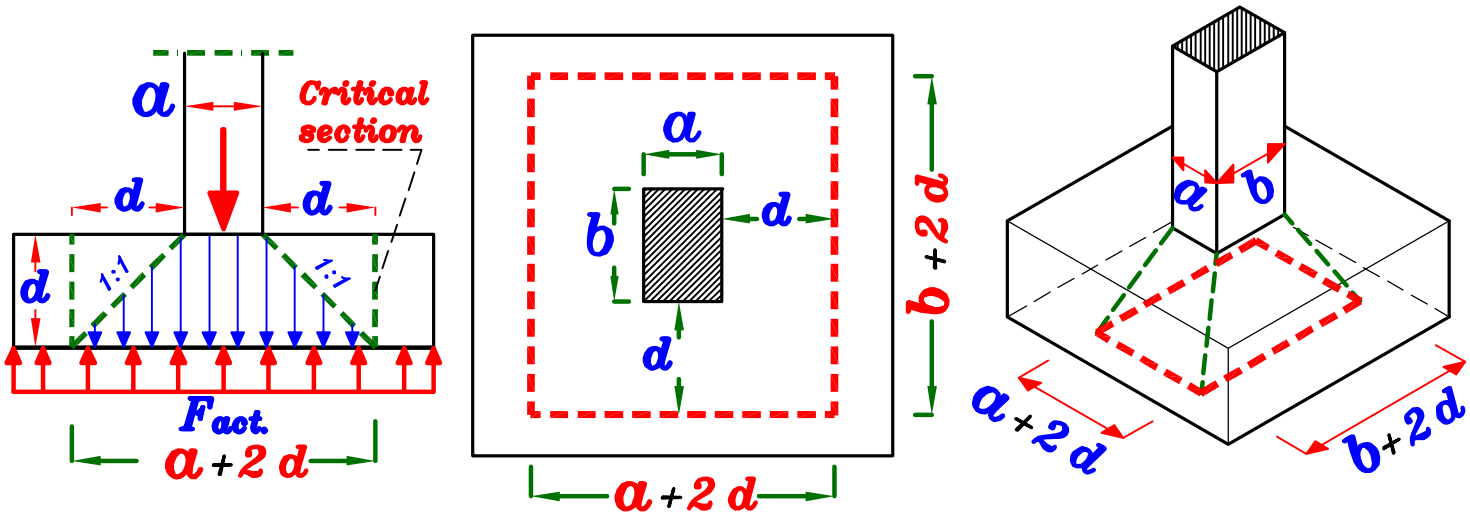

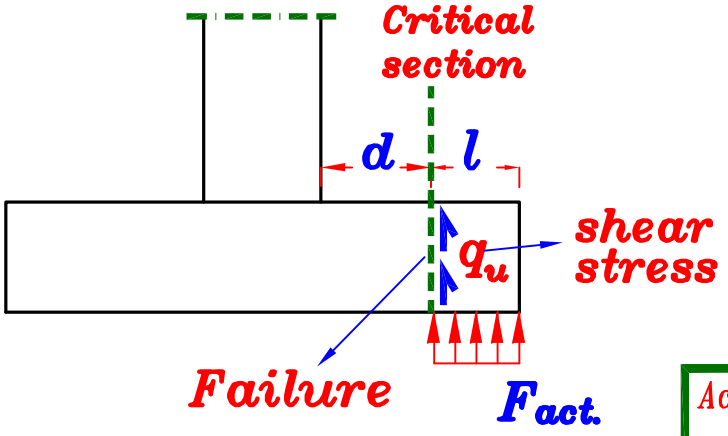

[Shear Failure]

لذلك يجب التحقق من أن اجهاد القص

على جانب السطح المتوقع للانفصال

لا يتعدى مقاومه الخرسانه فى القص

Actual Shear stress	⩽	Allowable Shear stress
q_u	⩽	q_{su}

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

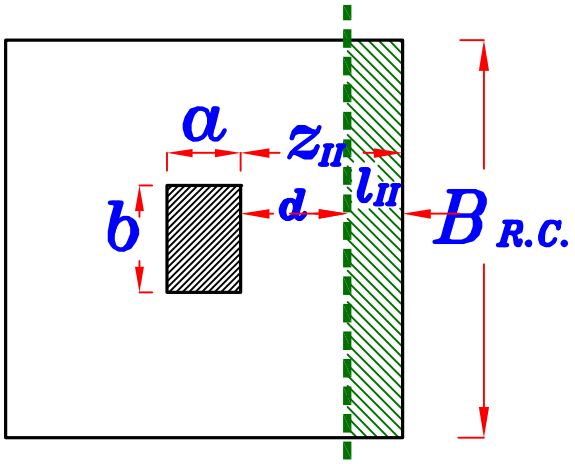

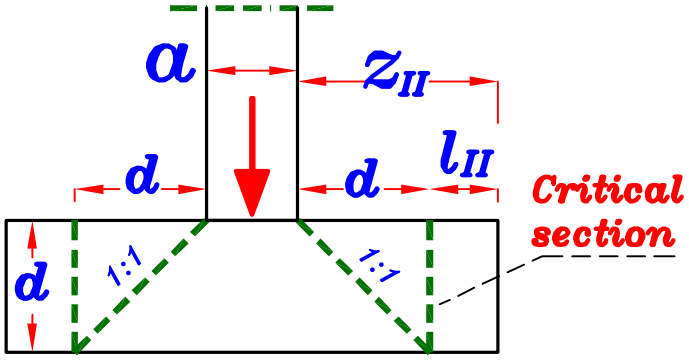

* Calculate $l_{II} = z_{II} - d$ (m)

ملحوظه $l_I < l_{II}$ لان $z_I < z_{II}$

* Calculate Actual shear Force. (Q_u)

$$Q_u = F_{act.} * l_{II} * B_{R.C.} \quad (kN)$$

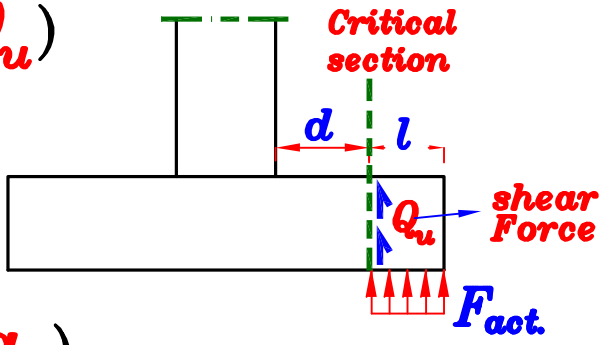

* Calculate Actual shear stress. (q_u)

$$q_u = \frac{Q_u}{b * d}$$

$$q_u = \frac{Q_{u(kN)} * 10^3}{B_{R.C.} * d_{(mm)}} \quad (N/mm^2)$$

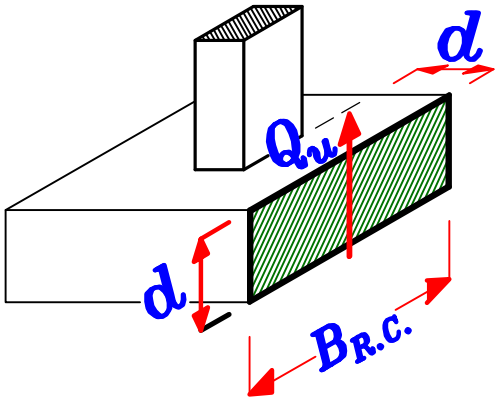

* Calculate Allowable shear stress. (q_{su})

$$q_{su} = 0.16\sqrt{\frac{F_{cu}}{\gamma_c}} \quad (N/mm^2)$$

لاحظ أنه فى القواعد نعتمد فقط على مقاومه الخرسانه فى القص لانه لا توجد كانات حيث يصعب تشكيلها بالابعاد الضخمه للقواعد .

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

* Compare between

Actual shear stress (q_u) & Allowable shear stress (q_{su})

* IF $q_u \leqslant q_{su}$ ⟶ Safe shear stresses

No need to increase dimensions.

* IF $q_u > q_{su}$ ⟶ UnSafe shear stresses

We have to increase dimensions.

IF UnSafe shear stresses increase $t_{R.C.}$ by 100 mm

then Calculate:

$$d = t_{R.C.} - 70 \ mm$$

$$l_{II} = z_{II} - d \quad (m)$$

$$Q_u = F_{act.} * l_{II} * B_{R.C.} \quad (kN)$$

$$q_u = \frac{Q_u \ (kN) * 10^3}{B_{R.C.} * d \ (mm)} \quad (N/mm^2)$$

then ReCheck:

Actual shear stress (q_u) & Allowable shear stress (q_{su})

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

4 – Check Punching Shear. القص الثاقب .

يجب التأكد من أن العمود لن يخترق القاعده .

و للتأكد من ذلك نحسب q_{pu} و هو اجهاد القص الذى سينتج عن ثقب العمود للقاعده .

و نحسب q_{pcu} و هى مقاومه الخرسانه للقص الناتج عن ثقب القاعده .

The concrete area which resist punching shear.

تحديد مساحه الخرسانه المقاومه للقص الثاقب .

القطاع الحرج فى القص الثاقب عباره عن محيط يحيط بالعمود على مسافه $\frac{d}{2}$ من وش العمود من كل جهه .

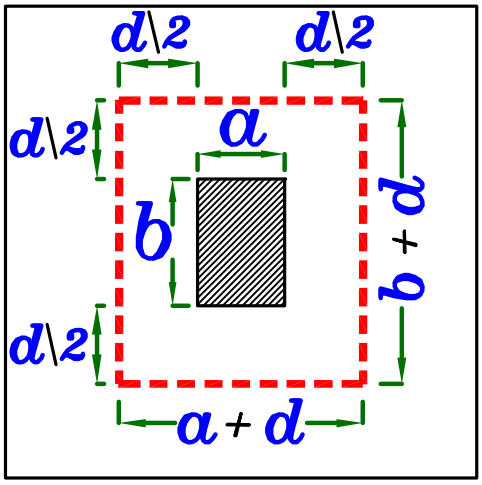

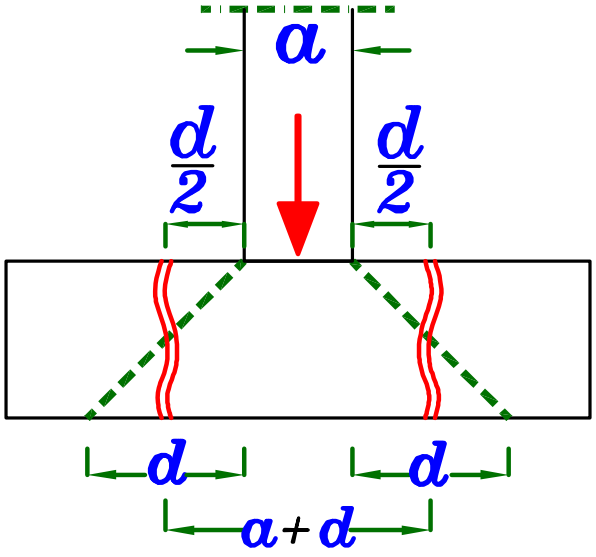

* Calculate Punching Force. (Q_p)

$$Q_p = P_{U.L.} - (F_{act.})\left[(a+d)(b+d)\right] \quad (kN)$$

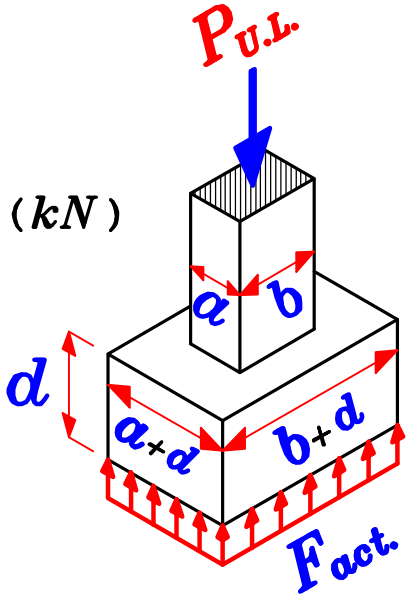

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

* Calculate Punching shear area. (A_p)

المحيط العمق

$$A_p = [2(a+d)+2(b+d)] * d \quad (mm^2)$$

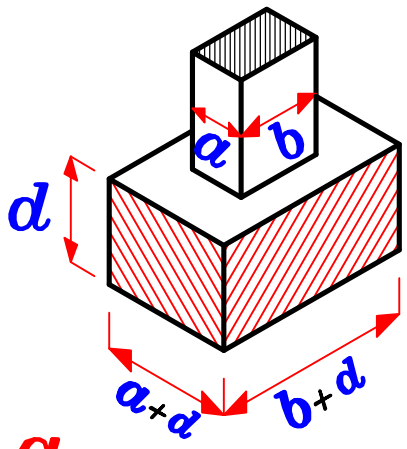

* Calculate Actual Punching shear stress. q_{pu}

$$q_{pu} = \frac{\text{Punching Force}}{\text{Punching area}}$$

$$q_{pu} = \frac{Q_p\ (kN) * 10^3}{[2(a+d)+2(b+d)] * d \quad (mm^2)} \quad (N/mm^2)$$

* Calculate allowable Punching shear stress. q_{pcu}

$$q_{pcu} = 0.316\ (0.5+\frac{a}{b})\ \sqrt{\frac{F_{cu}}{\delta_c}} \quad (N/mm^2)$$

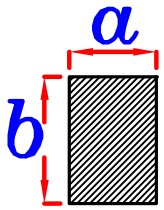

IF $(0.5+\frac{a}{b}) \leqslant 1.0$ Take $\longrightarrow$ $q_{pcu} = 0.316\ \sqrt{\frac{F_{cu}}{\delta_c}}$ (N/mm^2)

---

* Compare between

Actual punching shear stress (q_{pu}) & Allowable punching shear stress (q_{pcu})

* IF $q_{pu} \leqslant q_{pcu}$ $\longrightarrow$ Safe punching shear.
No need to increase dimensions.

* IF $q_{pu} > q_{pcu}$ $\longrightarrow$ UnSafe punching shear.
We have to increase dimensions.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

5- Reinforcement of the Footing.

From Step ② We Choose $C_1 = (3.5 \rightarrow 5.0)$

From C_1 Get $\longrightarrow$ J

Get $$A_s = \frac{M_{act.}}{J\, F_y\, d} \quad (mm^2)$$

Check $A_{s\,min}$

$$A_{s\,min}\ (mm^2/m) = \left\{ \begin{array}{l} 1.5\, d\ (mm) \\ 5\, \phi\, 12/m' \end{array} \right\} \text{الأكبر}$$

IF $A_s \geq A_{s\,min} \longrightarrow$ o.k.

IF $A_s < A_{s\,min} \longrightarrow$ Take $A_s = A_{s\,min}$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

6– Details of Reinforcement.

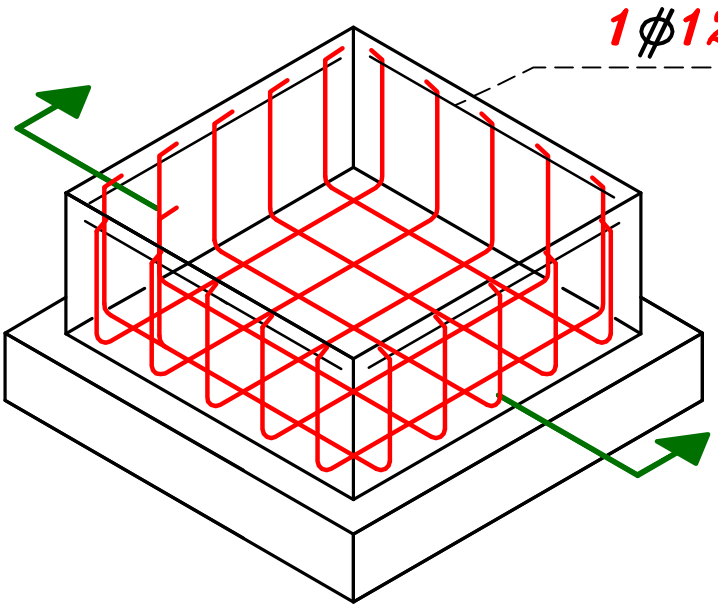

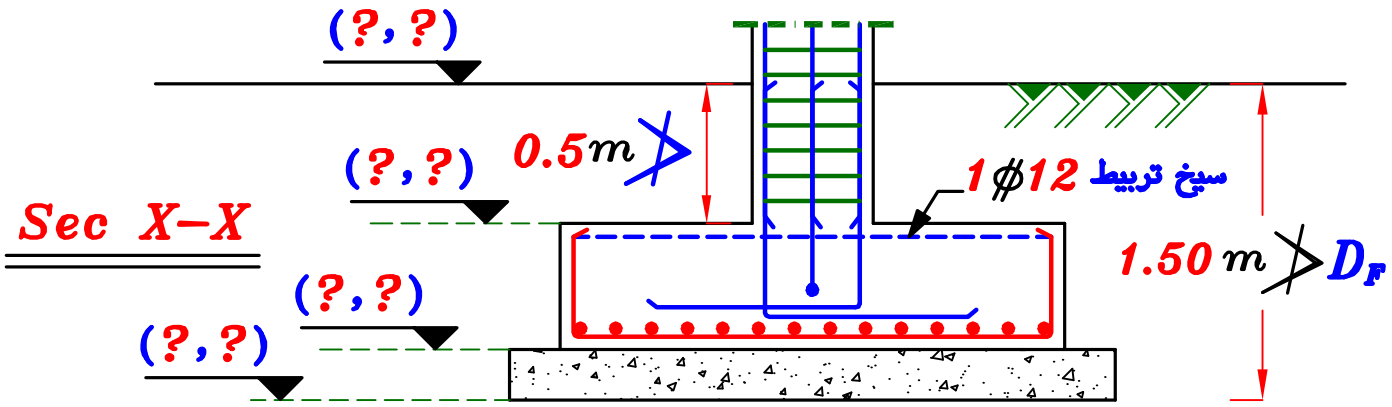

Sec X–X

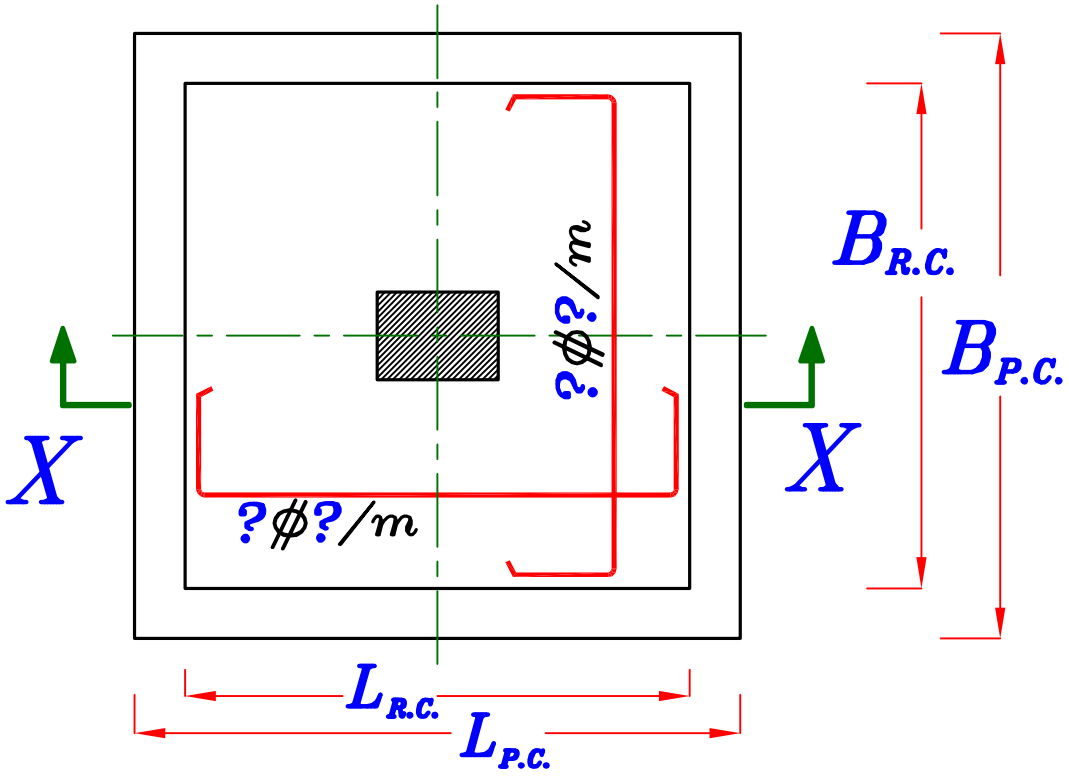

Plan

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Example.

It is required to design a square Footing to Support a R.C column of thickness $(45 * 60)$ cm. The column working load is 1450 kN , and the allowable net bearing capacity in the Footing site is 150 kN/m^2. ($F_{cu} = 25$ N/mm^2, $F_y = 360$ N/mm^2). and draw details of RFT. to scale 1:50

Solution.

Data given:

column dimensions $(450 * 600)$ mm

$P_{col.}$ (working) $= 1450$ kN $\qquad P_{col.}$ (U.L.) $= 1450 * 1.5 = 2175$ kN

Bearing capacity of the soil $= q_{all} = 150$ kN/m^2

$F_{cu} = 25$ N/mm^2 $\qquad F_y = 360$ N/mm^2

1– *Calculate the Footing area* (*Width of R.C. Footing.*)

Choose $t_{P.C.} = 40$ cm > 20 cm

$$A_{P.C.} = \frac{P_w}{q_{all}} = \frac{1450\ (kN)}{150\ (kN/m^2)} = 9.67\ m^2$$

$$A_{P.C.} = B_{P.C.} * B_{P.C.} = 9.67\ m^2$$

$$\boxed{B_{P.C.} = 3.10\ m} \qquad \boxed{B_{R.C.} = 2.30\ m}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

2– Design the critical sections For moment. (Depth of R.C. Footing.)

– Actual Normal stress on R.C. Footing (U.L.)

$$F_{act.} = \frac{P_{U.L.}}{B_{R.C.} * B_{R.C.}} = \frac{2175}{2.30 * 2.30} = 411.1 \ kN/m^2$$

$$z = \frac{B_{R.C.} - a}{2} = \frac{2.30 - 0.45}{2}$$

$$= 0.925 \ m$$

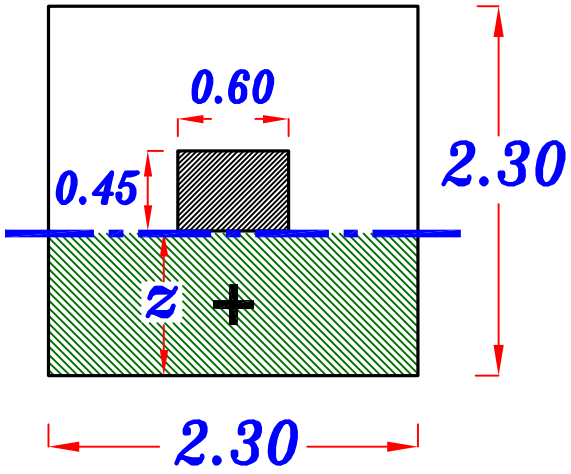

$$Force = Stress * Area$$

$$Force = F_{act.} * z * B$$

$$= 411.1 * 0.925 * 2.30$$

$$= 874.6 \ kN$$

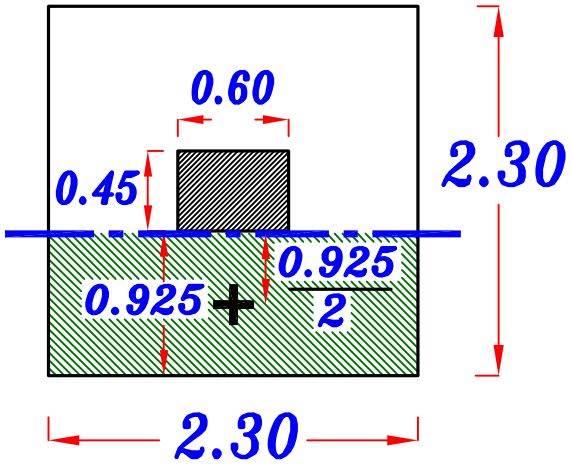

$$moment = Force * Distance$$

$$M_{act.} = (F_{act.} * z * B_{R.C.}) \frac{z}{2}$$

$$= (411.1 * 0.925 * 2.30) \frac{0.925}{2} = 404.5 \ kN.m$$

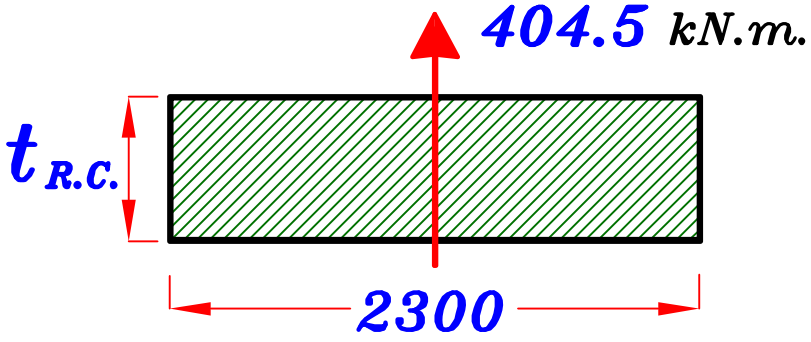

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$$\because\ d = C_1 \sqrt{\frac{M_{act.}}{F_{cu} * b}}$$

Choose $C_1 = 5.0$

$$\therefore\ d = 5.0 \sqrt{\frac{404.5 * 10^6}{25 * 2300}} = 419.36\ mm$$

$$t_{R.C.} = d + 70\ mm = 419.36 + 70 = 489.3\ mm$$

$t_{R.C.} = 500\ mm$ $\qquad$ $d = 430\ mm$

---

3 – Check Shear.

$$a + 2d = 0.45 + 2 * 0.43 = 1.31\ m$$

$$b + 2d = 0.60 + 2 * 0.43 = 1.46\ m$$

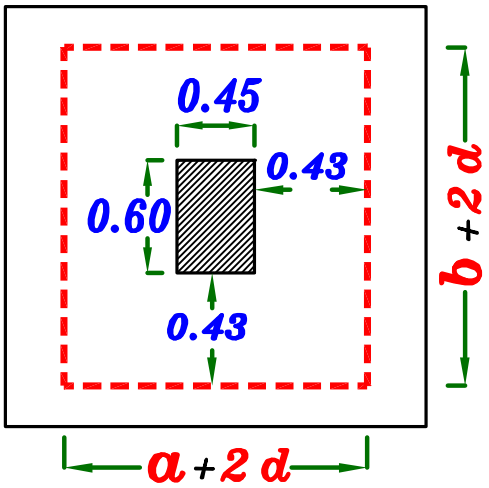

*Critical section For Shear.

$$l = z - d$$

$$l = 0.925 - 0.43 = 0.495\ m$$

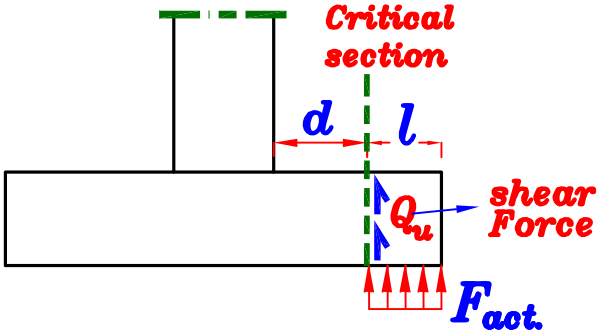

*Actual shear Force.(Q_u)

$$Q_u = F_{act.} * l * B_{R.C.} = 411.1 * 0.495 * 2.30 = 468.0\ kN$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

* Calculate Actual shear stress. (q_u)

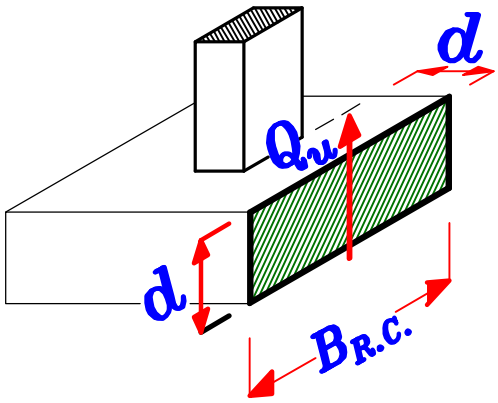

$$q_u = \frac{Q_u}{b * d} = \frac{468.0 * 10^3}{2300 * 430} = 0.473 \ N/mm^2$$

* Allowable shear stress. (q_{su})

$$q_{su} = 0.16\sqrt{\frac{F_{cu}}{\gamma_c}} = 0.16\sqrt{\frac{25}{1.5}} = 0.653 \ N/mm^2$$

$q_u < q_{su}$ ⟶ Safe shear stresses

No need to increase dimensions.

---

4 – Check Punching Shear.

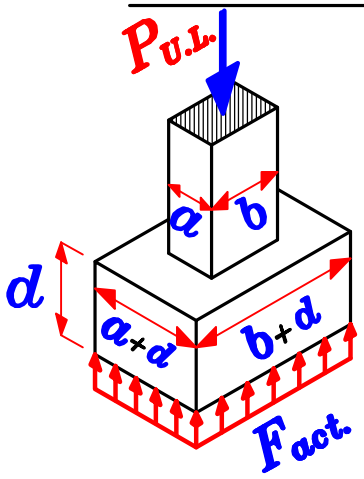

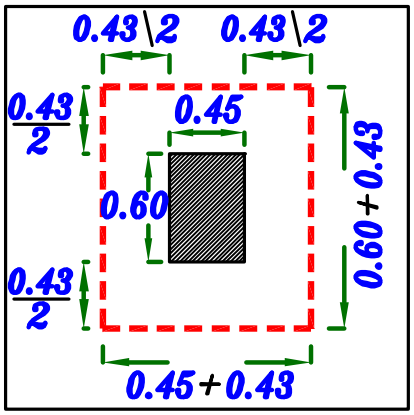

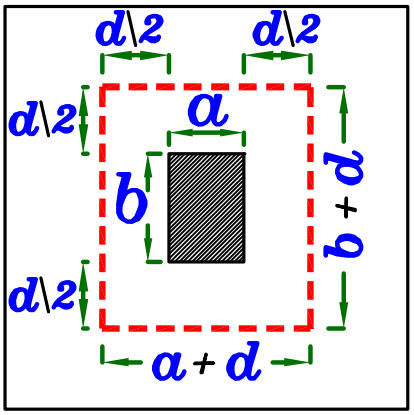

$$a + d = 0.45 + 0.43 = 0.88 \ m$$

$$b + d = 0.60 + 0.43 = 1.03 \ m$$

* Calculate Punching Force. (Q_p)

$$Q_p = P_{U.L.} - (F_{act.})\left[(a+d)(b+d)\right]$$

$$Q_p = 2175 - 411.1\left[0.88 * 1.03\right] = 1802.4 \ kN$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

* Calculate Punching shear area. (A_p)

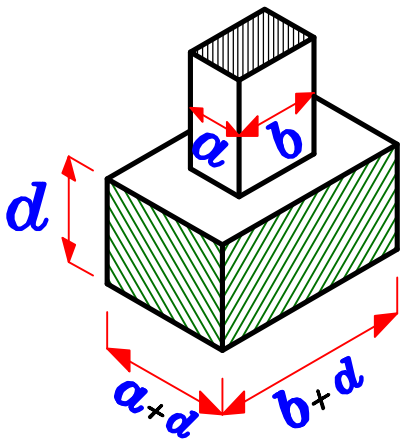

$$A_p = [2(a+d)+2(b+d)] * d$$

$$A_p = [2(450+430)+2(600+430)] * 430$$

$$A_p = 1642600 \ mm^2$$

* Calculate Actual Punching shear stress. q_{pu}

$$q_{pu} = \frac{Q_p}{[2(a+d)+2(b+d)] * d}$$

$$q_{pu} = \frac{1802.4 * 10^3}{1642600} = 1.097 \ N/mm^2$$

* Calculate allowable Punching shear stress. q_{pcu}

$$q_{pcu} = 0.316 \left(0.5+\frac{a}{b}\right) \sqrt{\frac{F_{cu}}{\delta_c}} =$$

$$q_{pcu} = 0.316 \left(0.5+\frac{0.45}{0.60}\right) \sqrt{\frac{25}{1.5}} = 1.61 \ N/mm^2$$

$q_{pu} \leqslant q_{pcu} \longrightarrow$ Safe punching shear.
No need to increase dimensions.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

5- Reinforcement of the Footing.

From $C_1 = 5.0 \longrightarrow J = 0.826$

$$A_S = \frac{M_{act.}}{J\, F_y\, d} = \frac{404.5 * 10^6}{0.826 * 360 * 430} = 3163.5\ mm^2$$

$$A_S\ (mm^2/m) = \frac{A_S}{B_{R.C.}} = \frac{3163.5}{2.30} = 1375.4\ mm^2/m`$$

Check $A_{S\,min}$

$$A_{S\,min} = \left\{ \begin{array}{l} 1.5\,d = 1.5 * 430 = 645 \\ 5\,\phi\,12/m` = 565 \end{array} \right\} 645\,mm^2$$

$$\therefore\ A_S > A_{S\,min} \longrightarrow \text{o.k.}$$

$$A_S = 1375.4\ mm^2 \qquad \boxed{6\,\phi\,18/m`}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

6- Details of Reinforcement.

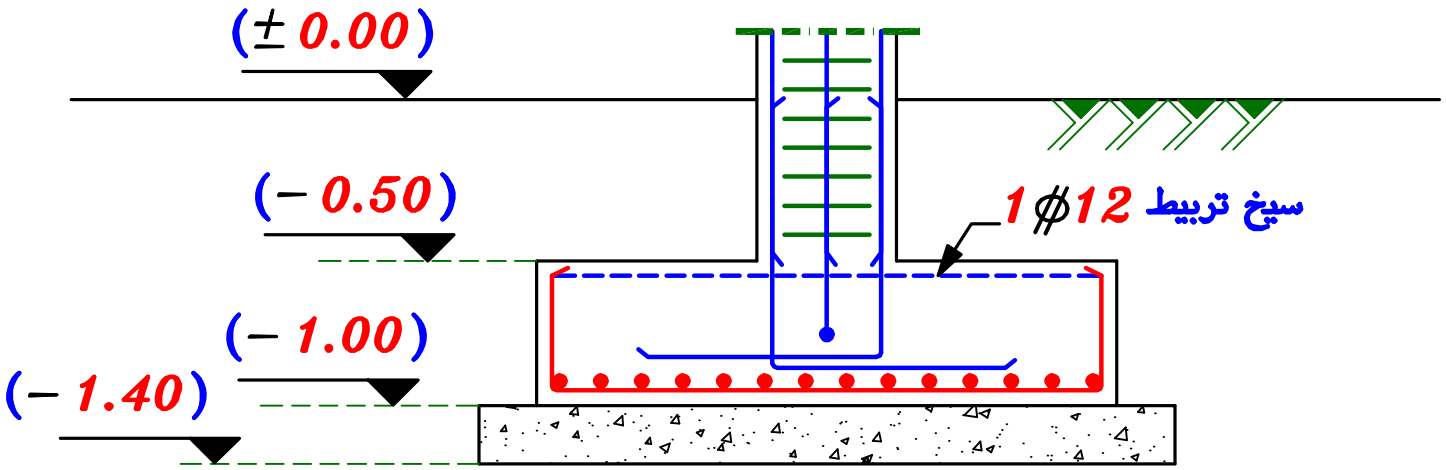

Sec X-X

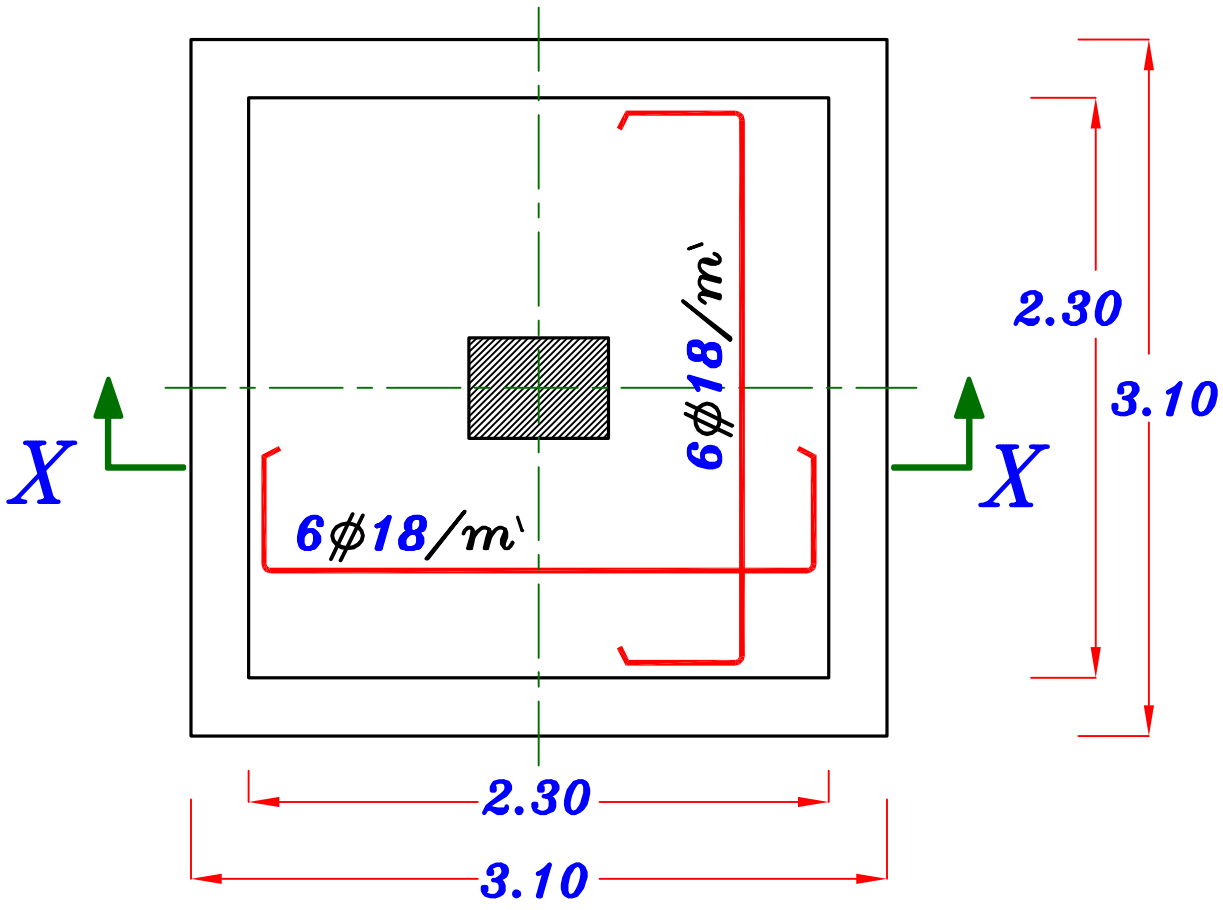

Plan

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

3 Design of Isolated Rectangular Footings .

تصميم القواعد المنفصله المستطيله .

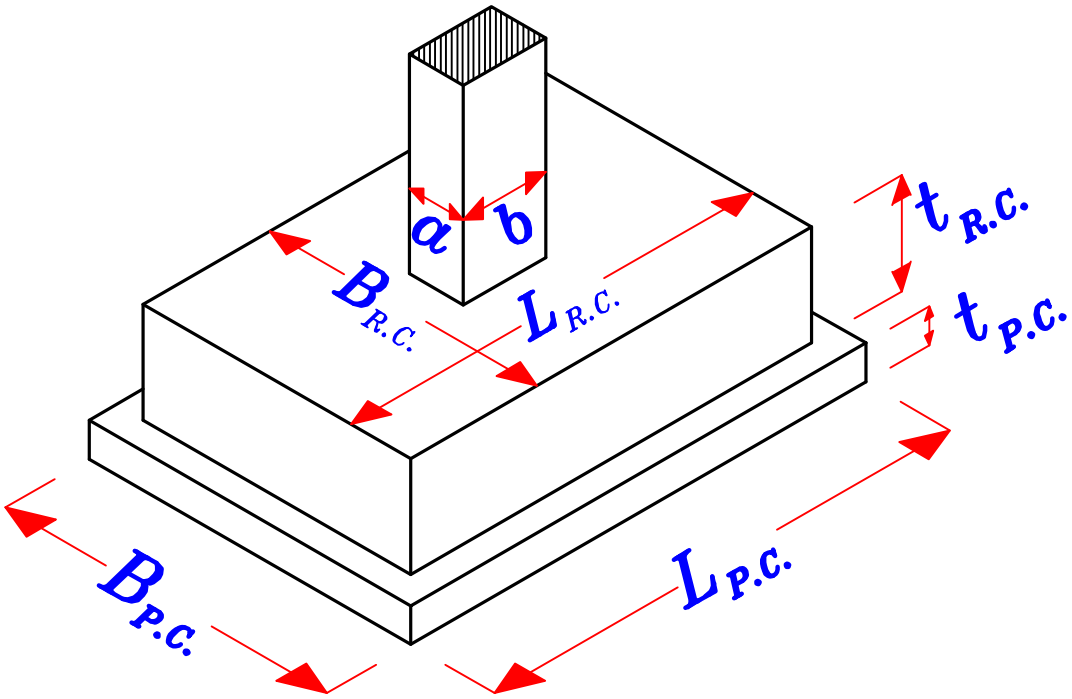

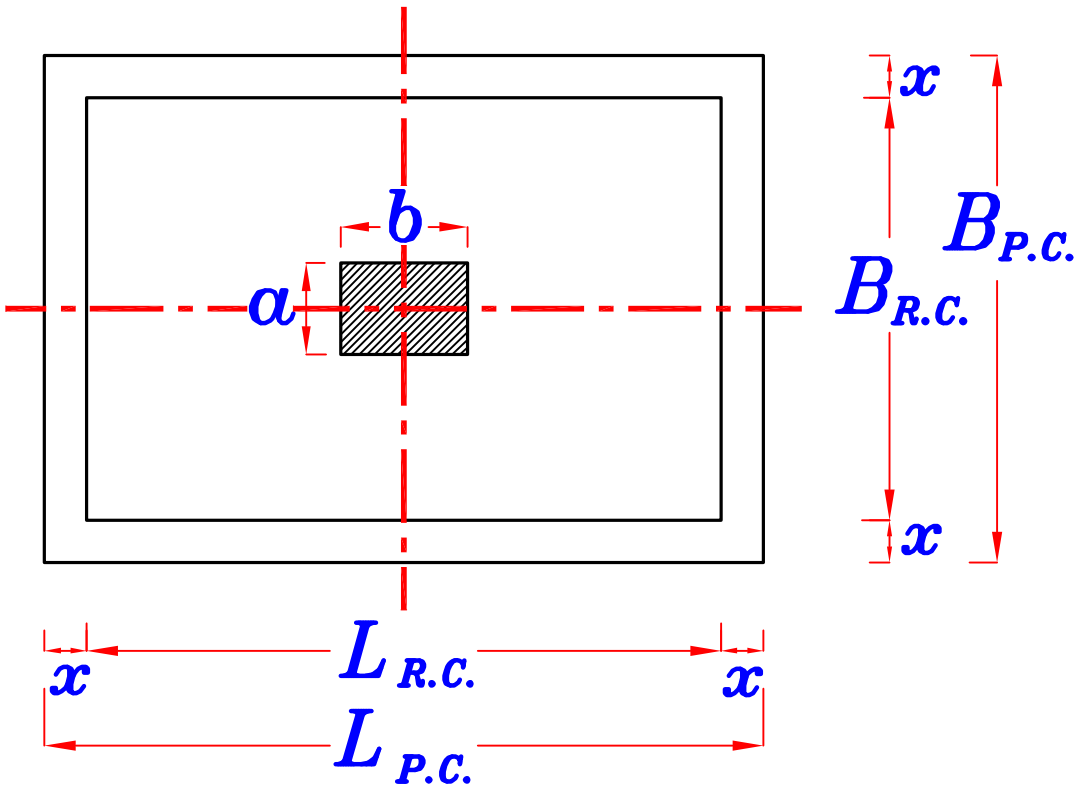

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

ملحوظه

يفضل فى القواعد المستطيله .

أن تكون المسافه من وش القاعده المسلحه لوش العمود متساويه من الجهتين .

و هذا ليس شرط.

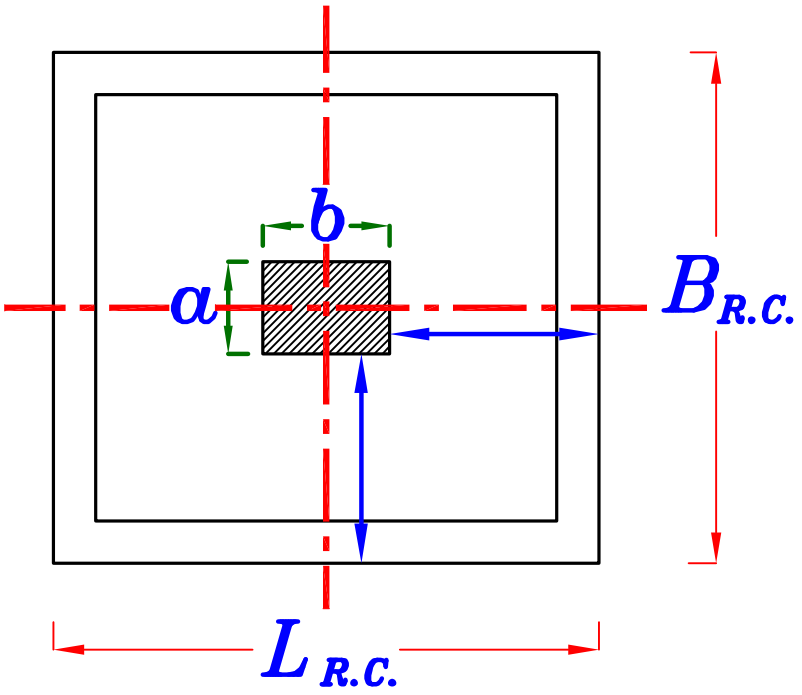

$$L_{P.C.} - B_{P.C.} = b - a$$

1- *Calculate the Footing area.* (*Width & Length of R.C. Footing.*)

IF $t_{P.C.} \geq 20\ cm$

get $B_{P.C.}$, $L_{P.C.}$ *From*

$$A_{P.C.} = \frac{P_w}{q_{all}} = \surd\surd\ m^2 = B_{P.C.} * L_{P.C.} \quad \text{------} (1)$$

$$L_{P.C.} - B_{P.C.} = b - a \quad \text{------} (2)$$

بعد حساب $B_{P.C.}$ & $L_{P.C.}$ يقربا لاقرب ٥٠ مم بالزياده

$$B_{R.C.} = B_{P.C.} - 2\ t_{P.C.}$$

$$L_{R.C.} = L_{P.C.} - 2\ t_{P.C.}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

IF $t_{P.C.} < 20\ cm$

get $B_{R.C.}$, $L_{R.C.}$ From

$$A_{R.C.} = \frac{P_w}{q_{all}} = \checkmark\checkmark\ m^2 = B_{R.C.} * L_{R.C.} \quad \text{------} (1)$$

$$L_{R.C.} - B_{R.C.} = b - a \quad \text{------} (2)$$

بعد حساب $B_{R.C.}$ & $L_{R.C.}$ يقربا لاقرب ٥٠ مم بالزياده

$$B_{P.C.} = B_{R.C.} + 2\ t_{P.C.}$$

$$L_{P.C.} = L_{R.C.} + 2\ t_{P.C.}$$

2– Design the critical sections For moment. (Depth of R.C. Footing.)

$B_{R.C.} = \checkmark\ m$, $L_{R.C.} = \checkmark\ m$

$$P_{U.L.} = P_w * 1.5 \quad (kN)$$

– Actual Normal stress on R.C. Footing (U.L.)

$$F_{act.} = \frac{P_{U.L.}}{B_{R.C.} * L_{R.C.}} \quad (kN/m^2)$$

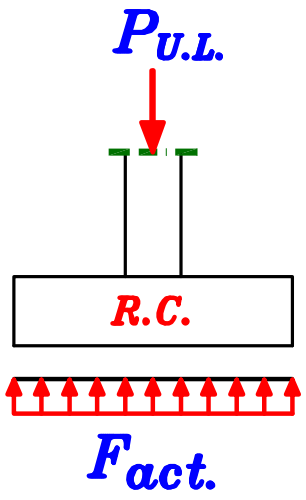

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

– Critical section of bending at R.C. Foorting.

ناخذ القطاعات الحرجه للعزوم على وش العمود من الجهتين .

Direction I

$$z_I = \frac{L_{R.C.} - b}{2} \quad (m)$$

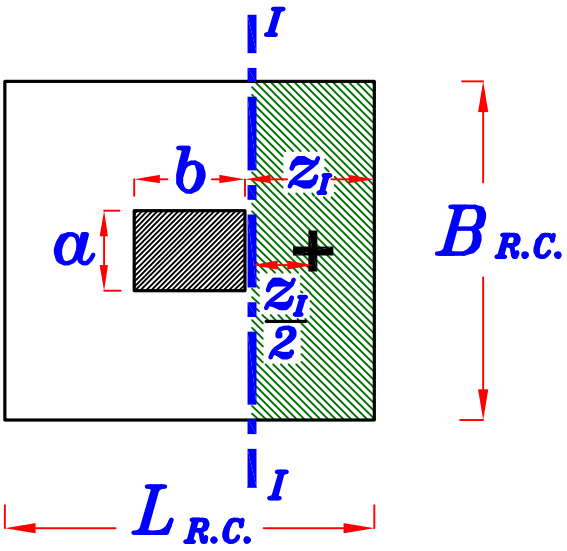

$$Force = Stress * Area$$

$$Force = F_{act.} * z_I * B_{R.C.}$$

$$Moment = Force * Distance$$

$$M_{I\,act.} = (F_{act.} * z_I * B_{R.C.}) \frac{z_I}{2}$$

$$(kN.m/B)$$

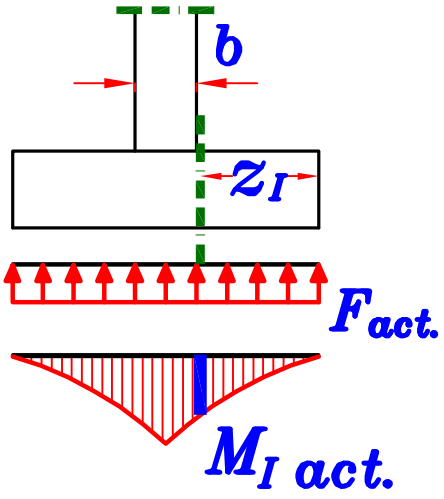

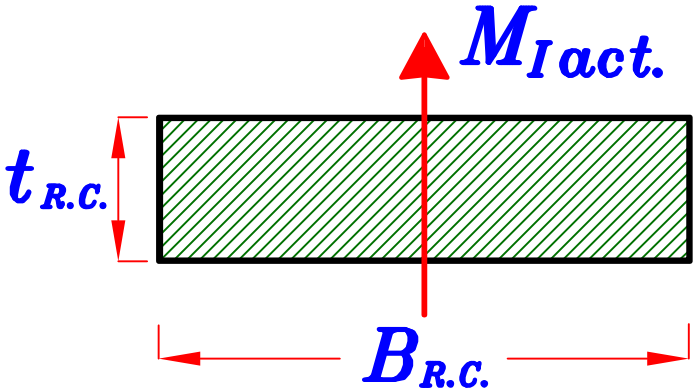

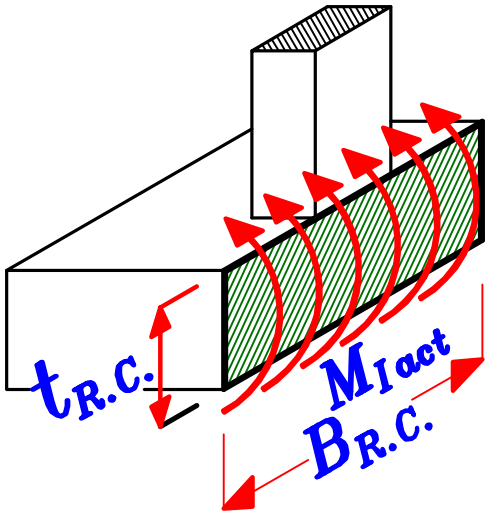

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$$d_I\,(mm) = C_1 \sqrt{\frac{M_{I\,act.}\,(kN.m) * 10^6}{F_{cu}\,(N/mm^2) * B_{R.C.}\,(mm)}}$$

Choose $C_1 = (3.5 \rightarrow 5.0)$

C_1 يفضل فى القواعد أن نختار قيمه كبيره ل
حتى تكون تخانه القاعده كبيره
لضمان أن تكون القاعده Rigid

Get $d_I = \surd\surd$ (mm)

Take cover = 70 mm

يفضل أن يكون الـ cover فى القواعد كبير
لحمايه الحديد من الصداء .

$$t_{I\,R.C.} = d_I + cover\ (70\ mm)$$

تقرب لاقرب ٥٠ مم بالزياده

Direction II

$$z_{II} = \frac{B_{R.C.} - a}{2}\ (m)$$

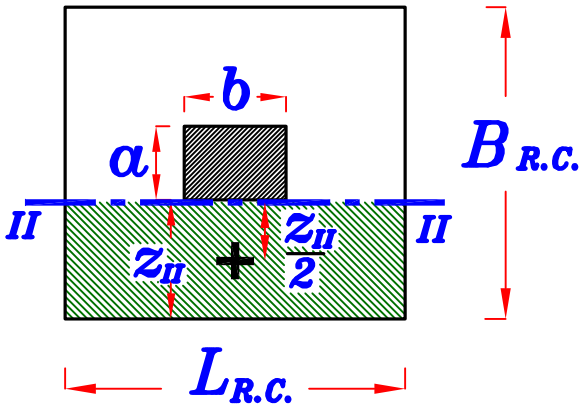

Force = Stress * Area

$$Force = F_{act.} * z_{II} * L_{R.C.}$$

Moment = Force * Distance

$$M_{II\,act.} = (F_{act.} * z_{II} * L_{R.C.})\ \frac{z_{II}}{2}\ (kN.m/L)$$

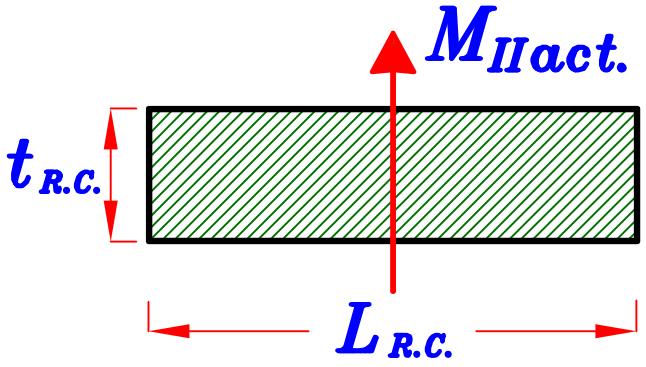

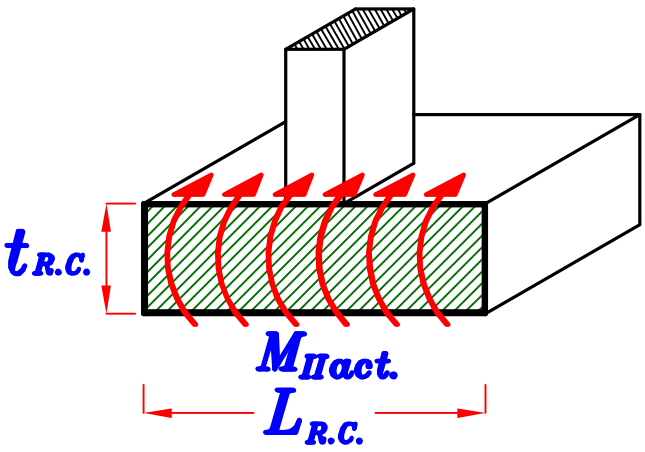

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$$d_{II}\ (mm) = C_1 \sqrt{\frac{M_{II\,act.}\ (kN.m) * 10^6}{F_{cu}\ (N/mm^2) * L_{R.C.}\ (mm)}}$$

Choose $C_1 = (3.5 \rightarrow 5.0)$

يفضل فى القواعد أن نختار قيمه كبيره لـ C_1 حتى تكون تخانه القاعده كبيره لضمان أن تكون القاعده Rigid

Get $d_{II} = \checkmark\checkmark$ (mm)

Take $cover = 70\ mm$

يفضل أن يكون الـ cover فى القواعد كبير لحمايه الحديد من الصداء .

$$t_{II_{R.C.}} = d_{II} + cover\ (70\ mm)$$

تقرب لاقرب ٥٠ مم بالزياده

نأخذ الاكبر من $t_{I_{R.C.}}$ & $t_{II_{R.C.}}$ تكون هى $t_{R.C.}$

ملحوظه

اذا حافظنا على الشرط $L_{P.C.} - B_{P.C.} = b - a$

فيكون $z_I = z_{II}$ و بالتالى سيكون $\frac{M_I}{B} = \frac{M_{II}}{L}$ و من ثم سيكون $d_I = d_{II}$

أى انه يمكن أن ندرس أتجاه واحد فقط و يكون الاخر بالمثل .

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

3 – Check Shear.

Critical section of shear at R.C. Footing.

حمل العمود يتوزع من أعلى الى أسفل داخل القاعده بميل (1:1) أى بزاويه ميل 45°

أى يكون تأثيره على القاعده على عرض $(a+2d)$ & $(b+2d)$

فتكون المساحه $(b+2d)$ * $(a+2d)$ فى منتصف القاعده عليها أقل اجهادات قص

حيث تكون قيمته تساوى $F_{act.}$ رد فعل التربه على القاعده $P_{U.L.}$ مطروحا منه حمل العمود

فيكون القطاع الحرج الذى عليه أكبر اجهادات قص على بعد d من وش العمود من أى جهه

لانه أول قطاع عليه رد فعل الارض فقط و بالتالى يكون عليه أكبر Shear stress .

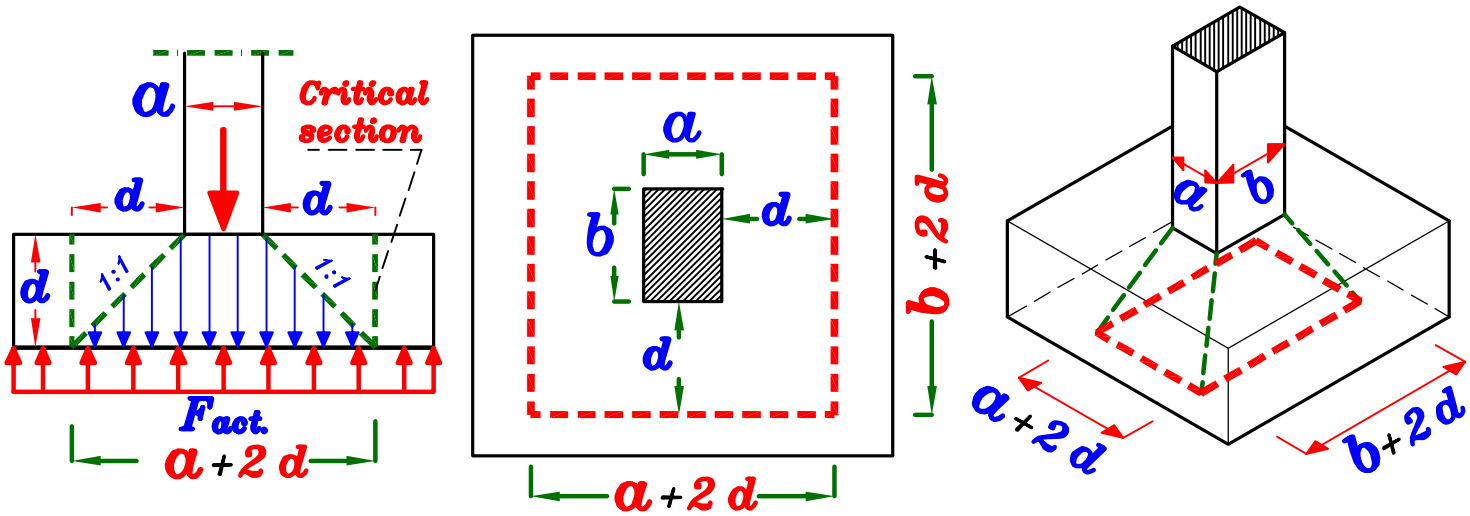

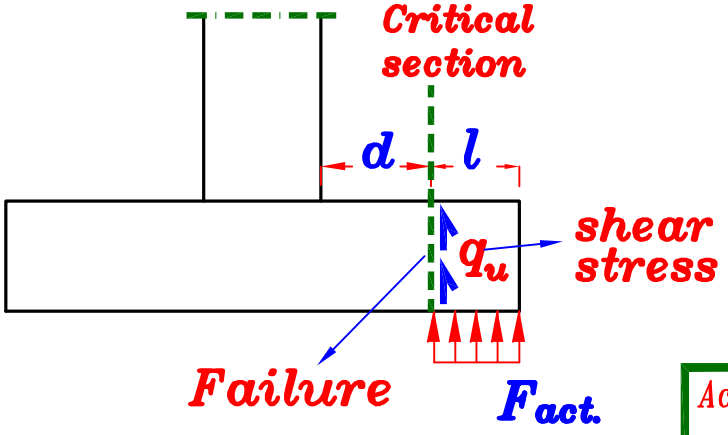

[Shear Failure]

لذلك يجب التحقق من أن اجهاد القص

على جانب السطح المتوقع للانفصال

لا يتعدى مقاومه الخرسانه فى القص

Actual Shear stress	⩽	Allowable Shear stress
q_u	⩽	q_{su}

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

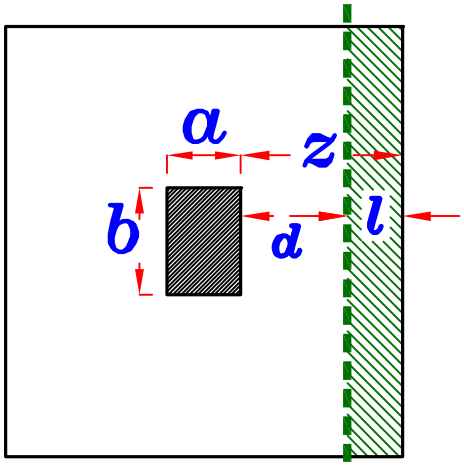

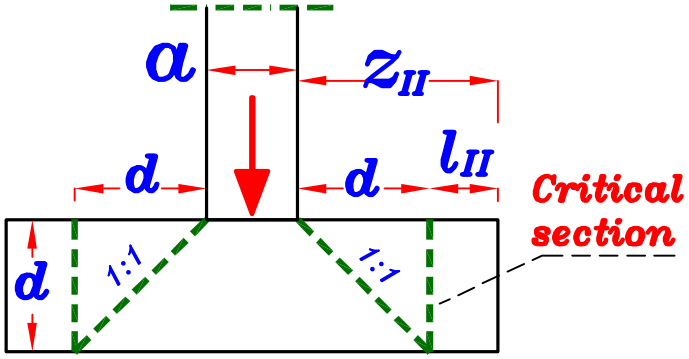

* Calculate $l = z - d$ (m)

z_I , z_{II} من z الاكبر

* Calculate Actual shear Force. (Q_u)

نحسب ل ١,٠ م طولى من القاعده

$$Q_u = F_{act.} * l * 1.0\ m \quad (kN)$$

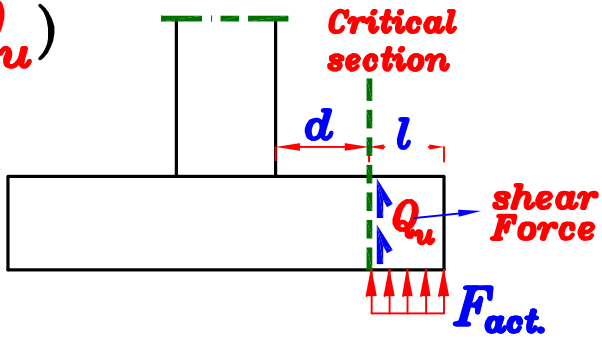

* Calculate Actual shear stress. (q_u)

$$q_u = \frac{Q_u}{b * d}$$

$$q_u = \frac{Q_u\,(kN) * 10^3}{1000\,(mm) * d\,(mm)} \quad (N/mm^2)$$

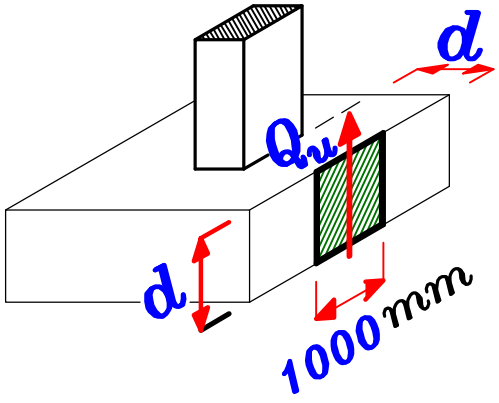

* Calculate Allowable shear stress. (q_{su})

$$q_{su} = 0.16\sqrt{\frac{F_{cu}}{\delta_c}} \quad (N/mm^2)$$

لاحظ أنه فى القواعد نعتمد فقط على مقاومه الخرسانه فى القص لانه لا توجد كانات حيث يصعب تشكيلها بالابعاد الضخمه للقواعد .

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

* Compare between

Actual shear stress (q_u) & Allowable shear stress (q_{su})

* IF $q_u \leqslant q_{su}$ ⟶ Safe shear stresses

No need to increase dimensions.

* IF $q_u > q_{su}$ ⟶ UnSafe shear stresses

We have to increase dimensions.

IF UnSafe shear stresses increase $t_{R.C.}$ by 100 mm

then Calculate:

$$d = t_{R.C.} - 70 \ mm$$

$$l = z - d \quad (m)$$

$$Q_u = F_{act.} * l * 1.0 \ m \quad (kN)$$

$$q_u = \frac{Q_u \ (kN) * 10^3}{1000 \ (mm) * d \ (mm)} \quad (N/mm^2)$$

then ReCheck:

Actual shear stress (q_u) & Allowable shear stress (q_{su})

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

4 – Check Punching Shear. القص الثاقب .

يجب التأكد من أن العمود لن يخترق القاعده .

و للتأكد من ذلك نحسب q_{pu} و هو اجهاد القص الذى سينتج عن ثقب العمود للقاعده .

و نحسب q_{pcu} و هى مقاومه الخرسانه للقص الناتج عن ثقب القاعده .

The concrete area which resist punching shear.

تحديد مساحه الخرسانه المقاومه للقص الثاقب .

القطاع الحرج فى القص الثاقب عباره عن محيط يحيط بالعمود على مسافه $\frac{d}{2}$ من وش العمود من كل جهه .

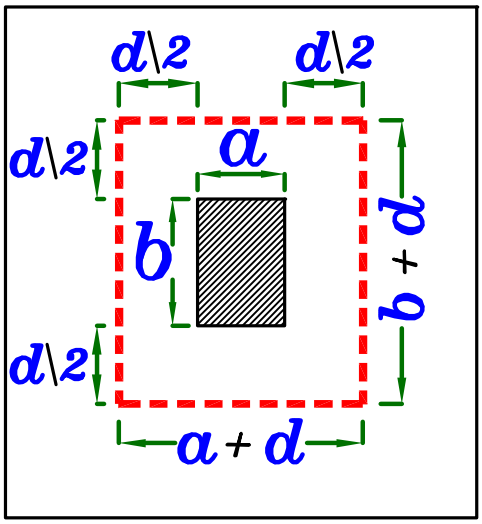

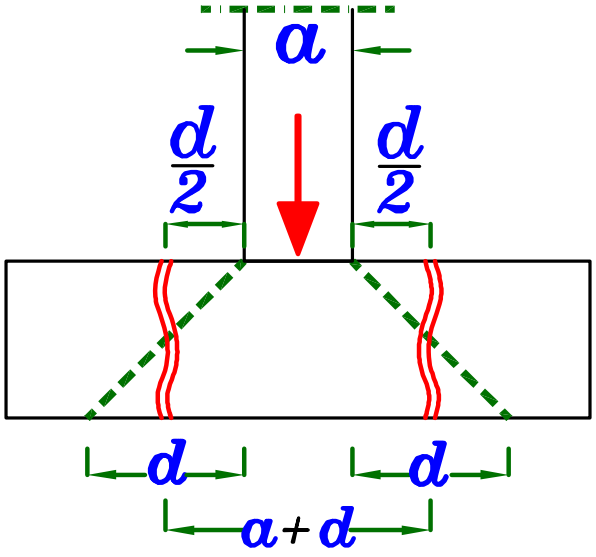

* Calculate Punching Force. (Q_p)

$$Q_p = P_{U.L.} - (F_{act.})\,[(a+d)(b+d)] \quad (kN)$$

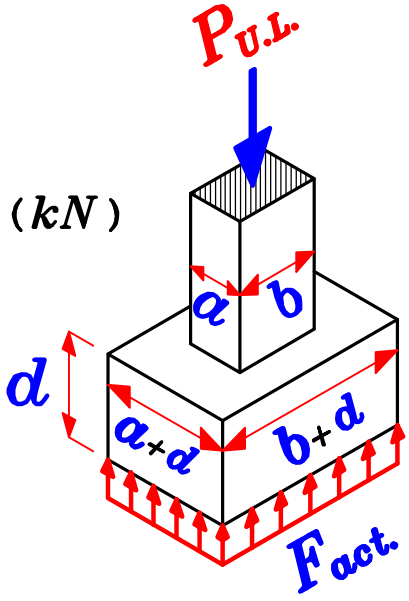

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

* Calculate Punching shear area. (A_p)

المحيط العمق

$$A_p = [2(a+d)+2(b+d)] * d \quad (mm^2)$$

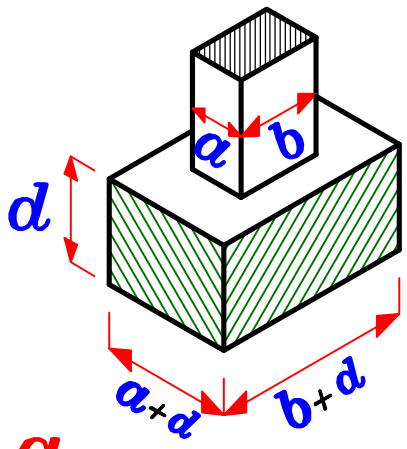

* Calculate Actual Punching shear stress. q_{pu}

$$q_{pu} = \frac{\text{Punching Force}}{\text{Punching area}}$$

$$q_{pu} = \frac{Q_p\ (kN) * 10^3}{[2(a+d)+2(b+d)] * d \quad (mm^2)} \quad (N/mm^2)$$

* Calculate allowable Punching shear stress. q_{pcu}

$$q_{pcu} = 0.316\ (0.5+\frac{a}{b})\ \sqrt{\frac{F_{cu}}{\delta_c}} \quad (N/mm^2)$$

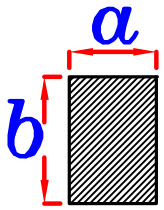

IF $(0.5+\frac{a}{b}) \leqslant 1.0$ Take $\longrightarrow$ $q_{pcu} = 0.316\ \sqrt{\frac{F_{cu}}{\delta_c}}$ (N/mm^2)

---

* Compare between

Actual punching shear stress (q_{pu}) & Allowable punching shear stress (q_{pcu})

* IF $q_{pu} \leqslant q_{pcu}$ $\longrightarrow$ Safe punching shear.
No need to increase dimensions.

* IF $q_{pu} > q_{pcu}$ $\longrightarrow$ UnSafe punching shear.
We have to increase dimensions.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

5- Reinforcement of the Footing.

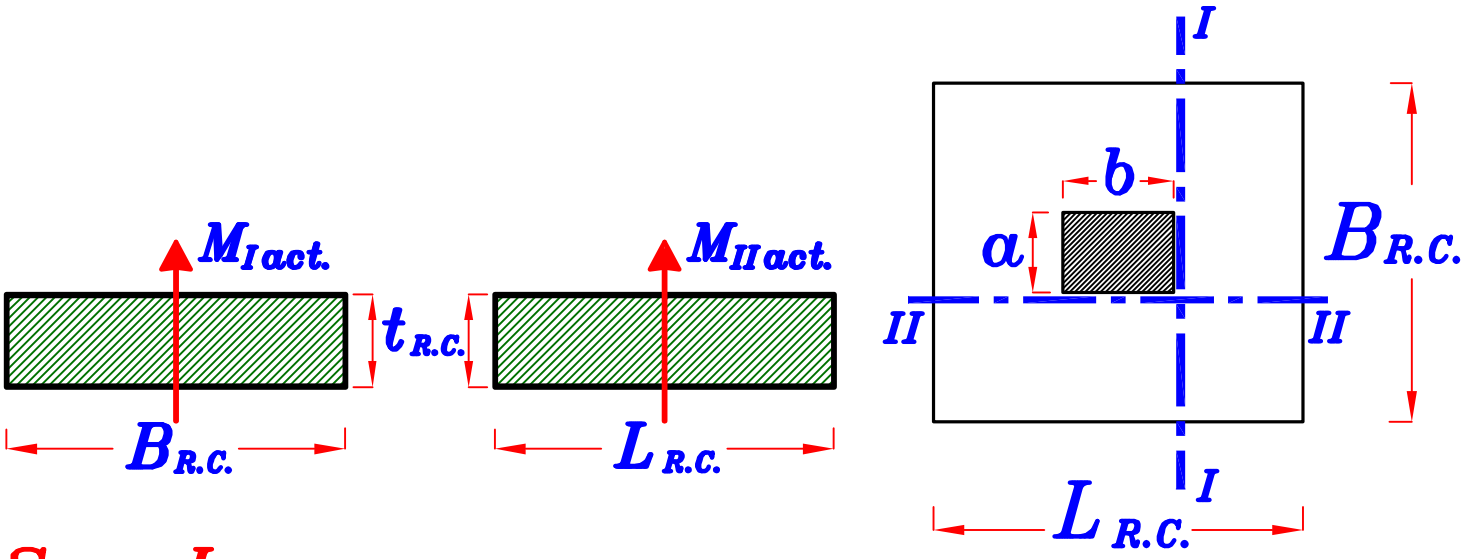

Sec. I

From Step ② We Choose $C_1 = (3.5 \rightarrow 5.0)$

From C_1 Get $\rightarrow$ J

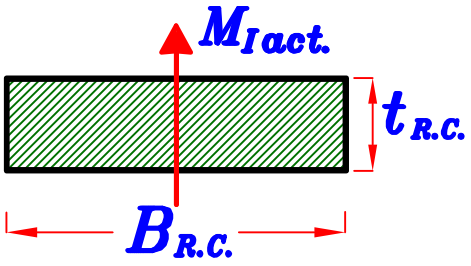

Get $$A_{sI} = \frac{M_{I\,act.}}{J\,F_y\,d} \quad (mm^2)$$

Check $A_{s\,min}$

$$A_{s\,min}\ (mm^2/m) = \left\{ \begin{array}{l} 1.5\,d\ (mm) \\ 5\,\phi\,12/m' \end{array} \right\} \text{الأكبر}$$

IF $A_{sI} \geqslant A_{s\,min} \longrightarrow$ o.k.

IF $A_{sI} < A_{s\,min} \longrightarrow$ Take $A_s = A_{s\,min}$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Sec. II

From Step ② We Choose $C_1 = (3.5 \rightarrow 5.0)$

From C_1 Get $\longrightarrow$ J

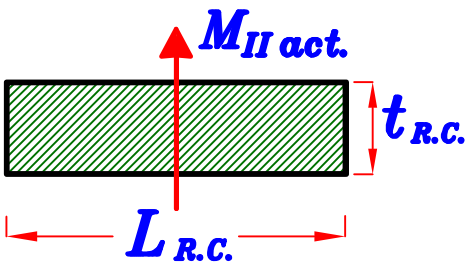

Get $$A_{s\,II} = \frac{M_{II\,act.}}{J\,F_y\,d} \quad (mm^2)$$

Check $A_{s\,min}$

$$A_{s\,min}\ (mm^2/m) = \left\{ \begin{array}{l} 1.5\,d\ (mm) \\ 5\,\phi\,12/m' \end{array} \right\} \text{الأكبر}$$

IF $A_{s\,II} \geqslant A_{s\,min} \longrightarrow$ o.k.

IF $A_{s\,II} < A_{s\,min} \longrightarrow$ Take $A_s = A_{s\,min}$

ملحوظه

فى حاله تحقيق الشرط $L - B = b - a$

سيكون $\frac{M_{I\,act.}}{B} = \frac{M_{II\,act.}}{L}$ و بالتالى من الممكن حساب A_s فى اتجاه واحد فقط و يكون الاتجاه الاخر نفس القيمه $A_{s\,I} = A_{s\,II}$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

6- Details of Reinforcement.

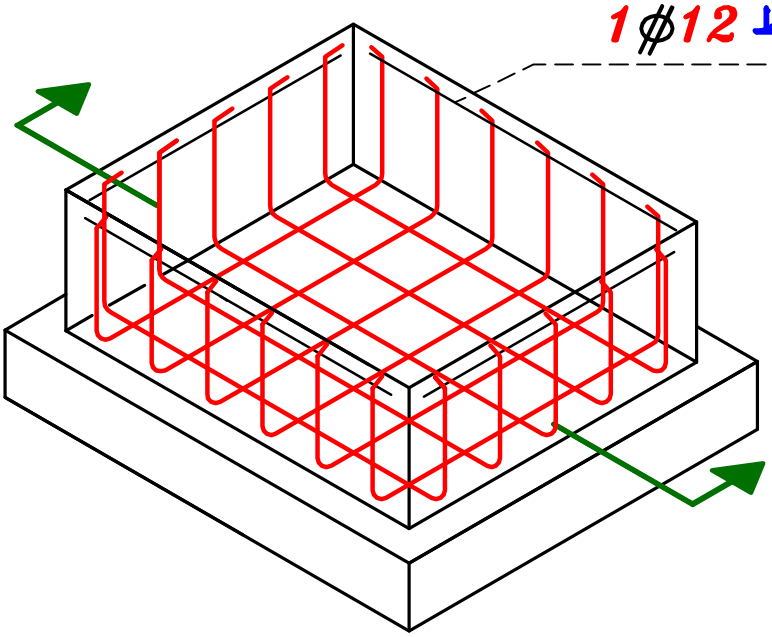

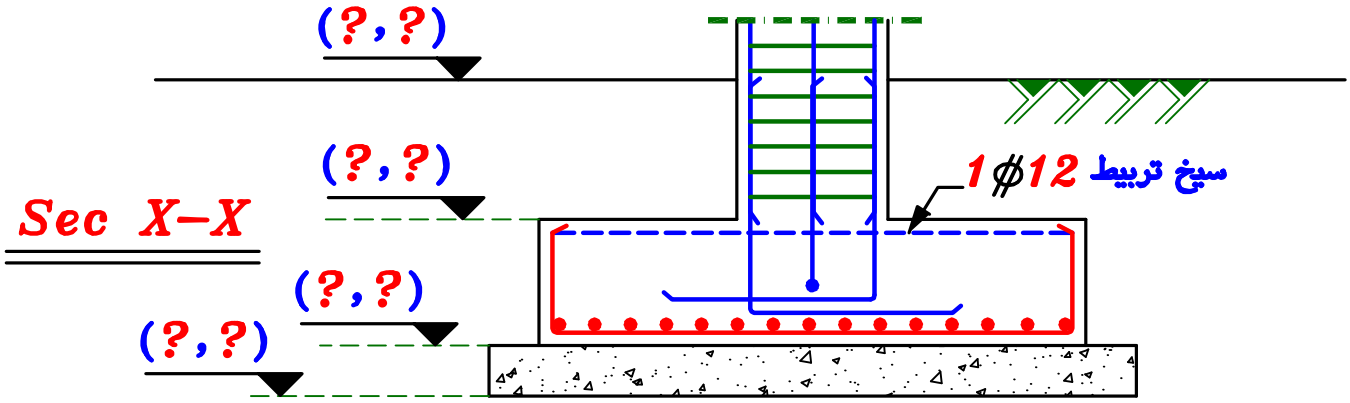

Sec X-X

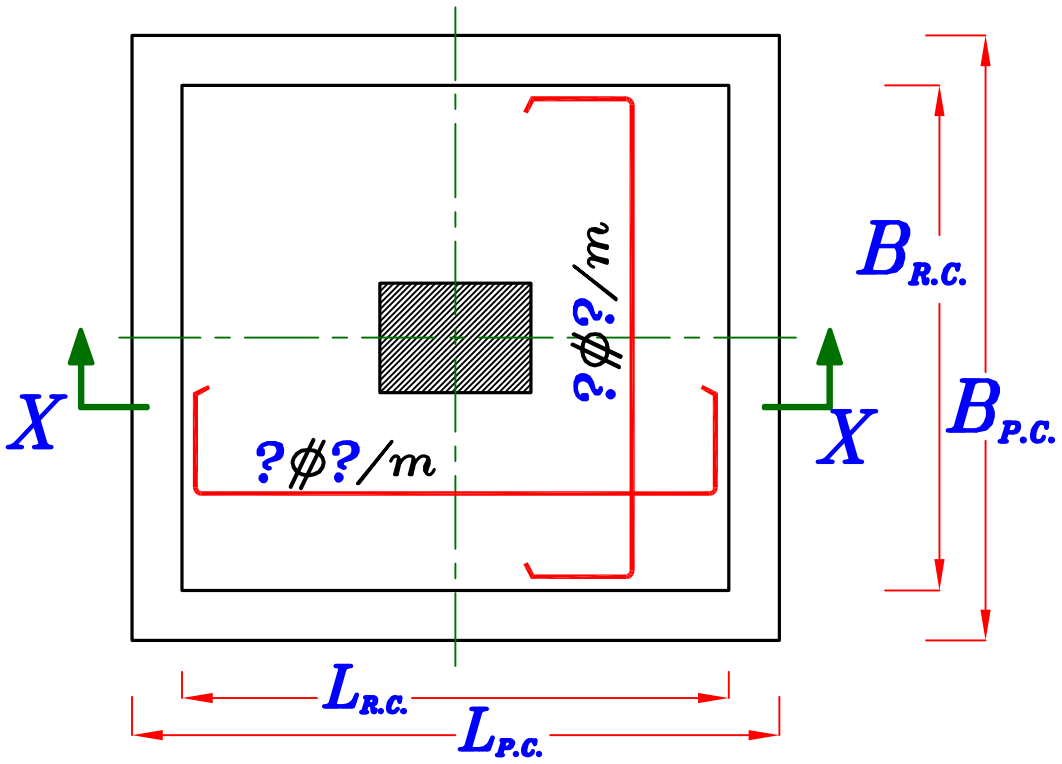

Plan

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Example.

It is required to design a rectangular Footing to Support a R.C column of thickness $(30 * 80)\,cm.$ The column working load is $1900\ kN$, and the allowable net bearing capacity in the Footing site is $120\ kN/m^2$. ($F_{cu} = 30\ N/mm^2$, $F_y = 400\ N/mm^2$). and draw details of RFT. to scale 1:50

Solution.

Data given:

column dimensions $(300 * 800)\ mm$

$P_{col.}$ (working) $= 1900\ kN$ $\qquad$ $P_{col.}$ (U.L.) $= 1900 * 1.5 = 2850\ kN$

Bearing capacity of the soil $= q_{all} = 120\ kN/m^2$

$F_{cu} = 30\ N/mm^2$ $\qquad$ $F_y = 400\ N/mm^2$

1– Calculate the Footing area (Width & Length of R.C. Footing.)

Choose $t_{P.C.} = 30\ cm > 20\ cm$

$$L_{P.C.} - B_{P.C.} = b - a = 0.80 - 0.30 = 0.50\ m$$

$$L_{P.C.} = B_{P.C.} + 0.50\ m \quad \text{------} (1)$$

$$A_{P.C.} = \frac{P_w}{q_{all}} = \frac{1900\ (kN)}{120\ (kN/m^2)} = 15.83\ m^2$$

$$A_{P.C.} = B_{P.C.} * L_{P.C.} = 15.83\ m^2 \quad \text{-----} (2)$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$$B_{P.C.} * L_{P.C.} = B_{P.C.} * (B_{P.C.} + 0.50) = 15.83 \ m^2$$

$$B_{P.C.} = 3.73 \ m$$

$$\boxed{B_{P.C.} = 3.80 \ m} \qquad \boxed{L_{P.C.} = 4.30 \ m}$$

$$\boxed{B_{R.C.} = 3.20 \ m} \qquad \boxed{L_{R.C.} = 3.70 \ m}$$

2– Design the critical sections For moment. (Depth of R.C. Footing.)

– Actual Normal stress on R.C. Footing (U.L.)

$$F_{act.} = \frac{P_{U.L.}}{B_{R.C.} * L_{R.C.}} = \frac{2850}{3.20 * 3.70} = 240.7 \ kN/m^2$$

$$z = \frac{B_{R.C.} - a}{2} = \frac{3.20 - 0.30}{2}$$

$$= 1.45 \ m$$

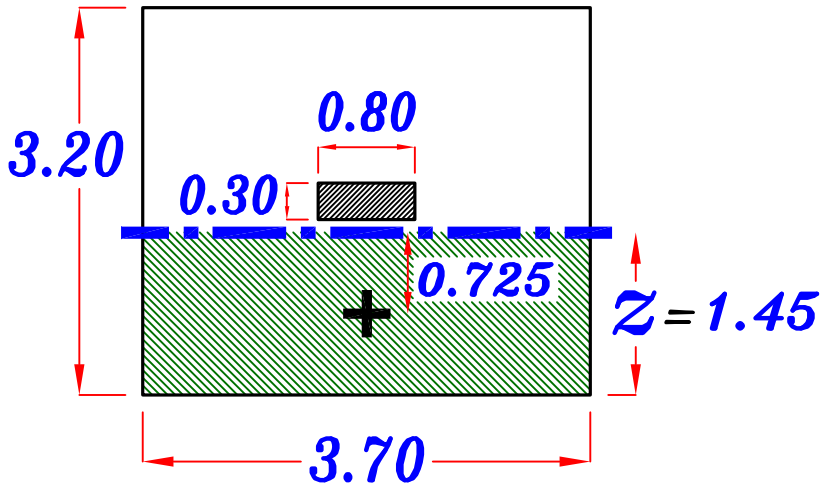

ملحوظه

اذا حافظنا على الشرط $\boxed{L_{P.C.} - B_{P.C.} = b - a}$

فيكون $z_I = z_{II}$ و بالتالى سيكون $\frac{M_I}{B} = \frac{M_{II}}{L}$ و من ثم سيكون $d_I = d_{II}$

أى انه يمكن أن ندرس أتجاه واحد فقط و يكون الاخر بالمثل .

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$$Force = Stress * Area$$

$$Force = F_{act.} * Z * B$$

$$= 240.7 * 1.45 * 3.70$$

$$= 1291.4 \ kN$$

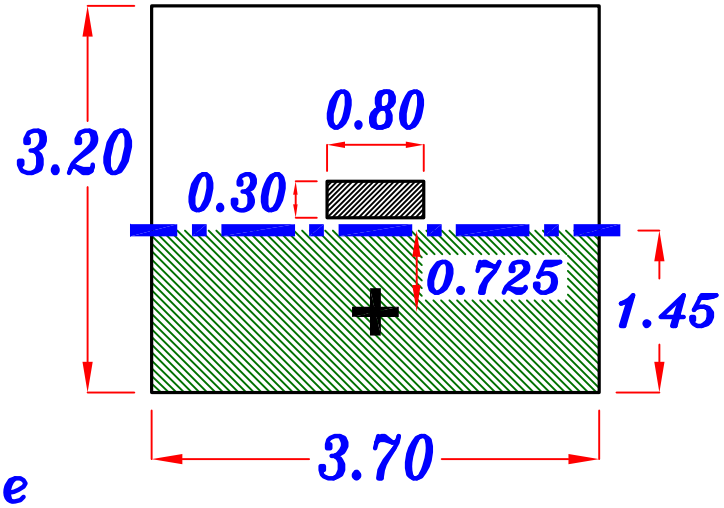

$$moment = Force * Distance$$

$$M_{act.} = (F_{act.} * Z * B_{R.C.}) \frac{Z}{2}$$

$$= (240.7 * 1.45 * 3.70) \frac{1.45}{2} = 936.2 \ kN.m$$

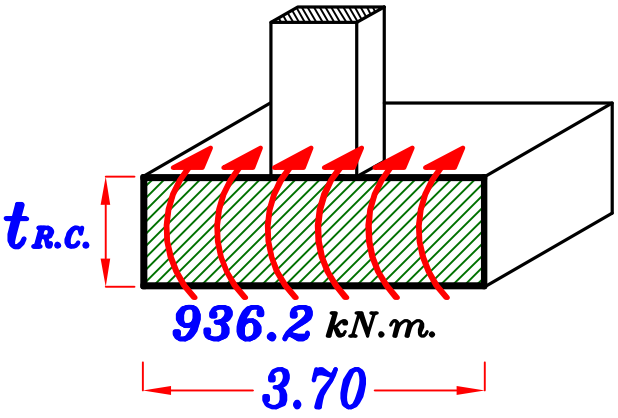

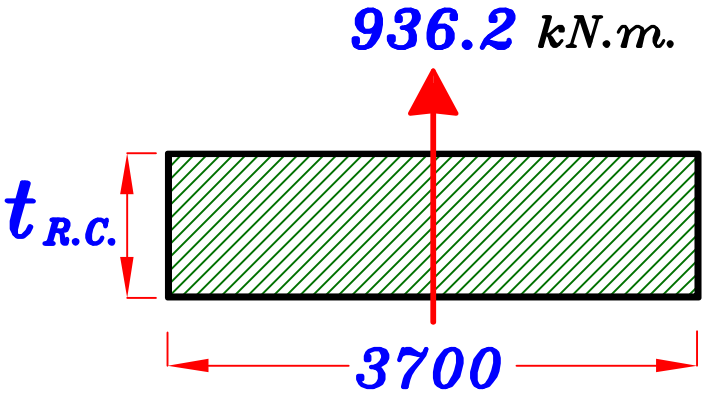

$$\because \ d = C_1 \sqrt{\frac{M_{act.}}{F_{cu} * b}}$$

Choose $C_1 = 5.0$

$$\therefore \ d = 5.0 \sqrt{\frac{936.2 * 10^6}{30 * 3700}} = 459.2 \ mm$$

$$t_{R.C.} = d + 70 \ mm = 459.2 + 70 = 529.2 \ mm$$

$$t_{R.C.} = 550 \ mm$$

$$d = 480 \ mm$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

3 – Check Shear.

$$a + 2d = 0.30 + 2 * 0.48 = 1.26\ m$$

$$b + 2d = 0.80 + 2 * 0.48 = 1.76\ m$$

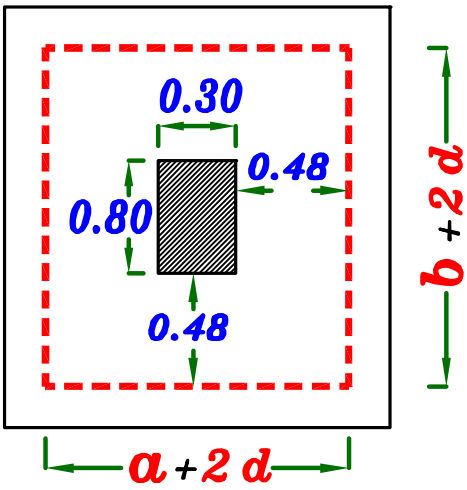

* Critical section For Shear.

$$l = z - d$$

$$l = 1.45 - 0.48 = 0.97\ m$$

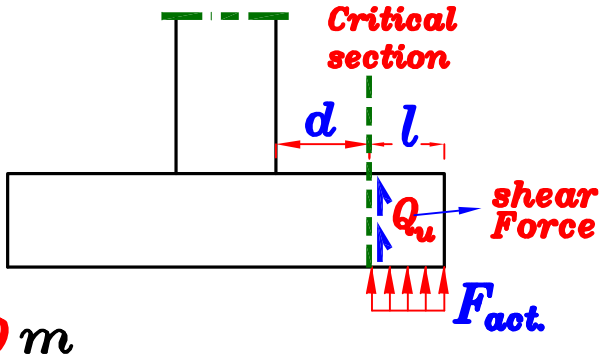

* Actual shear Force. (Q_u) For 1.0 m

$$Q_u = F_{act.} * l * 1.0\ m = 240.7 * 0.97 * 1.0\ m = 233.48\ kN$$

* Calculate Actual shear stress. (q_u)

$$q_u = \frac{Q_u}{b * d} = \frac{233.48 * 10^3}{1000 * 480} = 0.486\ N/mm^2$$

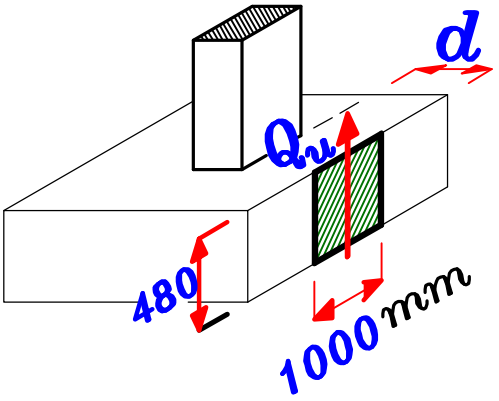

* Allowable shear stress. (q_{su})

$$q_{su} = 0.16\sqrt{\frac{F_{cu}}{\gamma_c}} = 0.16\sqrt{\frac{30}{1.5}} = 0.715\ N/mm^2$$

$q_u < q_{su}$ ⟶ Safe shear stresses

No need to increase dimensions.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

4 – Check Punching Shear.

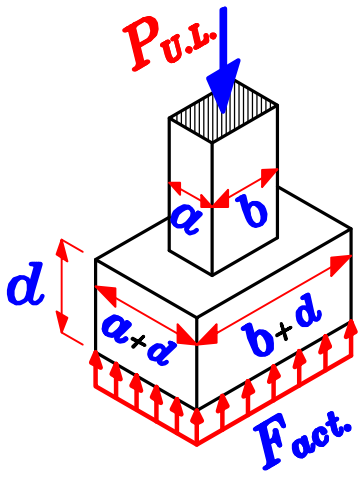

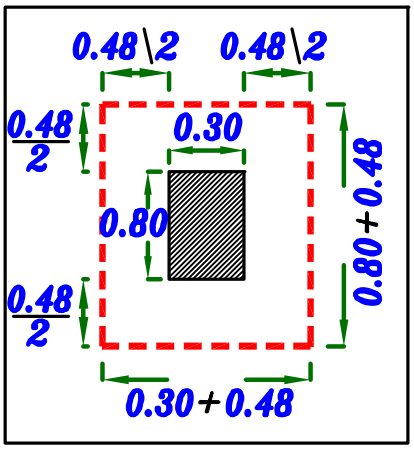

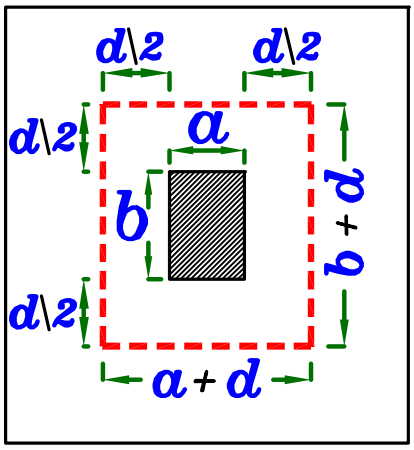

$$a + d = 0.30 + 0.48 = 0.78\ m$$

$$b + d = 0.80 + 0.48 = 1.28\ m$$

* **Calculate Punching Force.** (Q_p)

$$Q_p = P_{U.L.} - (F_{act.})\left[(a+d)(b+d)\right]$$

$$Q_p = 2850 - 240.7\left[0.78 * 1.28\right] = 2609.7\ kN$$

* **Calculate Punching shear area.** (A_p)

$$A_p = \left[2(a+d)+2(b+d)\right] * d$$

$$A_p = \left[2(300+480)+2(800+480)\right] * 480$$

$$A_p = 1977600\ mm^2$$

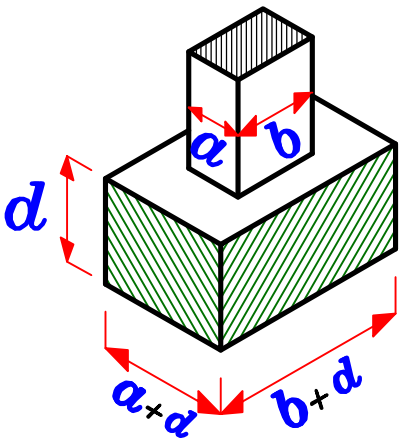

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

* Calculate Actual Punching shear stress. q_{pu}

$$q_{pu} = \frac{Q_p}{[2(a+d)+2(b+d)] * d}$$

$$q_{pu} = \frac{2609.7 * 10^3}{1977600} = 1.319 \ N/mm^2$$

* Calculate allowable Punching shear stress. q_{pcu}

$$(0.5+\frac{a}{b}) = (0.5+\frac{0.30}{0.80}) = 0.875 \leqslant 1.0$$

$$q_{pcu} = 0.316 \sqrt{\frac{F_{cu}}{\delta_c}} = 0.316 \sqrt{\frac{30}{1.5}} = 1.413 \ N/mm^2$$

$q_{pu} \leqslant q_{pcu} \longrightarrow$ **Safe punching shear.**
No need to increase dimensions.

5- Reinforcement of the Footing.

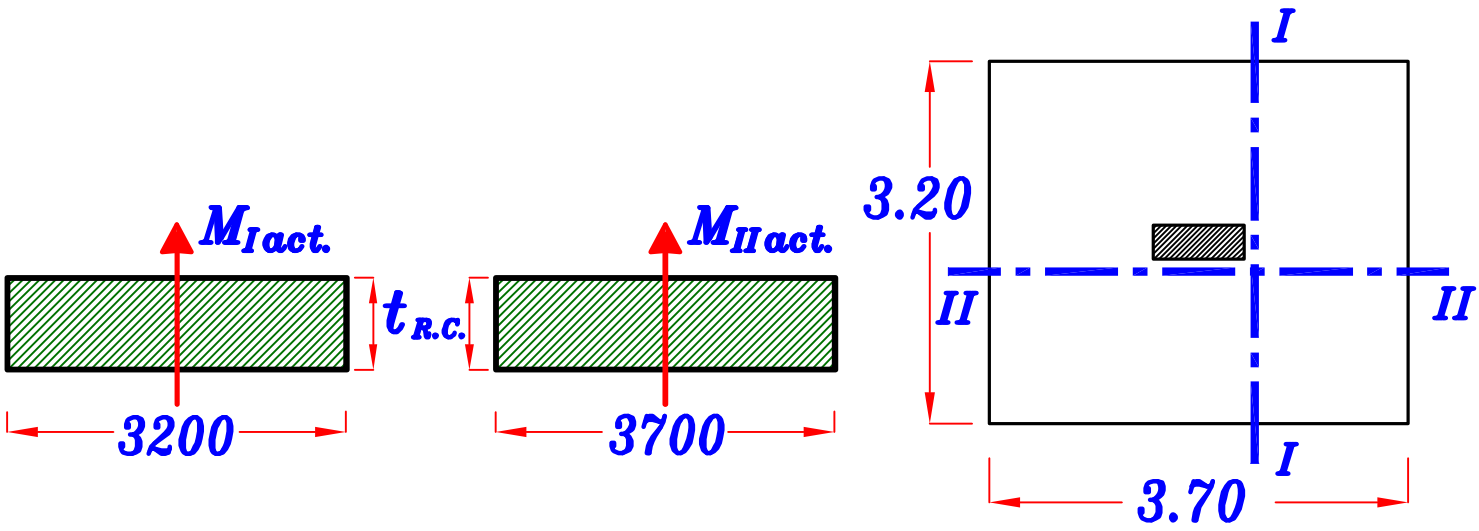

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$$M_{I\,act.} = \left(F_{act.} * Z * B_{R.C.}\right)\frac{Z}{2}$$

$$= \left(240.7 * 1.45 * 3.20\right)\frac{1.45}{2}$$

$$= 809.7 \ kN.m$$

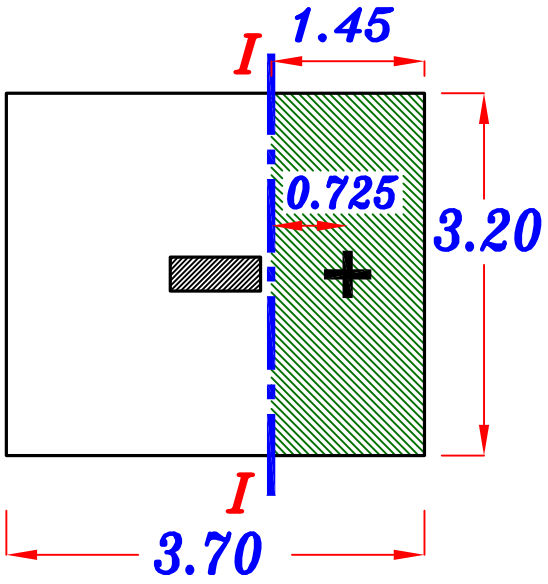

$$J = 0.826$$

$$A_S = \frac{M_{I\,act.}}{J\,F_y\,d} = \frac{809.7 * 10^6}{0.826 * 400 * 480} = 5105.5 \ mm^2$$

$$A_S \ (mm^2/m) = \frac{A_S}{B_{R.C.}} = \frac{5105.5}{3.20} = 1595.5 \ mm^2/m`$$

Check $A_{S\,min}$

$$A_{S\,min} = \left\{ \begin{array}{l} 1.5\,d = 1.5 * 480 = 720 \\ 5\,\phi\,12/m` = 565 \end{array} \right\} 720 mm^2$$

$$\therefore \ A_S > A_{S\,min} \longrightarrow \text{o.k.}$$

$$A_S = 1595.5 \ mm^2 \qquad \boxed{5\,\phi\,22/m`}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$$M_{II\,act.} = \left(F_{act.} * Z * L_{R.C.}\right)\frac{Z}{2}$$

$$= \left(240.7 * 1.45 * 3.70\right)\frac{1.45}{2}$$

$$= 936.2 \ kN.m$$

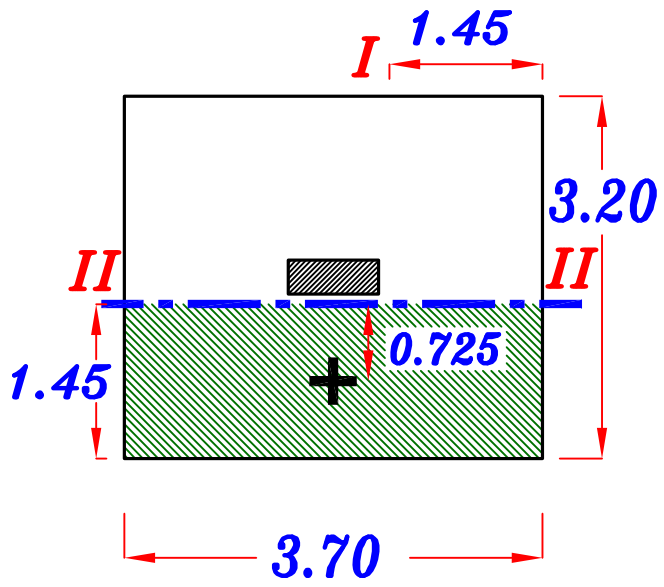

$$J = 0.826$$

$$A_S = \frac{M_{II\,act.}}{J\ F_y\ d} = \frac{936.2 * 10^6}{0.826 * 400 * 480} = 5903.2 \ mm^2$$

$$A_S \ (mm^2/m) = \frac{A_S}{B_{R.C.}} = \frac{5903.2}{3.70} = 1595.5 \ mm^2/m`$$

Check $A_{S\,min}$

$$A_{S\,min} = \left\{ \begin{array}{l} 1.5\,d = 1.5 * 480 = 720 \\ 5\,\phi\,12/m` = 565 \end{array} \right\} 720 mm^2$$

$$\therefore \ A_S > A_{S\,min} \longrightarrow \text{o.k.}$$

$$A_S = 1595.5 \ mm^2 \qquad \boxed{5\,\phi\,22/m`}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

6- Details of Reinforcement.

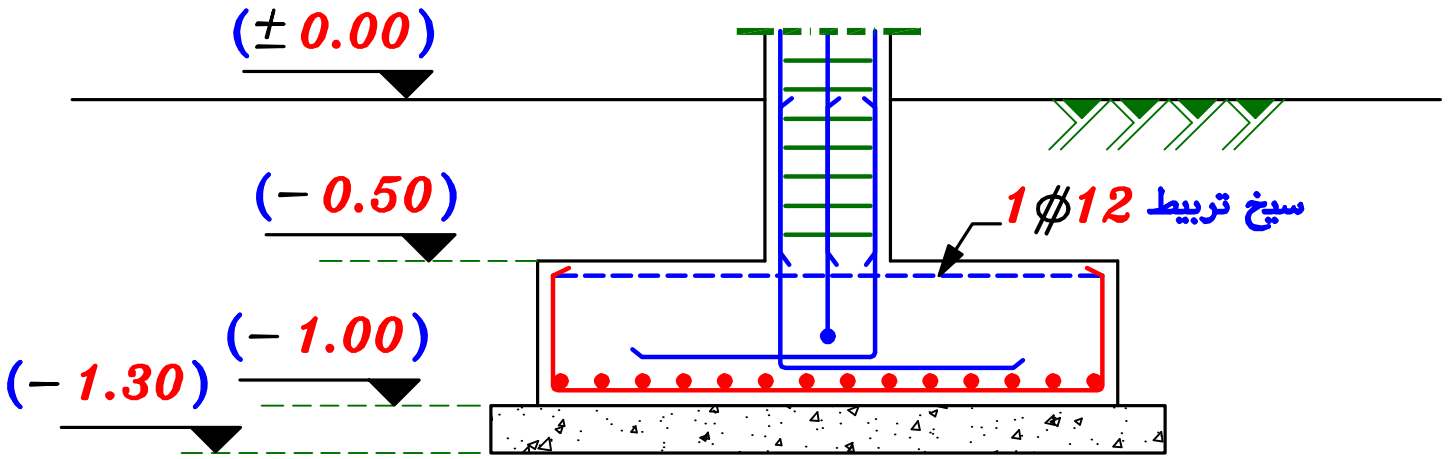

Sec X-X

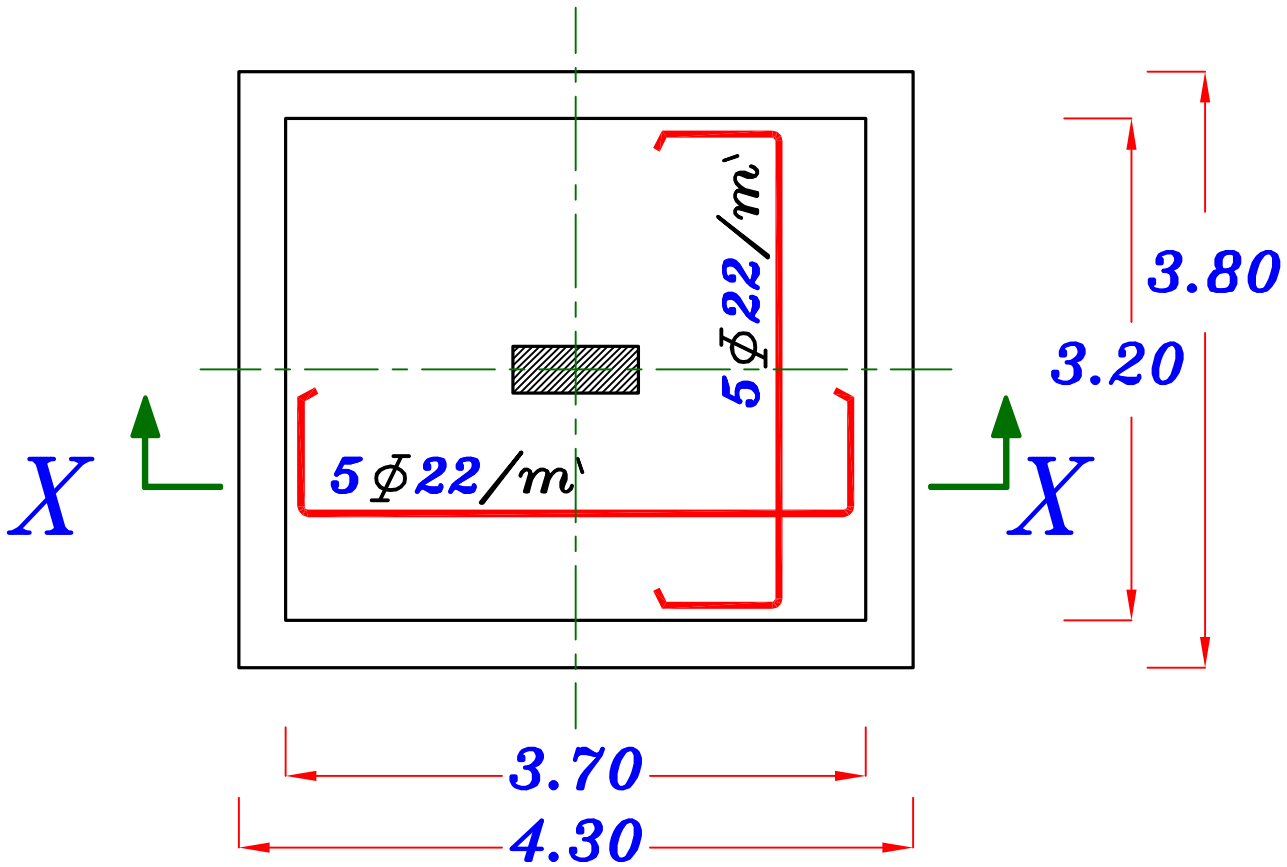

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

١- فى حاله عمل check shear

و وقع مستوى الـ critical section (الذى يبعد مسافه d من وش العمود)

خارج القاعده المسلحه فانه لا يكون عليه أجهاد قص

$$Q_{SI} = q_u * l * 1.0\,m$$

$$Q_{SII} = Zero$$

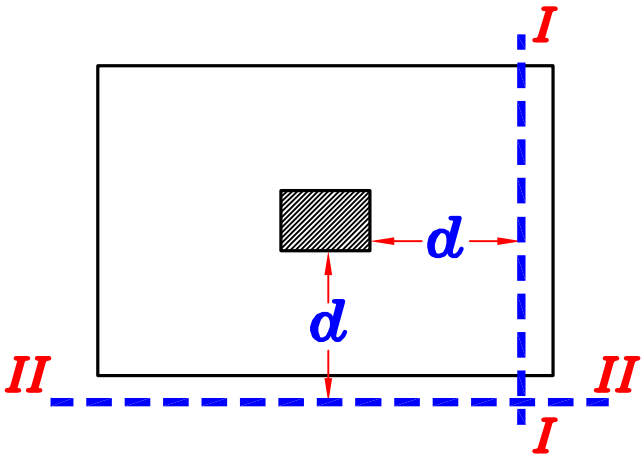

٢- فى حاله عمل check punching

و وقع مستوى الـ critical section (الذى يبعد مسافه $\frac{d}{2}$ من وش العمود)

خارج القاعده المسلحه .

$$A_p = 2\,y * d$$

$$Q_p = P_{U.L.} - (F_{act.})\,[X * y]$$

$$q_{pu} = \frac{Q_p}{2\,y * d}$$

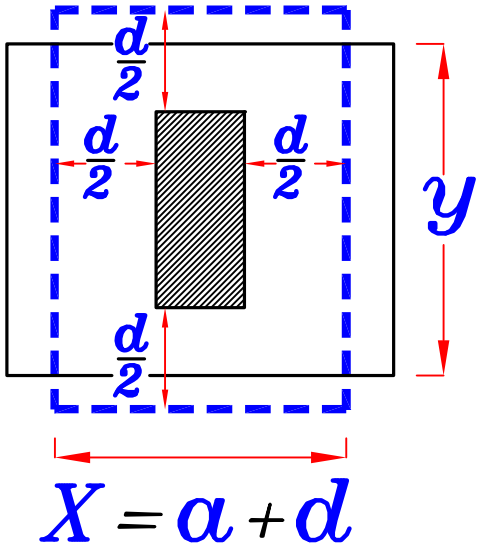

الجانب y فقط هو الذى يحدث عليه الانفصال عن القاعده

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

٣- اذا وقعت كل مستويات ***check shear*** خارج القاعده المسلحه

No need to check shear

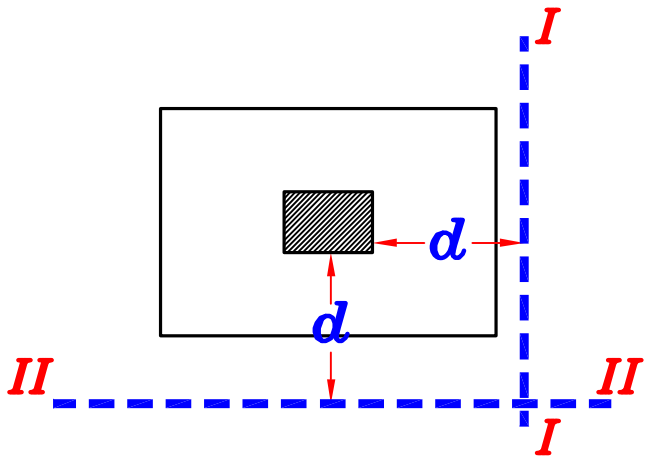

اذا وقعت كل مستويات ***check punching*** خارج القاعده المسلحه

No need to check punching

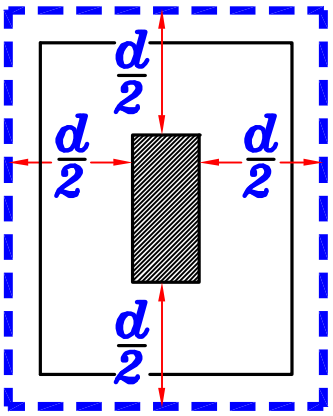

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

4 Design of Isolated Footing subjected to Moment and Normal M & N

تتولد عزوم على القواعد من أسباب عده منها :

١- عزم صريح على العمود . (مثل الاعمده فى الـ Fixed Frames) .

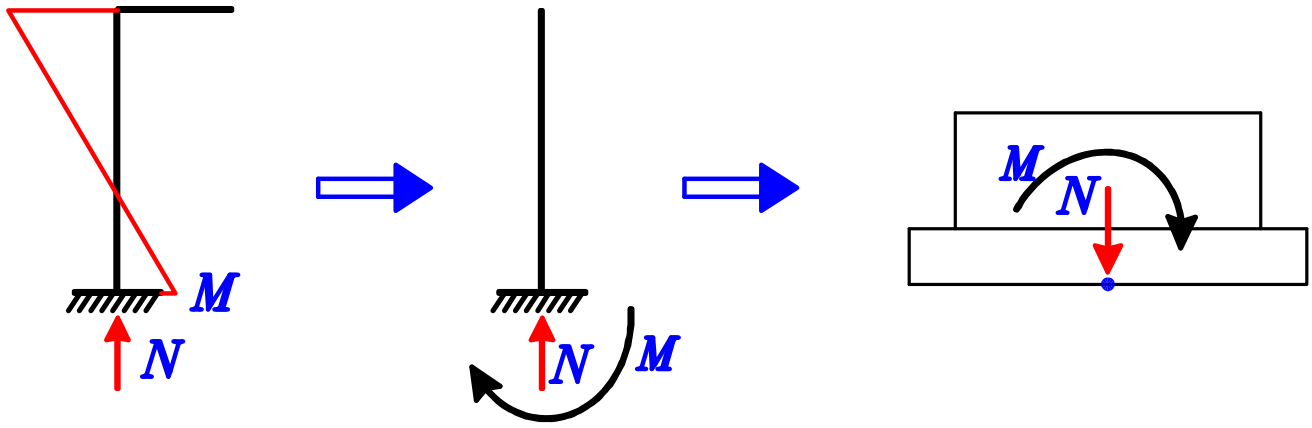

٢- وجود قوه أفقيه دائمه تؤثر على العمود على مسافه من C.G. القاعده .

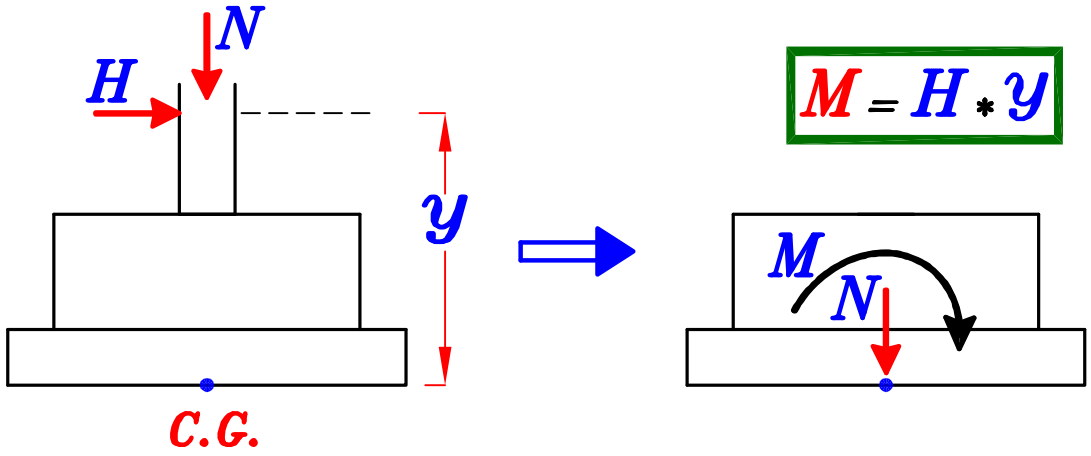

٣- و جود قاعده Hinged يوجد عليها رد فعل أفقى دائم قيمته X

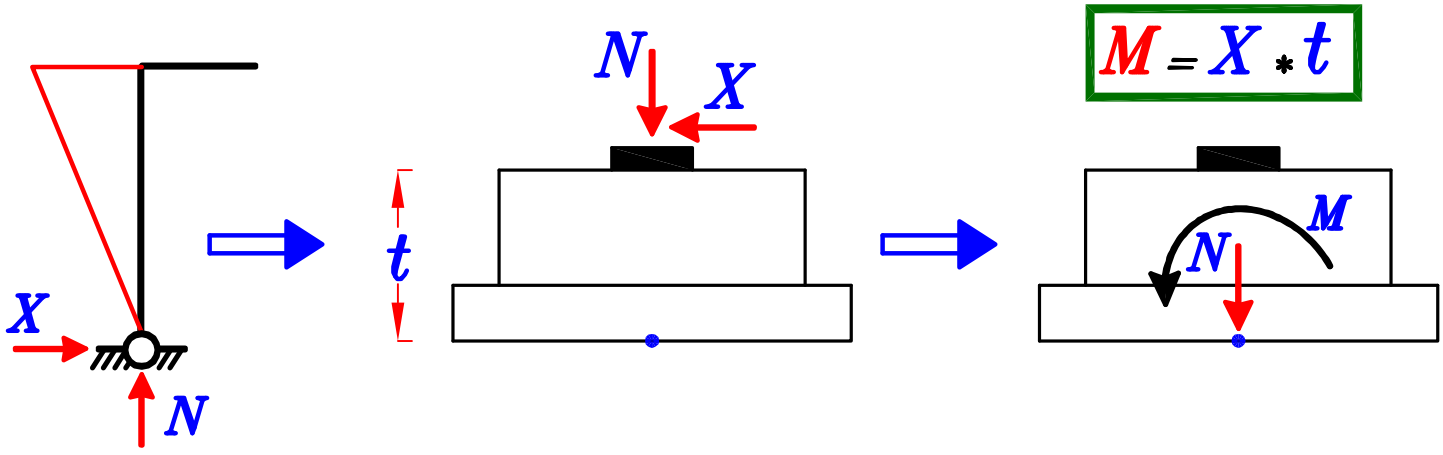

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

٤ ـ ال C.M. للاحمال (أى مركز الاحمال Center of Mass)

لا ينطبق على C.G. للقاعده فيسبب eccentricity مما يسبب عزوم دائمه .

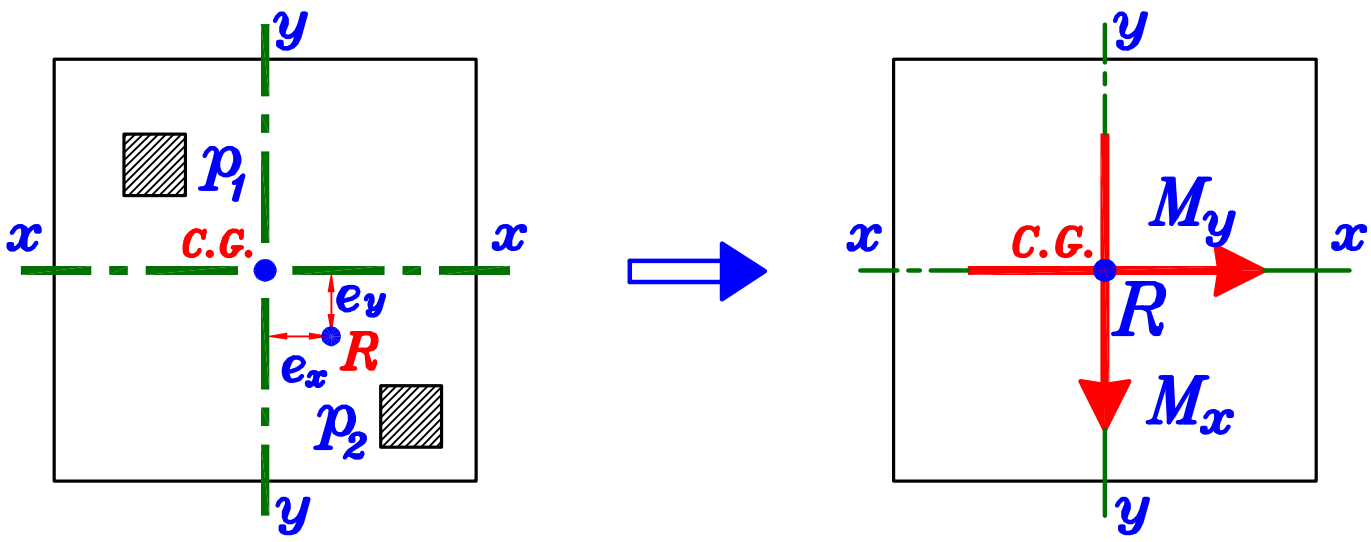

$$R = P_1 + P_2$$

$$M_x = R * e_x$$

$$M_y = R * e_y$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Types of moments on Footings.

أنواع العزوم التى من الممكن أن تؤثر على القواعد .

1- Permanent Moment. العزوم الدائمه .

و هى العزوم الناتجه عن الاحمال الدائمه مثل Gravity loads & Dead loads

و هى عزوم تكون ثابته المقدار و الاتجاه .

و يفضل إلغائها عن طريق ترحيل القاعده مسافه e عكس اتجاه الـ moment .

2- Temporary Moment. العزوم المتغيره أو الغير دائمه .

و هى العزوم الناتجه عن الاحمال المتغيره مثل

L.L. , Wind load & Earth quake loads.

و هى عزوم متغيره الاتجاه ↶ or ↷ و لكن بقيمه ثابته .

و يتم تصميم القاعده بحيث يكون الاجهاد أسفل القاعده يساوى :-

$$F_{act} = \frac{N}{A} \pm \frac{M\,y}{I}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

1- Design of isolated Footings subjected to permanent moment.

تصميم القواعد المنفصله المعرضه لعزوم ثابته المقدار و الاتجاه .

يفضل ترحيل القاعده مسافه e عكس اتجاه الـ moment و ذلك لإلغاء الـ moment .

ترحيل القواعد

قيمه (Normal stress) على التربه تحسب من المعادله التاليه $F = -\frac{N}{A} \pm \frac{My}{I}$

و من المفضل عدم عمل شد (Tension) على التربه .

فى حاله ترحيل القاعده عكس الـ B.M.

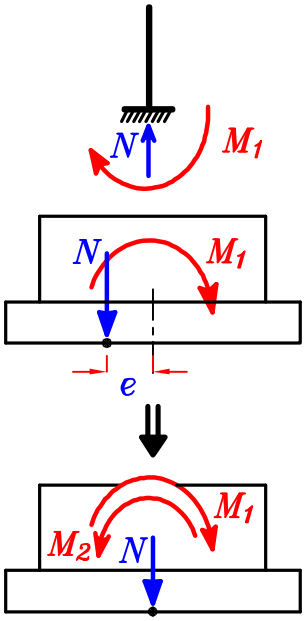

تعمل N عزم قيمته $M_2 = N * e$

معاكس لـ M_1 اذا أخذنا قيمه لـ e

بحيث تكون $M_2 = M_1$ فلن يكون هناك عزم

و تكون قوى ضغط فقط

و تكون قيمه $F = -\frac{N}{A}$ (Normal stress)

فنضمن أن الـ stress كله compression

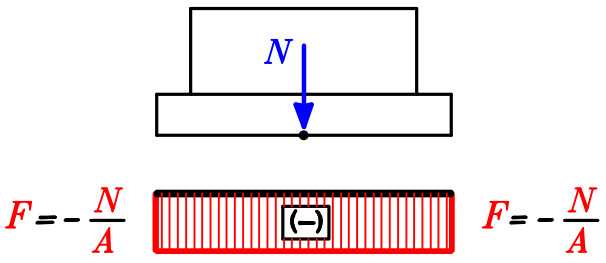

اذا لم يتم ترحيل القاعده

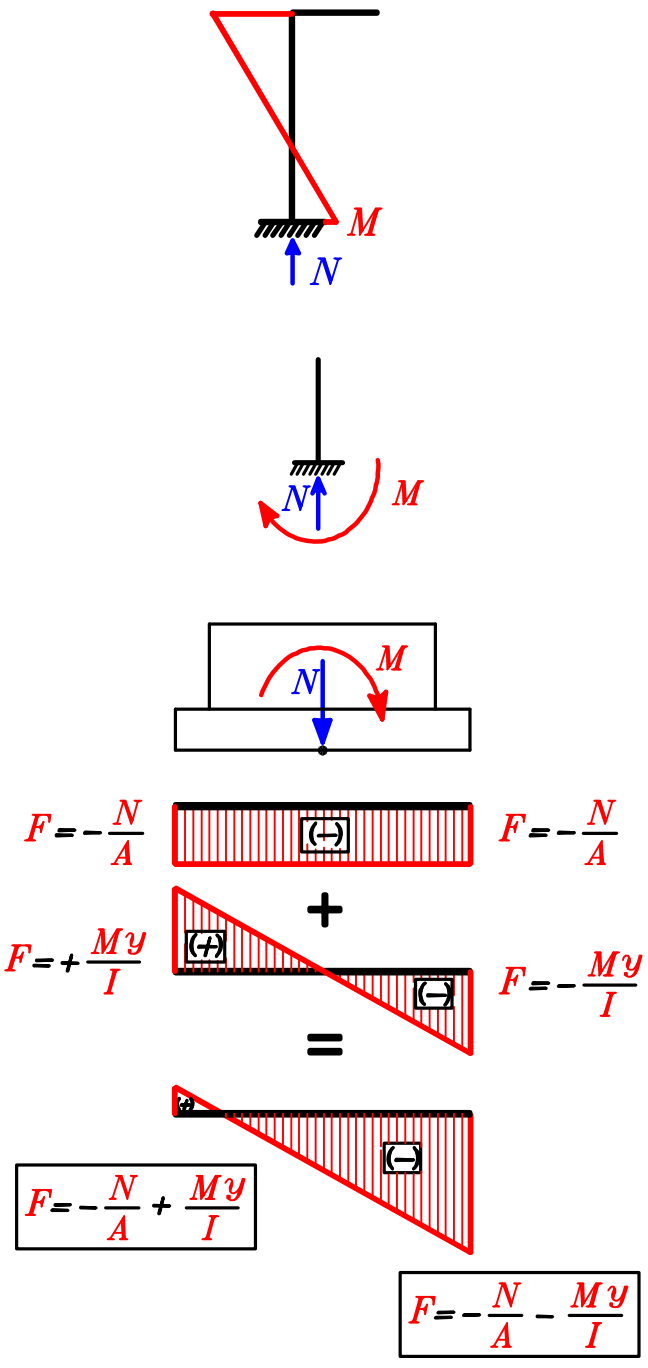

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

العزم من اتجاه واحد فقط.

أ ـ القاعده التى يوجد عليها *Reactions* فى إتجاه N و M معاً

ترحل القاعده عكس إتجاه الـ *Moment* فى رسمة الـ *B.M.D.* مسافة (e)

لعمل *uniform stress* على التربه

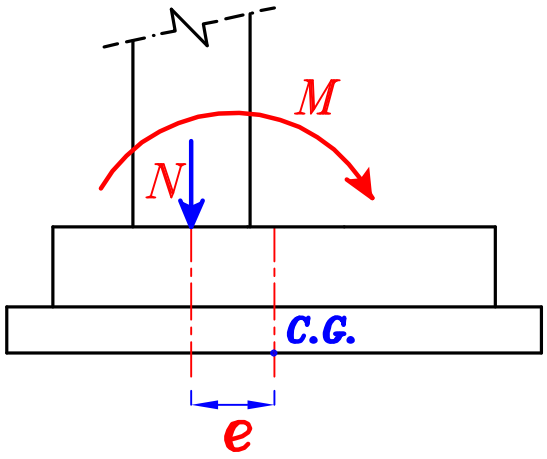

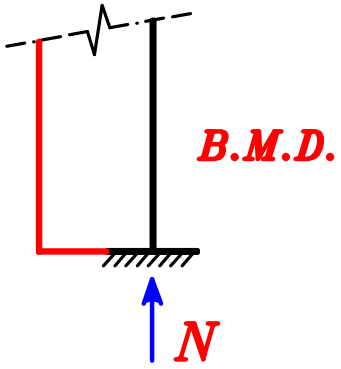

$\because \sum M_{C.G.} = Zero \quad \therefore M - N(e) = Zero$

$$e = \frac{M}{N}$$

ب ـ القاعده التى يوجد عليها *Reactions* فى إتجاه X و N و M معاً

ترحل القاعده عكس اتجاه الـ *Moment* فى رسمه الـ *B.M.D.* مسافه (e)

لعمل *uniform stress* على التربه

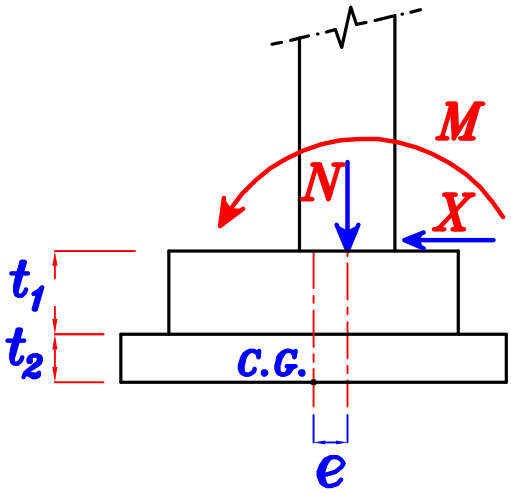

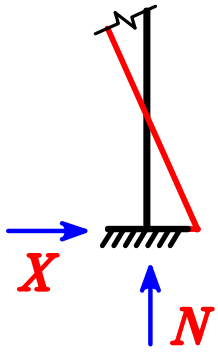

$\because \sum M_{C.G.} = Zero$

$\therefore X(t_1+t_2)+M-N(e)=Zero \quad \therefore$

$$e = \frac{X(t_1+t_2)+M}{N}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

العزم من الاتجاهين .

يتم ترحيل القاعده عكس الـ $Moment$ فى الاتجاهين e_x & e_y

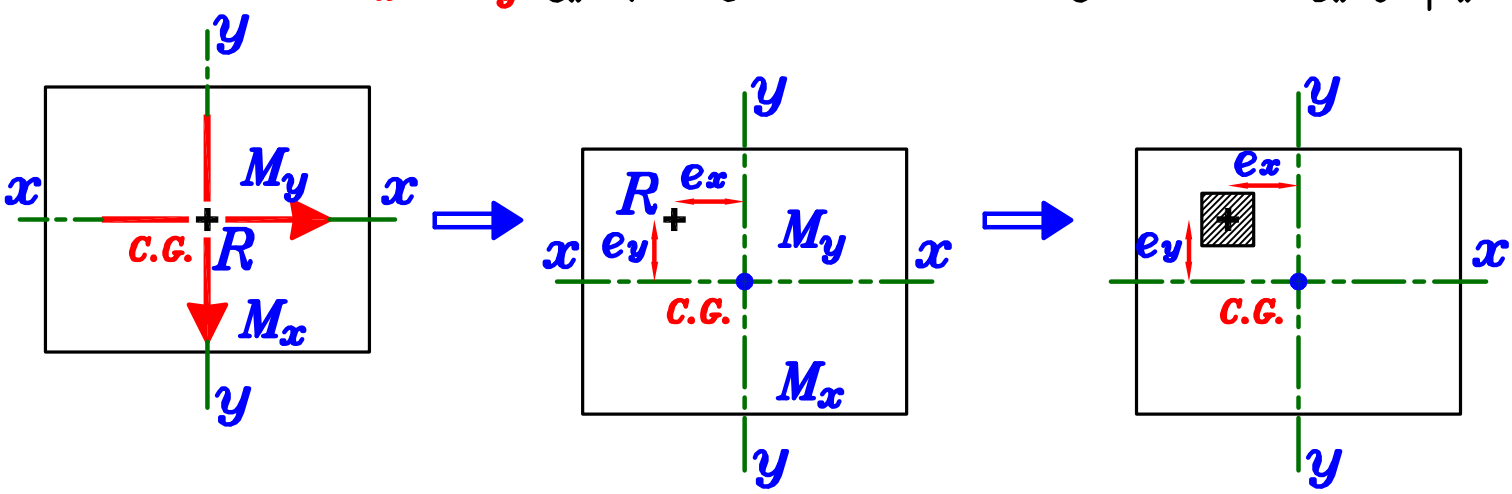

ملحوظه هامه يتم ترحيل القاعده و ليس ترحيل العمود .

ملحوظه هامه

يتم ترحيل القاعده عكس اتجاه الـ $Moment$ أى جهه رأس السهم .

حتى تكون محصله الـ $Moment$ النهائيه عند $C.G.$ القاعده يساوى صفر .

$$e_x = \frac{M_x}{N} \qquad e_y = \frac{M_y}{N}$$

$$M_{at\ C.G.\ of\ the\ Footing} = Zero$$

ثم يتم تصميم القاعده على N فقط.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Example.

It is required to design a rectangular Footing to Support a R.C column of thickness $(40 * 70)$ cm.

The column working load is 1500 kN

and permanent moment ↑ $M_x = 450$ kN.m

and permanent moment → $M_y = 600$ kN.m

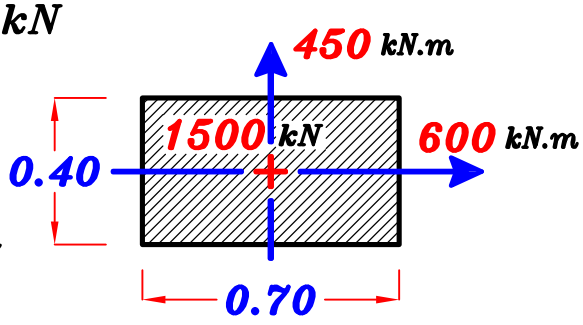

The allowable net bearing capacity in the Footing site is 150 kN/m^2. ($F_{cu} = 25$ N/mm^2, $F_y = 360$ N/mm^2).

and draw details of RFT. to scale 1:50

Solution.

Data given: Column dimensions $(400 * 700)$ mm

$P_{col.}$ (working) $= 1500$ kN $\quad P_{col.}$ (U.L.) $= 1500 * 1.5 = 2250$ kN

$M_x = 450$ kN.m $\quad M_y = 600$ kN.m

Bearing capacity of the soil $= q_{all} = 150$ kN/m^2

$F_{cu} = 25$ N/mm^2 $\quad F_y = 360$ N/mm^2

لان العزوم permanent moment

ممكن لالغاء تأثير العزوم على القاعده يتم ترحيل القاعده عكس العزوم

$$e_x = \frac{M_x}{N} = \frac{450}{1500} = 0.30 \ m$$

$$e_y = \frac{M_y}{N} = \frac{600}{1500} = 0.40 \ m$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

عند ترحيل القاعده عكس الـ moment

سيتم الغاء تأثير الـ moment

و بالتالى يكون الـ stresses على التربه متساوى

أى يكون على التربه uniform stresses

ثم يتم تصميم القاعده بالطريقه السابقه .

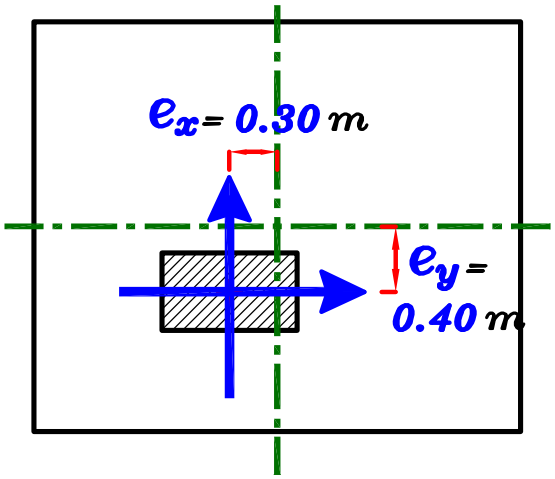

1– *Calculate the Footing area* (*Width & Length of R.C. Footing.*)

Choose $t_{P.C.} = 30\ cm > 20\ cm$

$$L_{P.C.} - B_{P.C.} = b - a = 0.70 - 0.40 = 0.30\ m$$

$$L_{P.C.} = B_{P.C.} + 0.30\ m \quad \text{------} (1)$$

$$A_{P.C.} = \frac{P_w}{q_{all}} = \frac{1500\ (kN)}{150\ (kN/m^2)} = 10.0\ m^2$$

$$A_{P.C.} = B_{P.C.} * L_{P.C.} = 10.0\ m^2 \quad \text{-----} (2)$$

$$B_{P.C.} * L_{P.C.} = B_{P.C.} * (B_{P.C.} + 0.30) = 10.0\ m^2$$

$$B_{P.C.} = 3.01\ m$$

$$\boxed{B_{P.C.} = 3.10\ m} \qquad \boxed{L_{P.C.} = 3.40\ m}$$

$$\boxed{B_{R.C.} = 2.50\ m} \qquad \boxed{L_{R.C.} = 2.80\ m}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$$z_I = 2.8 - 1.4 + 0.3 - 0.35 = 1.35\,m$$

$$z_{II} = 2.5 - 1.25 + 0.4 - 0.2 = 1.45\,m$$

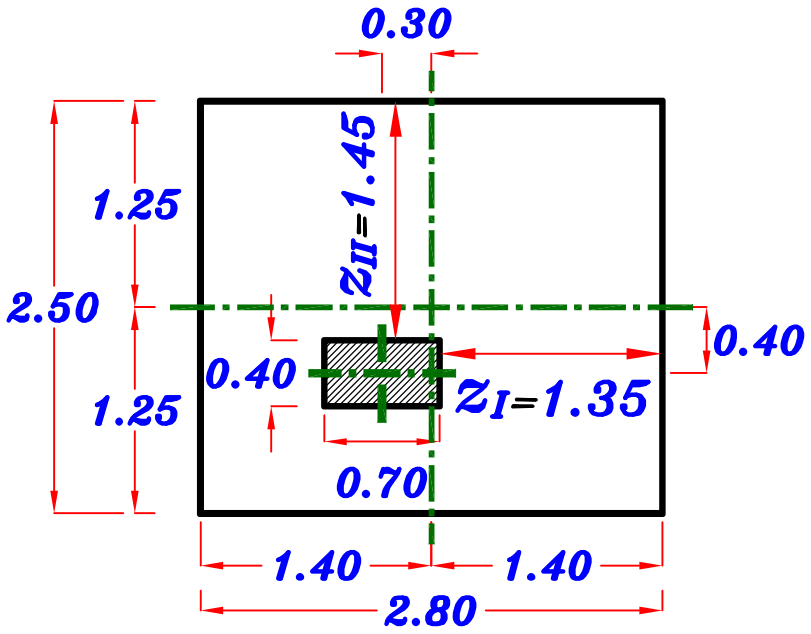

2– Design the critical sections For moment. (Depth of R.C. Footing.)

– Actual Normal stress on R.C. Footing (U.L.)

$$F_{act.} = \frac{P_{U.L.}}{B_{R.C.} * L_{R.C.}} = \frac{2250}{2.50 * 2.80} = 321.4\ kN/m^2$$

Direction I

$$z_I = \frac{2.80}{2} + 0.30 - \frac{0.70}{2} = 1.35\,m$$

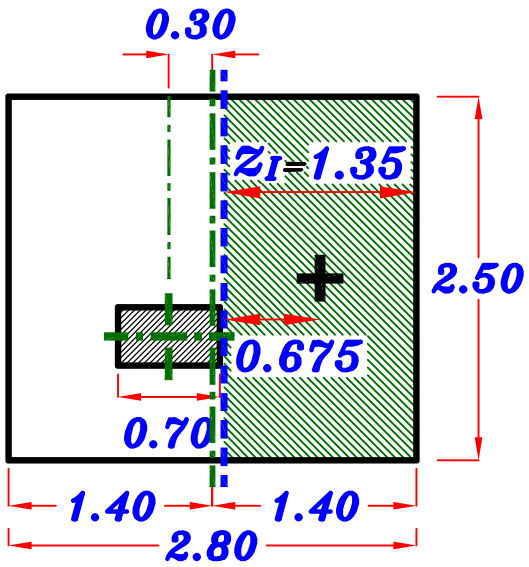

$$Force = Stress * Area$$

$$Force = F_{act.} * z_I * B_{R.C.}$$

$$= 321.4 * 1.35 * 2.50 = 1084.7\ kN$$

$$moment = Force * Distance$$

$$M_{I\,act.} = (F_{act.} * z_I * B_{R.C.}) \frac{z_I}{2}$$

$$= (321.4 * 1.35 * 2.50) \frac{1.35}{2} = 732.2\ kN.m$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

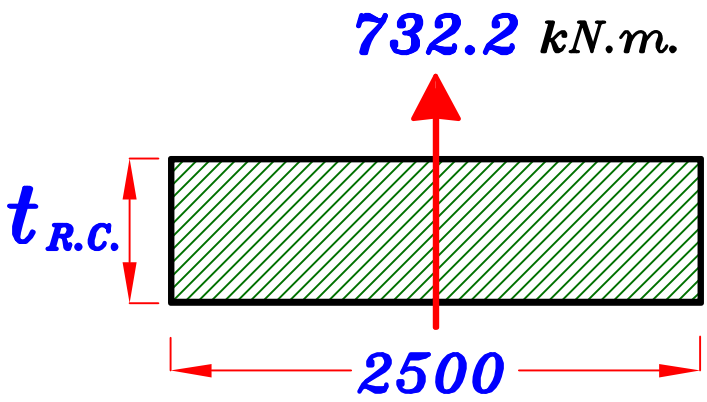

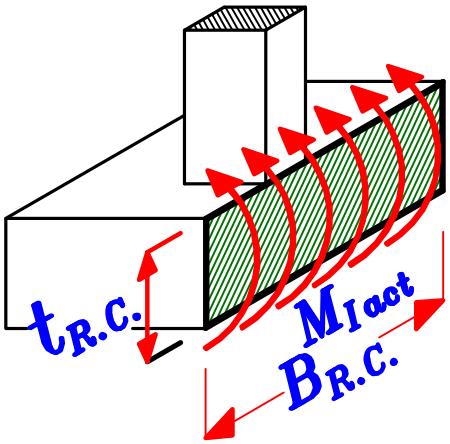

$$\because\ d_I = C_1 \sqrt{\frac{M_{I\,act.}}{F_{cu} * b}}$$

Choose $C_1 = 5.0$

$$\therefore\ d_I = 5.0 \sqrt{\frac{732.2 * 10^6}{25 * 2500}} = 541.2\ mm$$

Direction II

$$z_{II} = \frac{2.50}{2} + 0.40 - \frac{0.40}{2} = 1.45\ m$$

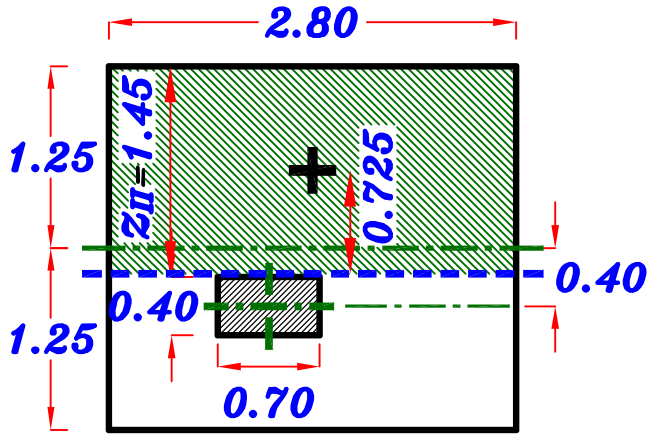

$$Force = Stress * Area$$

$$Force = F_{act.} * z_{II} * B_{R.C.}$$

$$= 321.4 * 1.45 * 2.80 = 1304.9\ kN$$

$$moment = Force * Distance$$

$$M_{II\,act.} = (F_{act.} * z_{II} * B_{R.C.}) \frac{z_{II}}{2}$$

$$= (321.4 * 1.45 * 2.80) \frac{1.45}{2} = 946.05\ kN.m$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

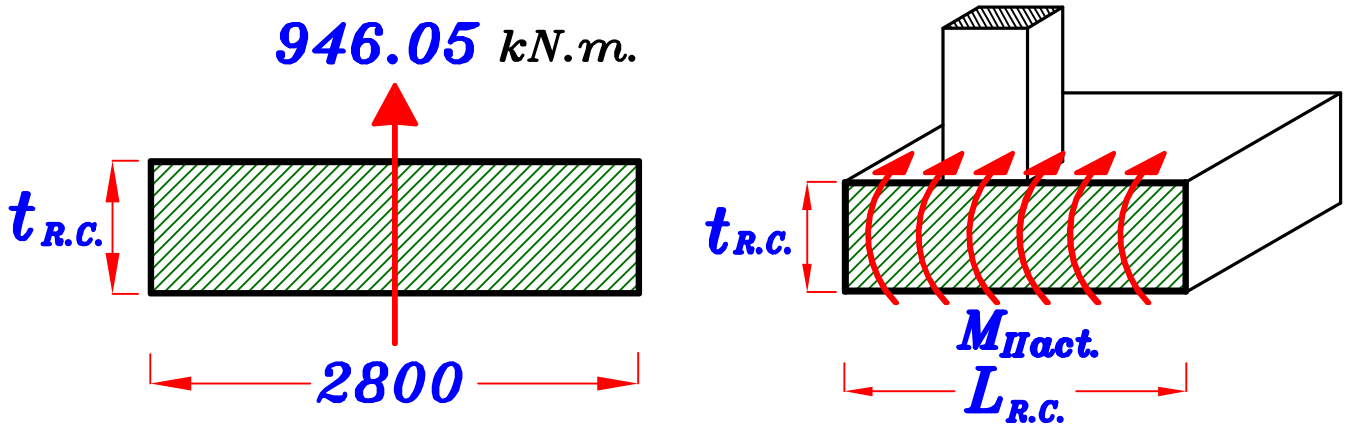

$$\because\ d_{II} = C_1 \sqrt{\frac{M_{IIact.}}{F_{cu} * b}} \qquad \text{Choose } C_1 = 5.0$$

$$\therefore\ d_{II} = 5.0 \sqrt{\frac{946.05 * 10^6}{25 * 2800}} = 581.2\,mm$$

Take d The bigger of d_I & d_{II} $= 581.2\,mm$

$$t_{R.C.} = d + 70\,mm = 581.2 + 70 = 651.2\,mm$$

$$\boxed{t_{R.C.} = 700\,mm} \qquad \boxed{d = 630\,mm}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

3 – Check Shear.

$a + 2\,d = 0.40 + 2 * 0.63 = 1.66\ m$

$b + 2\,d = 0.70 + 2 * 0.63 = 1.96\ m$

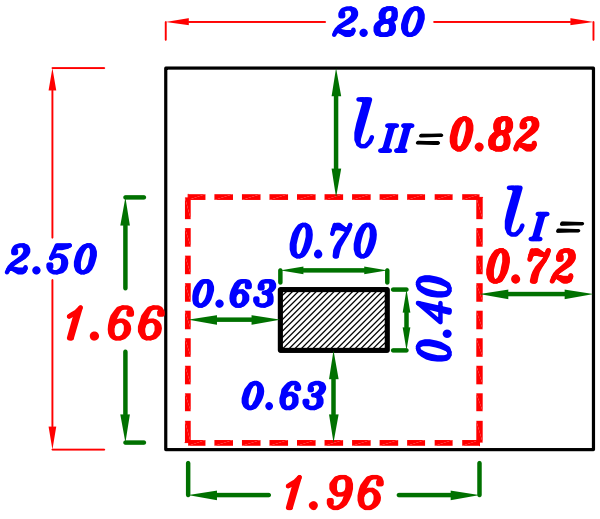

*Critical section For Shear.

Take l The bigger of l_I & l_{II}

$$l = 0.82\ mm$$

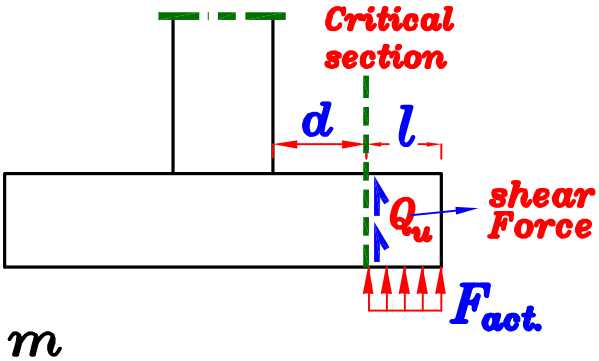

* Actual shear Force. (Q_u) For $1.0\ m$

$$Q_u = F_{act.} * l * 1.0\ m = 321.4 * 0.82 * 1.0\ m = 263.55\ kN$$

* Calculate Actual shear stress. (q_u)

$$q_u = \frac{Q_u}{b * d} = \frac{263.55 * 10^3}{1000 * 630} = 0.418\ N/mm^2$$

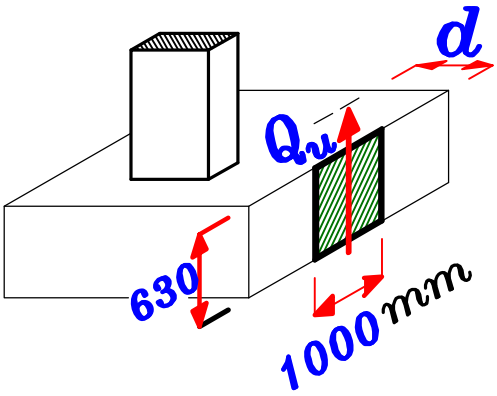

* Allowable shear stress. (q_{su})

$$q_{su} = 0.16\sqrt{\frac{F_{cu}}{\gamma_c}} = 0.16\sqrt{\frac{25}{1.5}} = 0.653\ N/mm^2$$

$q_u < q_{su}$ ⟶ Safe shear stresses

No need to increase dimensions.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

4 – Check Punching Shear.

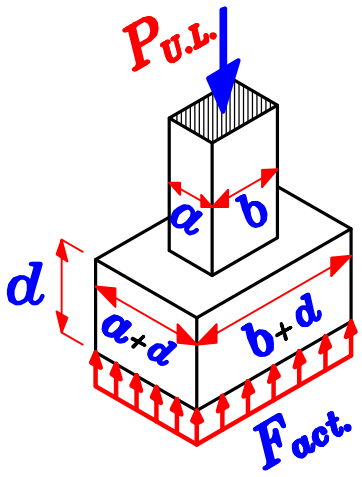

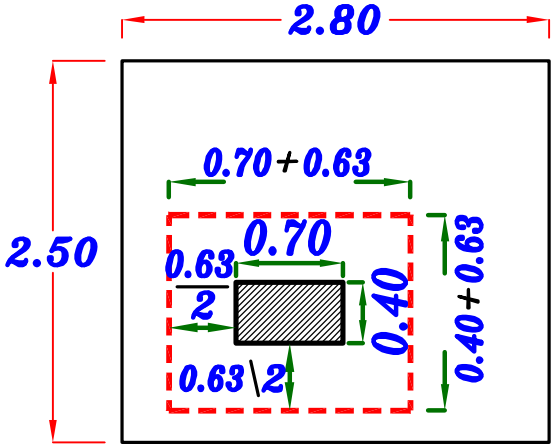

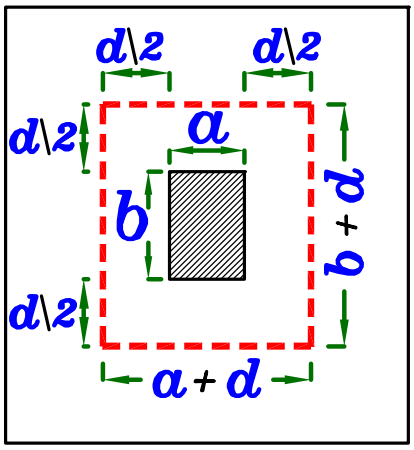

$$a + d = 0.40 + 0.63 = 1.03\ m$$

$$b + d = 0.70 + 0.63 = 1.33\ m$$

* **Calculate Punching Force.** (Q_p)

$$Q_p = P_{U.L.} - (F_{act.})\left[(a+d)(b+d)\right]$$

$$Q_p = 2250 - 321.4\left[1.03 * 1.33\right] = 1809.7\ kN$$

* **Calculate Punching shear area.** (A_p)

$$A_p = \left[2(a+d)+2(b+d)\right] * d$$

$$A_p = \left[2(400+630)+2(700+630)\right] * 630$$

$$A_p = 2973600\ mm^2$$

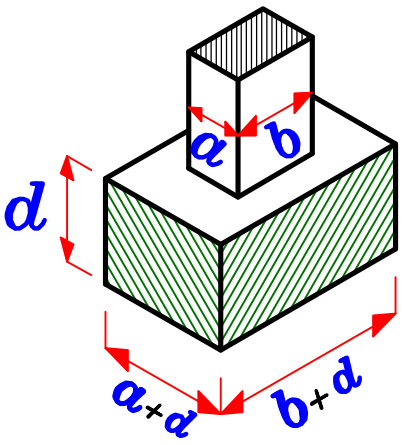

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

* Calculate Actual Punching shear stress. q_{pu}

$$q_{pu} = \frac{Q_p}{[2(a+d)+2(b+d)] * d}$$

$$q_{pu} = \frac{2250 * 10^3}{2973600} = 0.756 \ N/mm^2$$

* Calculate allowable Punching shear stress. q_{pcu}

$$q_{pcu} = 0.316 \left(0.5 + \frac{a}{b}\right) \sqrt{\frac{F_{cu}}{\delta_c}} =$$

$$q_{pcu} = 0.316 \left(0.5 + \frac{0.40}{0.70}\right) \sqrt{\frac{25}{1.5}} = 1.38 \ N/mm^2$$

$q_{pu} \leqslant q_{pcu} \longrightarrow$ **Safe punching shear.**
No need to increase dimensions.

5- Reinforcement of the Footing.

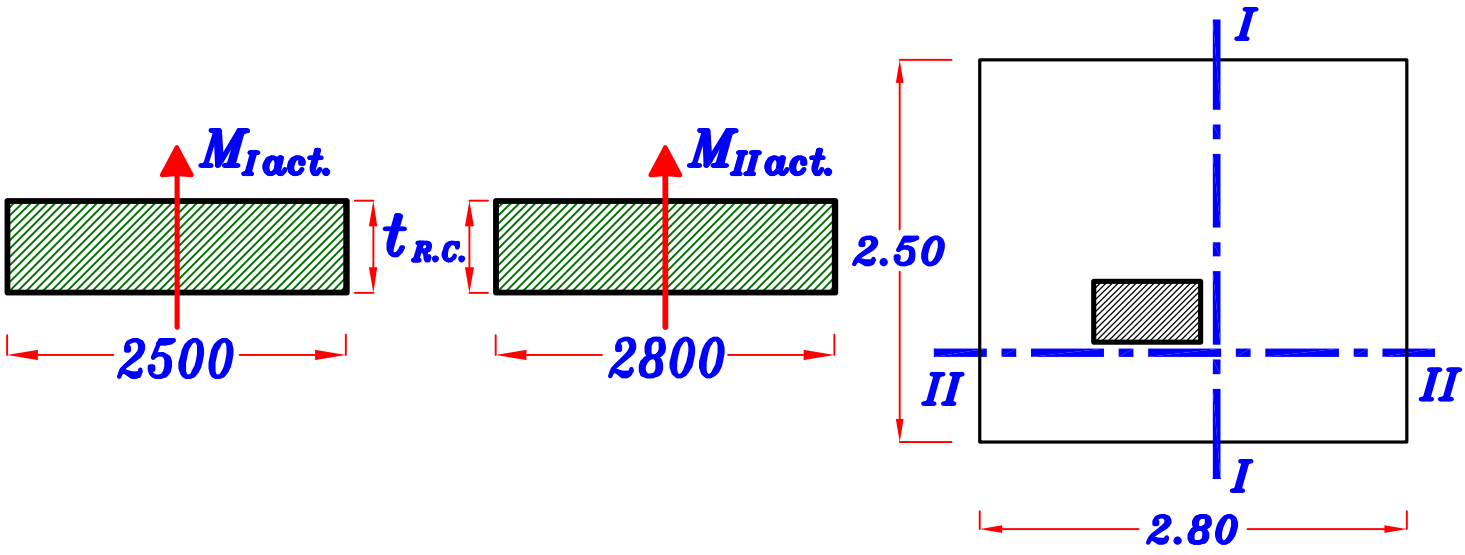

© Copyright Eng. Yasser El-Leathy 2010 . All rights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Direction I

$$M_{I\,act.} = \left(F_{act.} * z_I * B_{R.C.}\right)\frac{z_I}{2}$$

$$= \left(321.4 * 1.35 * 2.50\right)\frac{1.35}{2}$$

$$= 732.2 \ kN.m$$

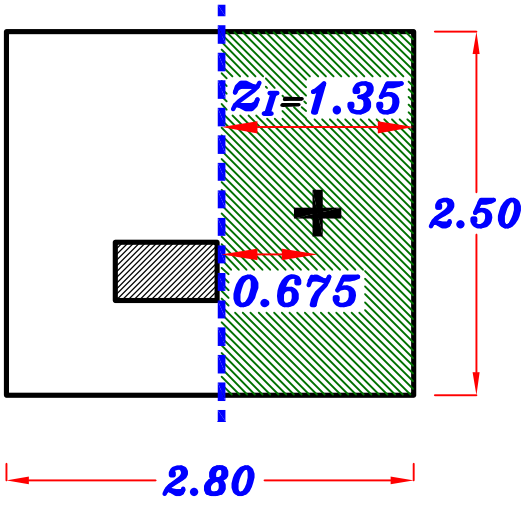

$$J = 0.826$$

$$A_S = \frac{M_{I\,act.}}{J\,F_y\,d} = \frac{732.2 * 10^6}{0.826 * 360 * 630} = 3908.5 \ mm^2$$

$$A_s \ (mm^2/m) = \frac{A_S}{B_{R.C.}} = \frac{3908.5}{2.50} = 1563.4 \ mm^2/m`$$

Check $A_{s\,min}$

$$A_{s\,min} = \left\{ \begin{array}{l} 1.5\,d = 1.5 * 630 = 954 \\ 5\,\phi\,12/m` = 565 \end{array} \right\} 945 mm^2$$

$$\therefore \ A_s > A_{s\,min} \longrightarrow \text{o.k.}$$

$$A_S = 1563.4 \ mm^2$$

$7\,\phi\,18/m`$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Direction II

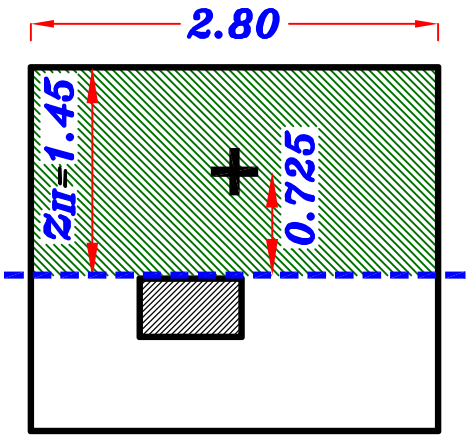

$$M_{II\,act.} = \left(F_{act.} * z_{II} * B_{R.C.}\right) \frac{z_{II}}{2}$$

$$= \left(321.4 * 1.45 * 2.80\right) \frac{1.45}{2}$$

$$= 946.05 \ kN.m$$

$$J = 0.826$$

$$A_S = \frac{M_{II\,act.}}{J\, F_y\, d} = \frac{946.05 * 10^6}{0.826 * 360 * 630} = 5050 \ mm^2$$

$$A_S \ (mm^2/m) = \frac{A_S}{B_{R.C.}} = \frac{5050}{2.80} = 1803.6 \ mm^2/m`$$

Check $A_{s\,min}$

$$A_{s\,min} = \left\{ \begin{array}{l} 1.5\,d = 1.5 * 630 = 954 \\ 5\,\phi\,12/m` = 565 \end{array} \right\} 954 mm^2$$

$$\therefore \ A_S > A_{s\,min} \longrightarrow \text{o.k.}$$

$$A_S = 1803.6 \ mm^2$$

8 ϕ 18/m`

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

6- Details of Reinforcement.

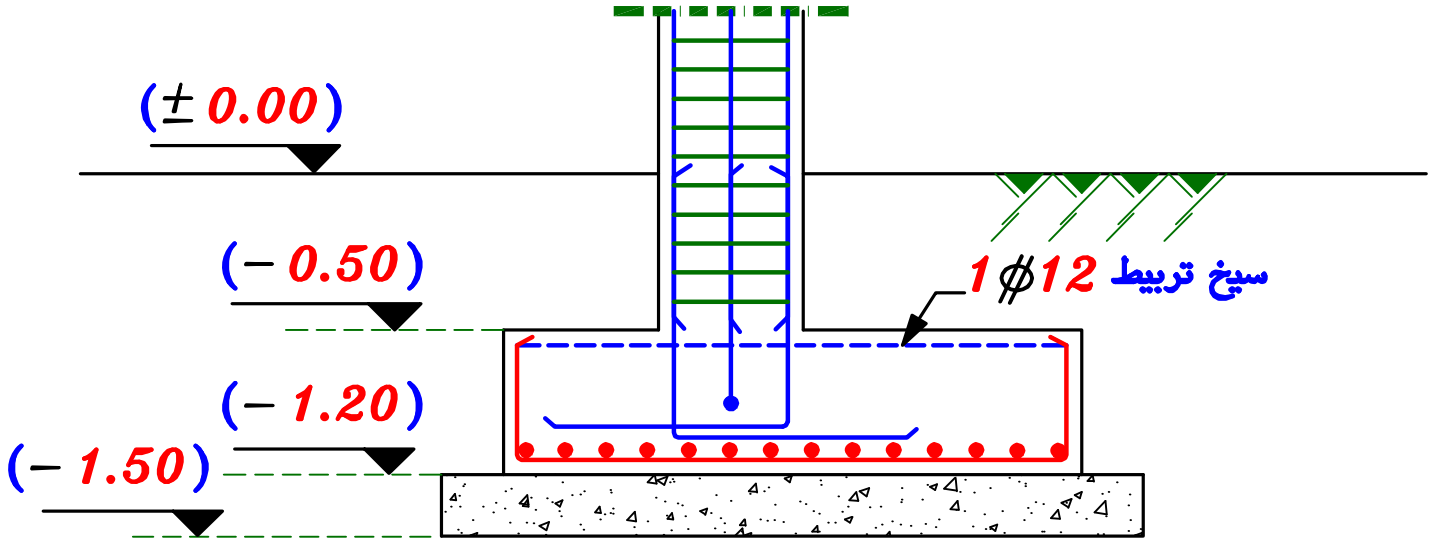

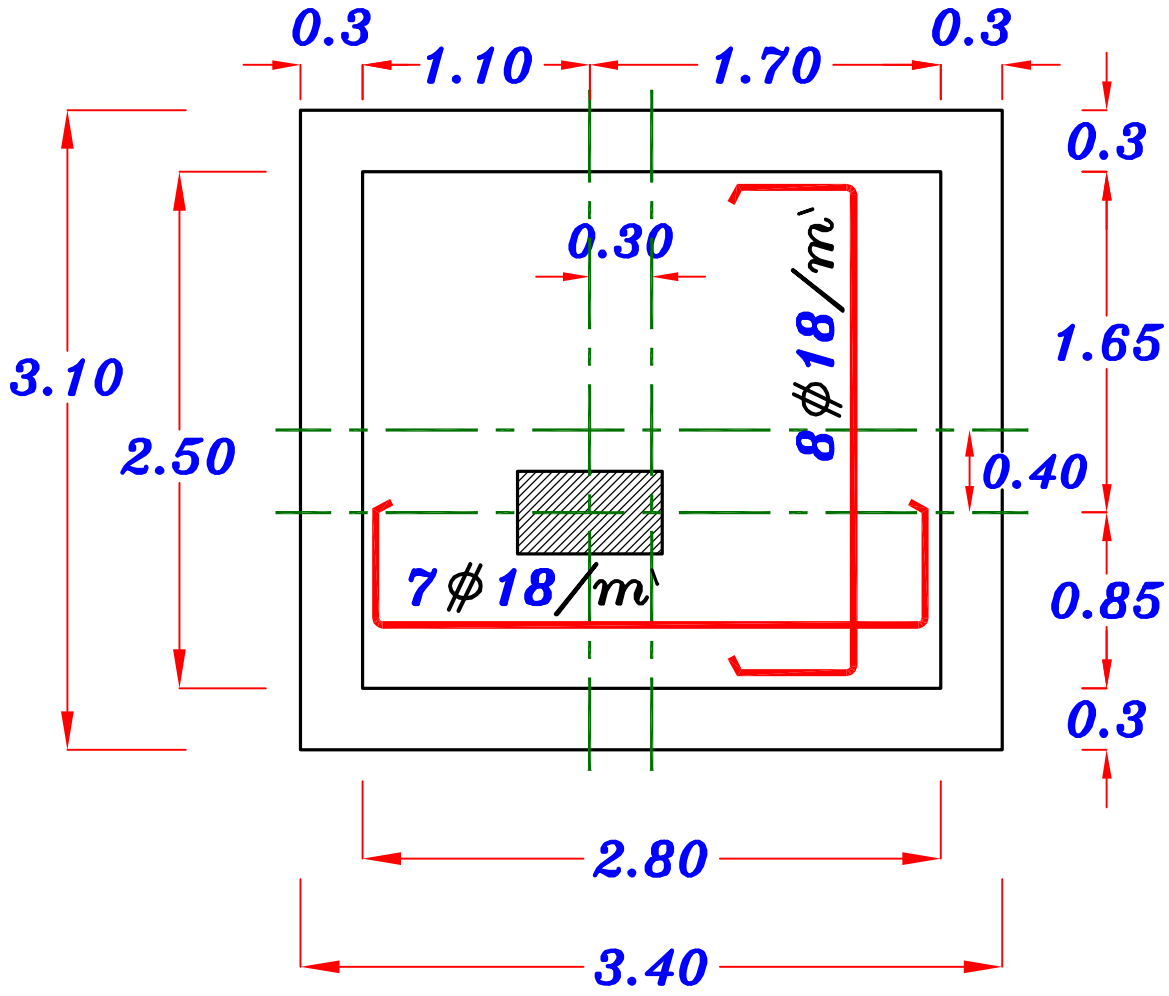

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

2- Design of isolated Footings subjected to temporary moment.

تصميم القواعد المنفصله المعرضه لعزوم متغيره أو غير دائمه .

العزوم الناتجه عن الاحمال المتغيره مثل

L.L. , *Wind load*

& *Earth quake loads.*

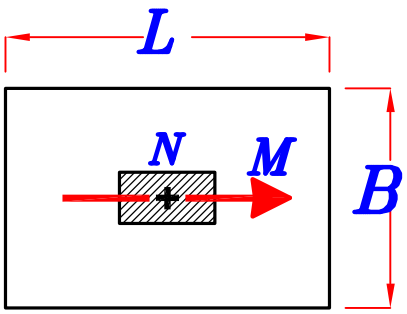

Case of single moment.

فى حاله وجود عزم واحد *variable* على القاعده

يوضع فى أى اتجاه ↶ أو ↷

و يفضل وضع أبعاد القاعده بحيث يكون

العرض الكبير للقاعده موازى لاتجاه الـ *moment*

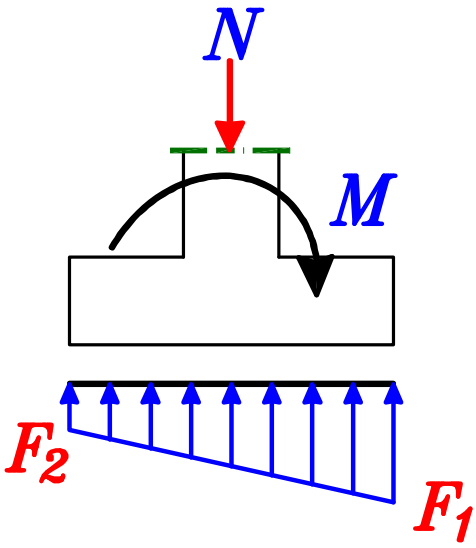

و يؤخذ تأثير العزم عند حساب الاجهادات على التربه .

$$F_1 = \frac{N}{A} + \frac{M\,y}{I}$$

$$F_2 = \frac{N}{A} - \frac{M\,y}{I}$$

$(+Ve) \longrightarrow$ *Compression stress.*

$(-Ve) \longrightarrow$ *Tension stress.*

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

و يتم اختيار أبعاد القاعده B , L

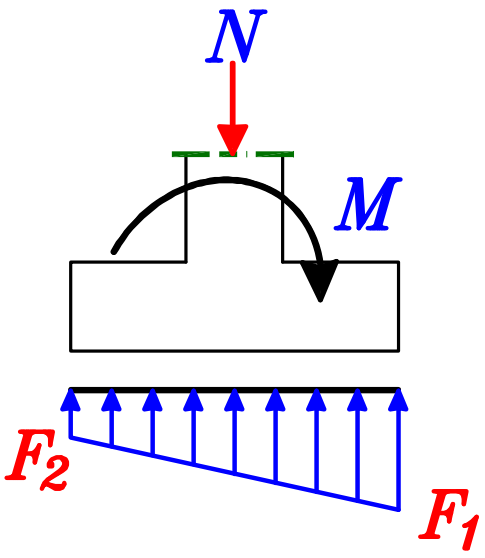

لتحقيق الشروط التاليه :

1 $F_1 \leqslant$ *Allowable bearing capacity* q_{all}

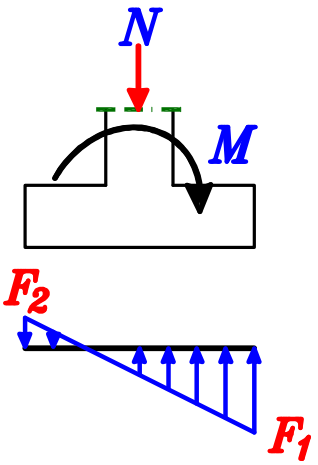

2 $F_2 >$ *Zero* لكى لا يوجد شد على التربه

No Tension on soil.

3 $F_2 \simeq \frac{F_1}{2}$ يفضل

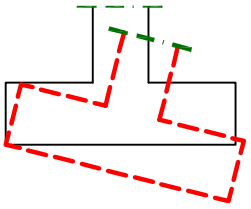

لكى نضمن عدم دوران القاعده

to avoid tilting of the Footing.

4 $L - B = b - a$ مع محاوله الحفاظ على الشرط

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Steps of design Footing subjected to M , N

For rectangular Footing.

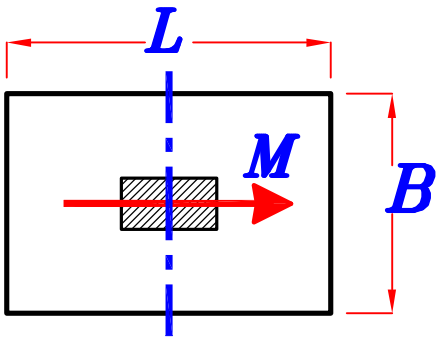

و يفضل وضع أبعاد القاعده بحيث يكون
العرض الكبير للقاعده موازى لاتجاه الـ moment

$$\text{Area of the Footing} = A = B * L$$

$$\text{Moment of Inertia For the Footing} = I = \frac{B * L^3}{12}$$

Stresses on soil.

$$\because \quad F = \frac{N}{A} \pm \frac{M\,y}{I}$$

$$A = B * L \qquad I = \frac{B * L^3}{12} \qquad y = \frac{L}{2}$$

عند طرف القاعده

$$\therefore \quad F = \frac{N}{B * L} \pm \frac{M * L \backslash 2}{B * L^3 \backslash 12}$$

$$\therefore \quad F = \frac{N}{B * L} \pm \frac{6\,M}{B * L^2}$$

عند طرف القاعده

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

1- Calculate the Footing area. (Width & Length of R.C. Footing.)

IF $t_{P.C.} \geq 20\ cm$

get $B_{P.C.}$, $L_{P.C.}$ From

$$L_{P.C.} - B_{P.C.} = b - a \quad \text{------(1)} \quad B_{P.C.} , L_{P.C.}$$

Actual Normal stress on soil = Bearing Capacity of soil.

$$F_1 = \frac{N}{B_{P.C.} * L_{P.C.}} + \frac{6\,M}{B_{P.C.} * L_{P.C.}^2} = q_{all} \text{ ---(2)} \quad B_{P.C.} , L_{P.C.}$$

$B_{P.C.}$, $L_{P.C.}$ يتم حل معادلتين فى مجهولين و تحديد قيمه كلا من

بعد حساب $B_{P.C.}$ & $L_{P.C.}$ يقربا لاقرب ٥٠ مم بالزياده

$$B_{R.C.} = B_{P.C.} - 2\ t_{P.C.} \qquad L_{R.C.} = L_{P.C.} - 2\ t_{P.C.}$$

Check .

$$F_2 = \frac{N}{B_{P.C.} * L_{P.C.}} - \frac{6\,M}{B_{P.C.} * L_{P.C.}^2} > Zero$$

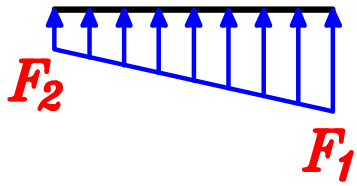

حتى لا يكون هناك tension على التربه .

IF $F_2 < Zero$ ⟶ أى tension على التربه .

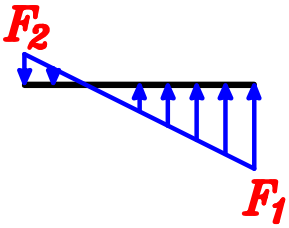

Increase $B_{P.C.}$, $L_{P.C.}$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

IF $t_{P.C.} < 20\ cm$

get $B_{R.C.}$, $L_{R.C.}$ From

$$L_{R.C.} - B_{R.C.} = b - a \quad \text{------(1)} \quad B_{R.C.} , L_{R.C.}$$

Actual Normal stress on soil = Bearing Capacity of soil.

$$F_1 = \frac{N}{B_{R.C.} * L_{R.C.}} + \frac{6\,M}{B_{R.C.} * L_{P.C.}^2} = q_{all} \text{ ---(2)} \quad B_{R.C.} , L_{R.C.}$$

$B_{R.C.}$, $L_{R.C.}$ يتم حل معادلتين فى مجهولين و تحديد قيمه كلا من

بعد حساب $B_{R.C.}$ & $L_{R.C.}$ يقربا لاقرب ٥٠ مم بالزياده

$$B_{P.C.} = B_{R.C.} + 2\ t_{P.C.} \qquad L_{P.C.} = L_{R.C.} + 2\ t_{P.C.}$$

Check .

$$F_2 = \frac{N}{B_{R.C.} * L_{R.C.}} - \frac{6\,M}{B_{R.C.} * L_{R.C.}^2} > Zero$$

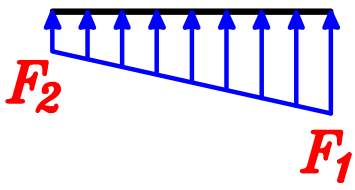

حتى لا يكون هناك tension على التربه .

IF $F_2 < Zero$ ⟶ أى tension على التربه .

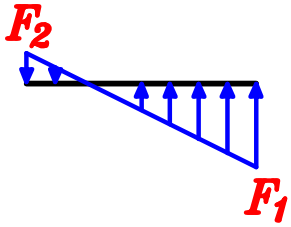

Increase $B_{R.C.}$, $L_{R.C.}$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

2– Design the critical sections For moment. (Depth of R.C. Footing.)

The actual ultimate limits stresses on R.C. concrete.

$$F_1 = \frac{N_{U.L.}}{B_{R.C.} * L_{R.C.}} + \frac{6\,M_{U.L.}}{B_{R.C.} * L_{R.C.}^{\,2}}$$

$$F_2 = \frac{N_{U.L.}}{B_{R.C.} * L_{R.C.}} - \frac{6\,M_{U.L.}}{B_{R.C.} * L_{R.C.}^{\,2}}$$

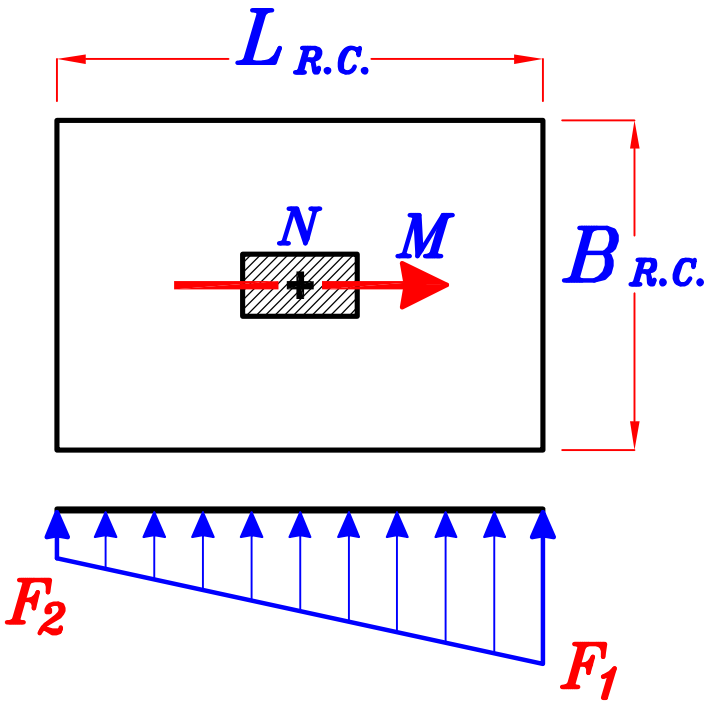

Direction I

$$z_I = \frac{L_{R.C.} - b}{2} \quad (m)$$

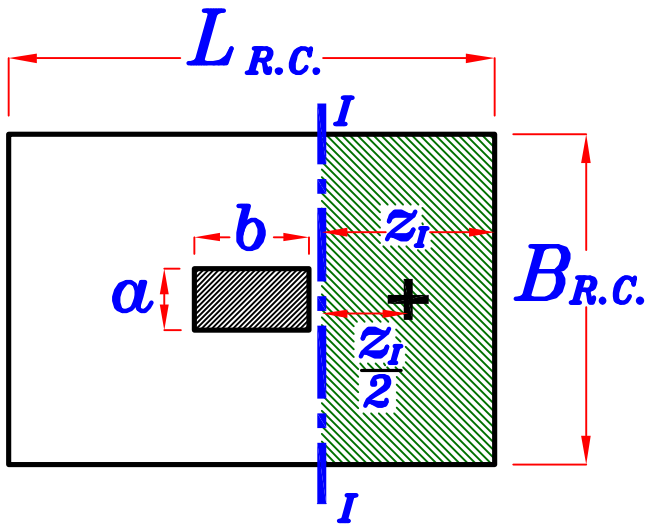

Calculate F_3 من تشابه المثلثات

$$F_3 = \frac{L_{R.C.} - z_I}{L_{R.C.}} * (F_1 - F_2) + F_2$$

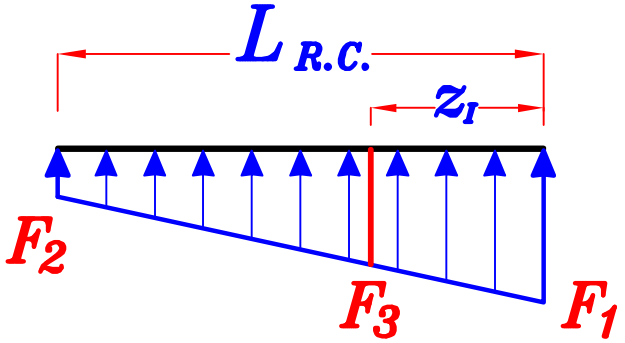

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Get the average stress $F_{1av.}$

$$F_{1av.} = \frac{F_1 + F_3}{2}$$

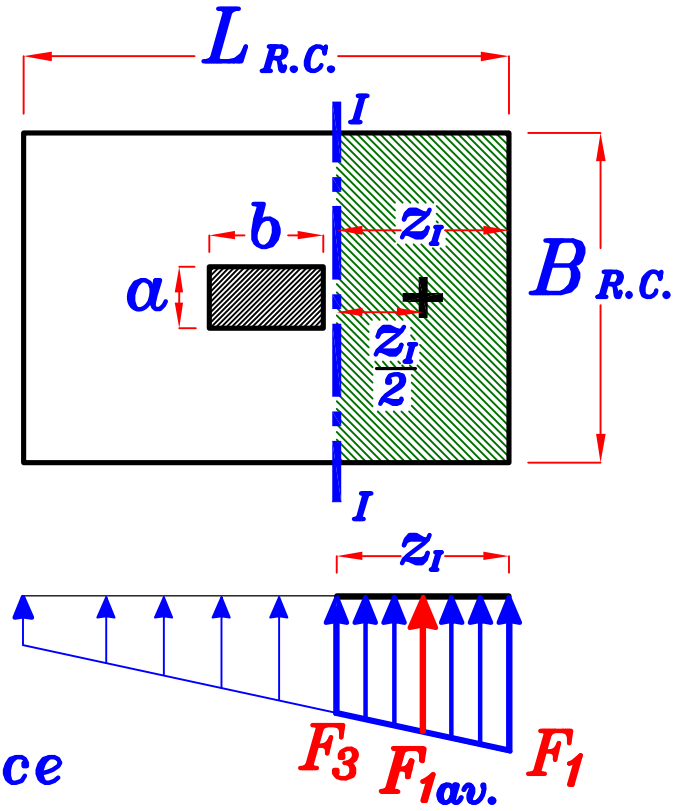

$$Force = Stress * Area$$

$$Force = F_{1av.} * z_I * B_{R.C.}$$

$$Moment = Force * Distance$$

$$M_{I\,act.} = (F_{1av.} * z_I * B_{R.C.}) \frac{z_I}{2} \quad (kN.m/B)$$

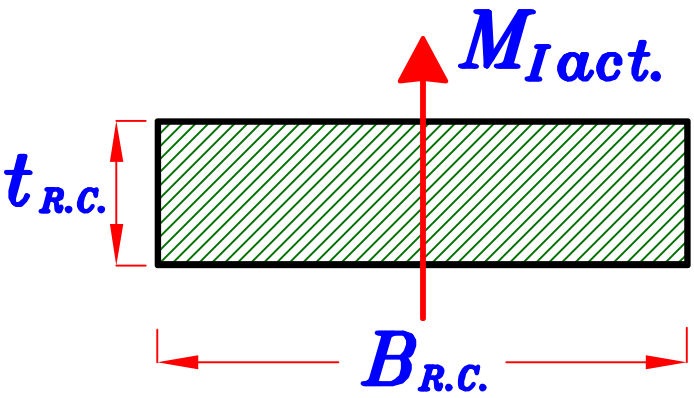

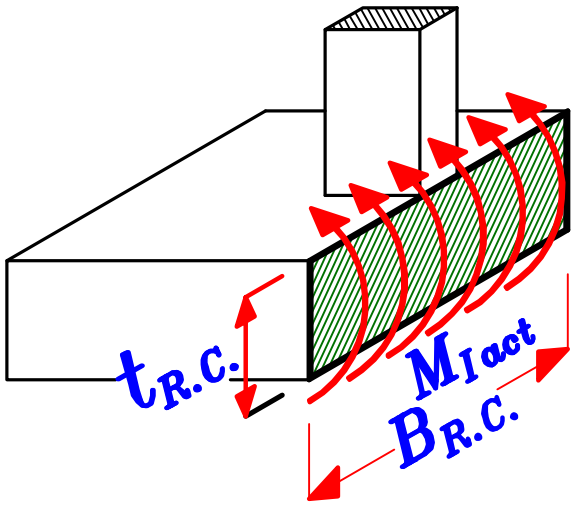

$$d_{I\,(mm)} = C_1 \sqrt{\frac{M_{I\,act.}\,(kN.m) * 10^6}{F_{cu}\,(N/mm^2) * B_{R.C.}\,(mm)}}$$

Choose $C_1 = (3.5 \rightarrow 5.0)$ Get $d_I = \checkmark\checkmark$ (mm)

Take cover = 70 mm

$t_{I\,R.C.} = d_I + cover\ (70\ mm)$ تقرب لاقرب ٥٠ مم بالزياده

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Direction II

$$z_{II} = \frac{B_{R.C.} - a}{2} \quad (m)$$

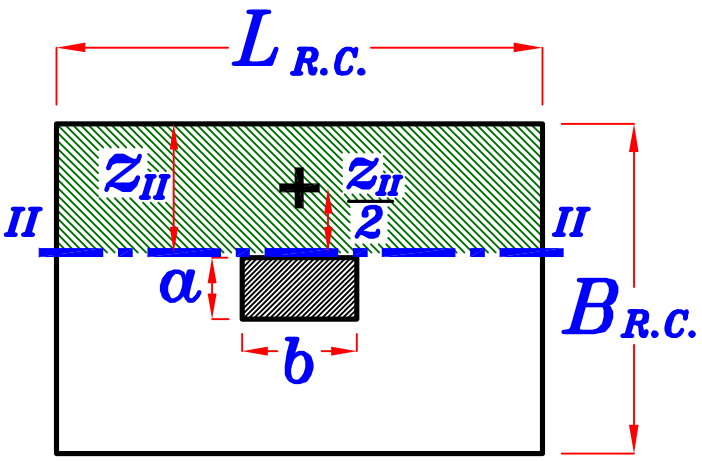

Get the average stress $F_{2av.}$

$$F_{2av.} = \frac{F_1 + F_2}{2}$$

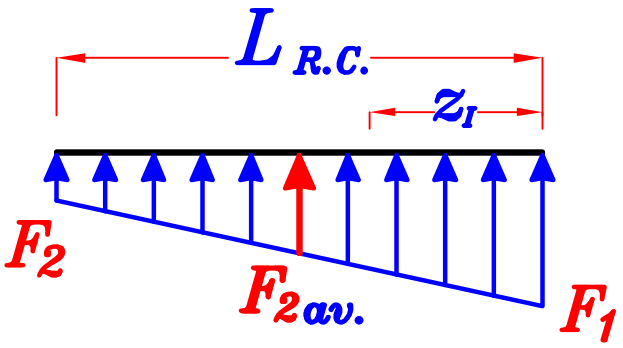

$$Force = Stress * Area$$

$$Force = F_{2av.} * z_{II} * L_{R.C.}$$

$$Moment = Force * Distance$$

$$M_{II\,act.} = \left(F_{2av.} * z_{II} * L_{R.C.}\right) \frac{z_{II}}{2} \quad (kN.m/L)$$

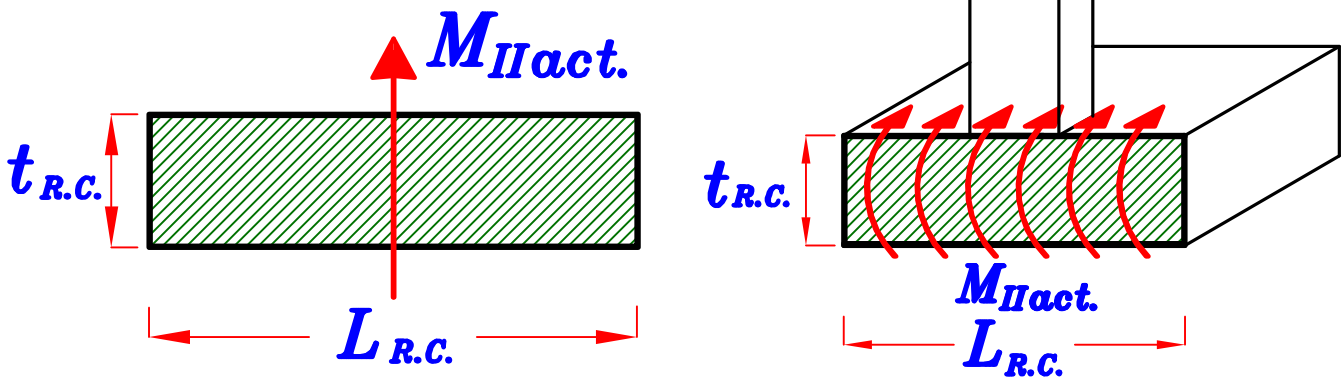

$$d_{II}\ (mm) = C_1 \sqrt{\frac{M_{II\,act.} * 10^6}{F_{cu} * L_{R.C.}}} \qquad Choose\ C_1 = (3.5 \rightarrow 5.0)$$

Get $d_{II} = \checkmark\checkmark$ (mm) Take cover = 70 mm

$$t_{II_{R.C.}} = d_{II} + cover\ (70\ mm)$$ بالزياده ٥٠ مم تقرب لاقرب

نأخذ الاكبر من $t_{I_{R.C.}}$ & $t_{II_{R.C.}}$ تكون هى $t_{R.C.}$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

3 – Check Shear.

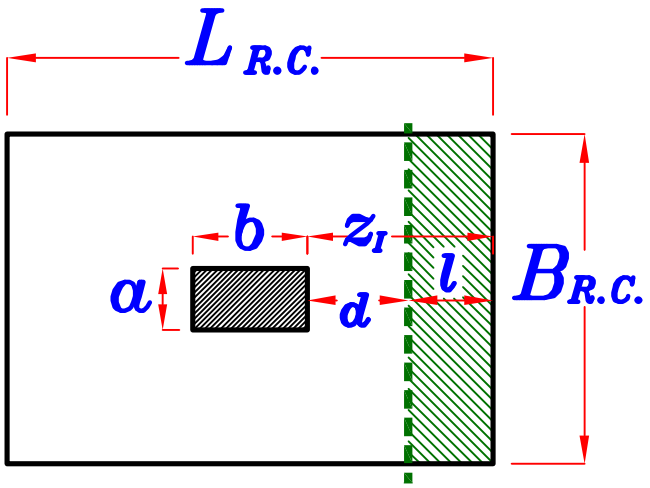

* Calculate $l = z_I - d$ (m)

* Calculate the shear stress at critical section.

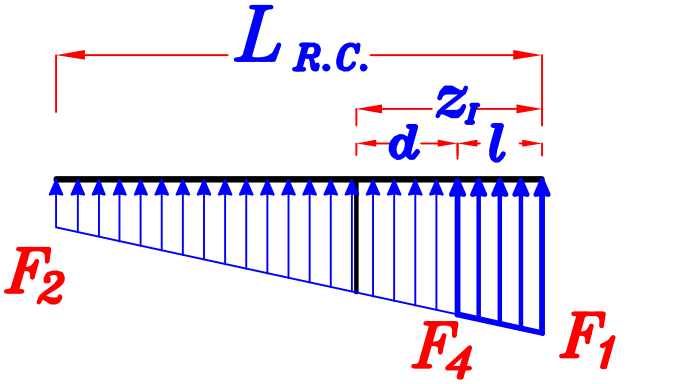

$$F_4 = \frac{L_{R.C.} - l}{L_{R.C.}} * (F_1 - F_2) + F_2$$

Get the average stress $F_{3av.}$

$$F_{3av.} = \frac{F_1 + F_4}{2}$$

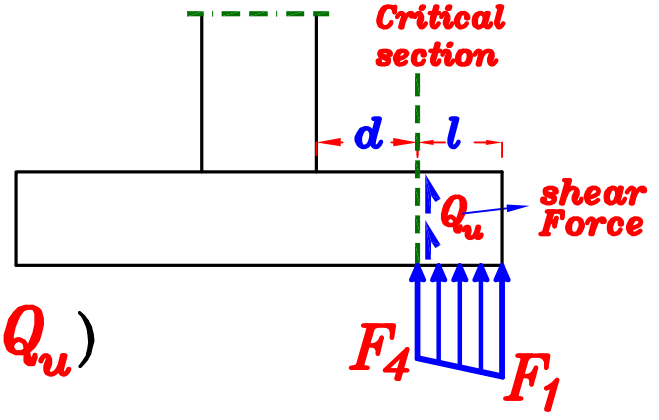

* Calculate Actual shear Force. (Q_u)

نحسب ل = ١,٠ م طولى من القاعده

$$Q_u = F_{3av.} * l * 1.0\ m \quad (kN)$$

* Calculate Actual shear stress. (q_u)

$$q_u = \frac{Q_u}{b * d}$$

$$q_u = \frac{Q_u\,(kN) * 10^3}{1000\,(mm) * d\,(mm)} \quad (N/mm^2)$$

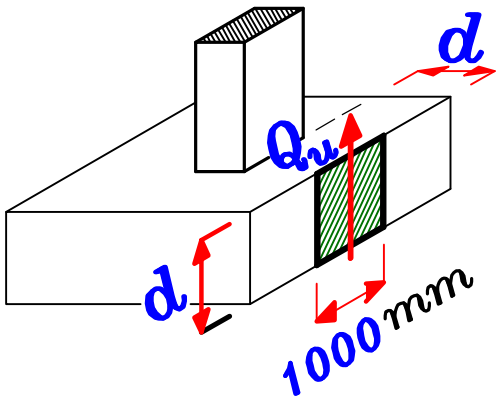

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

* Calculate Allowable shear stress. (q_{su})

$$q_{su} = 0.16\sqrt{\frac{F_{cu}}{\gamma_c}} \quad (N/mm^2)$$

* Compare between

Actual shear stress (q_u) & Allowable shear stress (q_{su})

* IF $q_u \leqslant q_{su}$ ⟶ Safe shear stresses

No need to increase dimensions.

* IF $q_u > q_{su}$ ⟶ UnSafe shear stresses

We have to increase dimensions.

IF UnSafe shear stresses increase $t_{R.C.}$ by 100 mm

then ReCheck:

Actual shear stress (q_u) & Allowable shear stress (q_{su})

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

4 – Check Punching Shear. القص الثاقب .

The concrete area which resist punching shear.

تحديد مساحه الخرسانه المقاومه للقص الثاقب .

القطاع الحرج فى القص الثاقب عباره عن محيط يحيط بالعمود على مسافه $\frac{d}{2}$ من وش العمود من كل جهه .

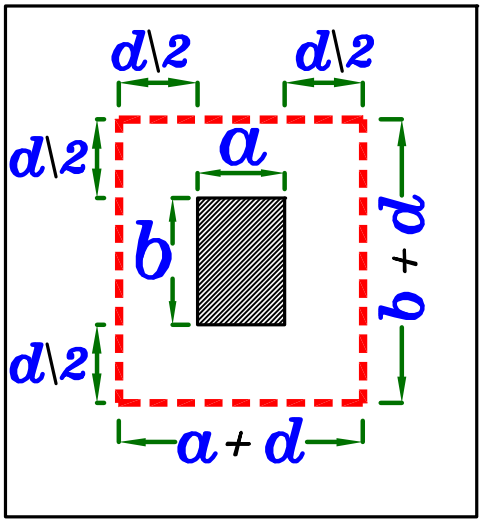

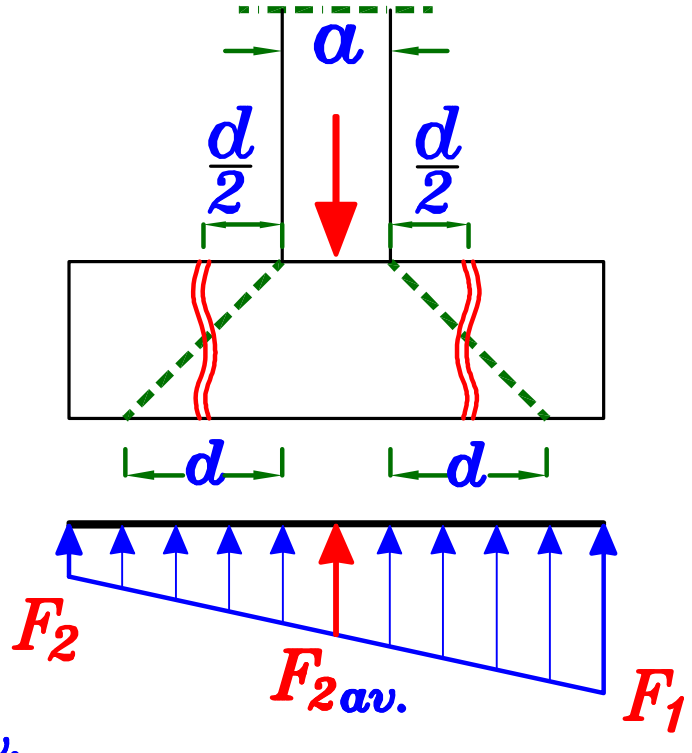

Get the average stress $F_{2av.}$

$$F_{2av.} = \frac{F_1 + F_2}{2}$$

* ***Calculate Punching Force.*** (Q_p)

$$Q_p = P_{U.L.} - (F_{2av.})\left[(a+d)(b+d)\right]$$

(kN)

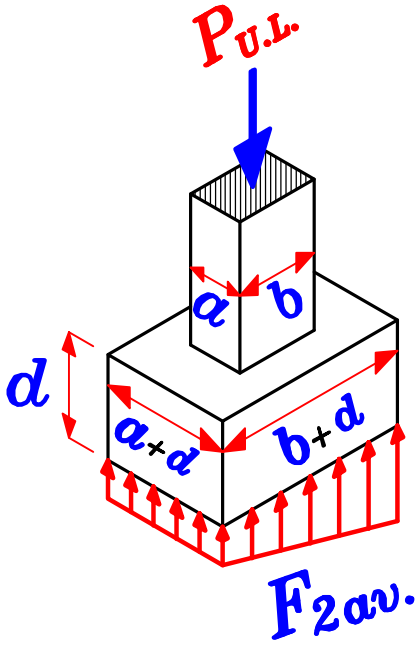

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

* Calculate Punching shear area. (A_p)

المحيط العمق

$$A_p = [2(a+d)+2(b+d)] * d \quad (mm^2)$$

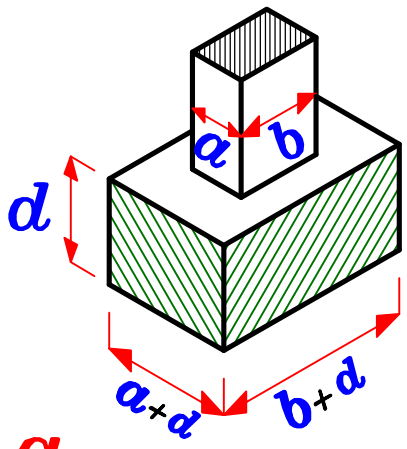

* Calculate Actual Punching shear stress. q_{pu}

$$q_{pu} = \frac{\text{Punching Force}}{\text{Punching area}}$$

$$q_{pu} = \frac{Q_p\ (kN) * 10^3}{[2(a+d)+2(b+d)] * d \quad (mm^2)} \quad (N/mm^2)$$

* Calculate allowable Punching shear stress. q_{pcu}

$$q_{pcu} = 0.316\ (0.5+\frac{a}{b})\ \sqrt{\frac{F_{cu}}{\delta_c}} \quad (N/mm^2)$$

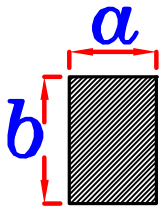

IF $(0.5+\frac{a}{b}) \leqslant 1.0$ Take $\longrightarrow$ $q_{pcu} = 0.316 \sqrt{\frac{F_{cu}}{\delta_c}}$ (N/mm^2)

---

* Compare between

Actual punching shear stress (q_{pu}) & Allowable punching shear stress (q_{pcu})

* IF $q_{pu} \leqslant q_{pcu} \longrightarrow$ Safe punching shear.
No need to increase dimensions.

* IF $q_{pu} > q_{pcu} \longrightarrow$ UnSafe punching shear.
We have to increase dimensions.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

5- Reinforcement of the Footing.

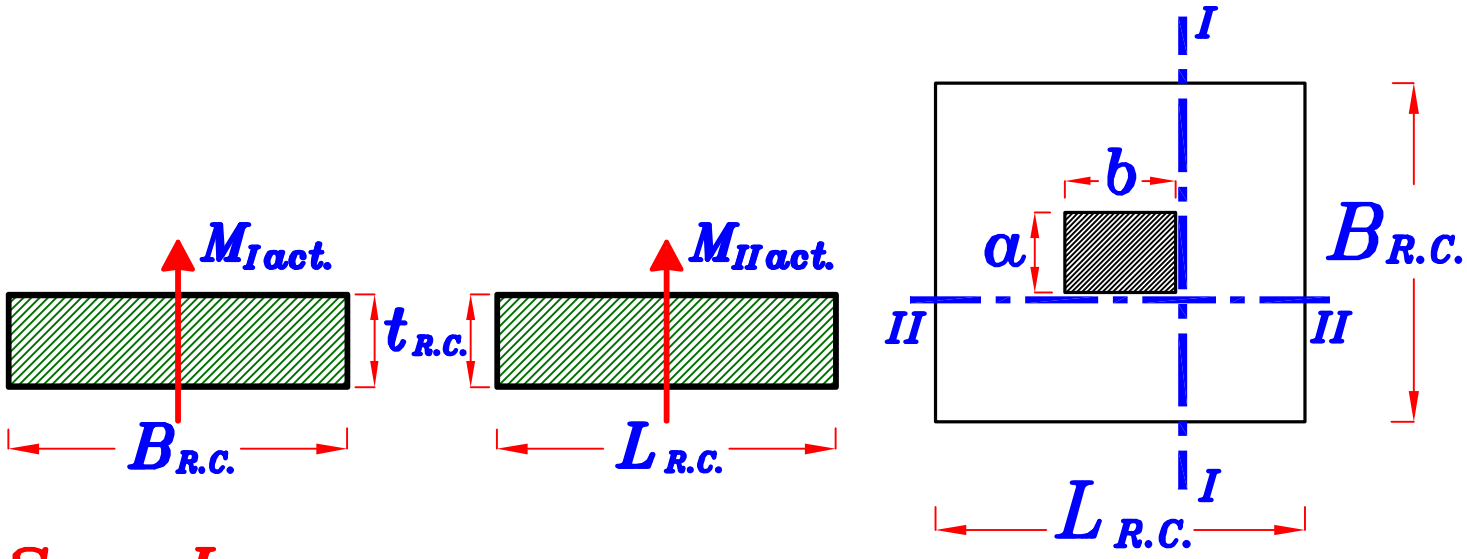

Sec. I

From Step ② We Choose $C_1 = (3.5 \rightarrow 5.0)$

From C_1 Get $\longrightarrow$ J

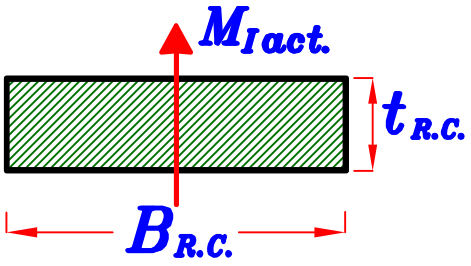

Get $$A_{sI} = \frac{M_{I\,act.}}{J\,F_y\,d} \quad (mm^2)$$

Check $A_{s\,min}$

$$A_{s\,min}\ (mm^2/m) = \left\{ \begin{array}{l} 1.5\,d\ (mm) \\ 5\,\phi\,12/m' \end{array} \right\} \text{الأكبر}$$

IF $A_{sI} \geqslant A_{s\,min} \longrightarrow$ o.k.

IF $A_{sI} < A_{s\,min} \longrightarrow$ Take $A_s = A_{s\,min}$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Sec. II

From Step ② We Choose $C_1 = (3.5 \rightarrow 5.0)$

From C_1 Get $\longrightarrow$ J

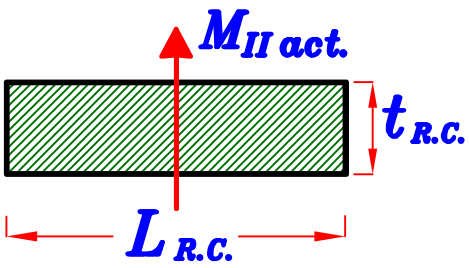

Get $$A_{s\,II} = \frac{M_{II\,act.}}{J\,F_y\,d} \quad (mm^2)$$

Check $A_{s\,min}$

$$A_{s\,min}\ (mm^2/m) = \left\{ \begin{array}{l} 1.5\,d\ (mm) \\ 5\,\phi\,12/m' \end{array} \right\} \text{الأكبر}$$

IF $A_{s\,II} \geqslant A_{s\,min} \longrightarrow$ o.k.

IF $A_{s\,II} < A_{s\,min} \longrightarrow$ Take $A_s = A_{s\,min}$

ملحوظه

$L - B = b - a$ فى حاله تحقيق الشرط

سيكون $\frac{M_{I\,act.}}{B} = \frac{M_{II\,act.}}{L}$ و بالتالى من الممكن حساب A_s فى اتجاه واحد فقط و يكون الاتجاه الاخر نفس القيمه $A_{s\,I} = A_{s\,II}$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

6- Details of Reinforcement.

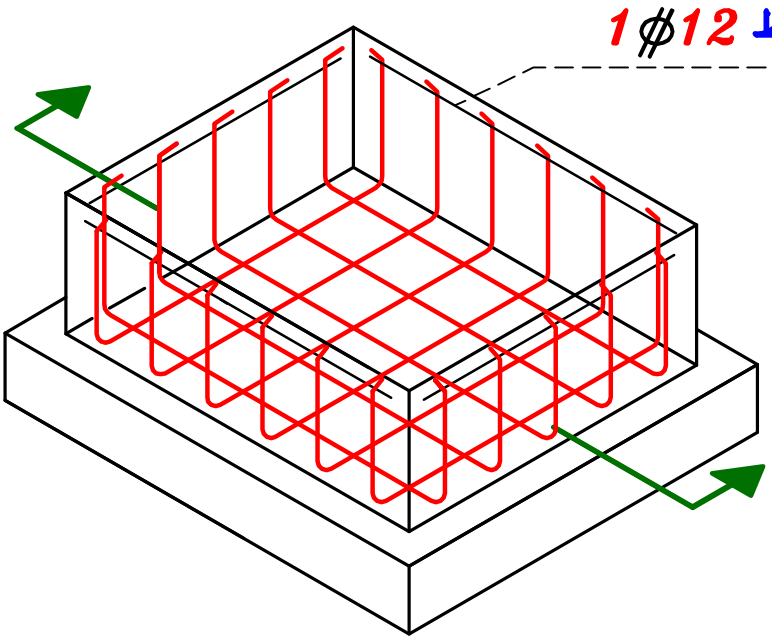

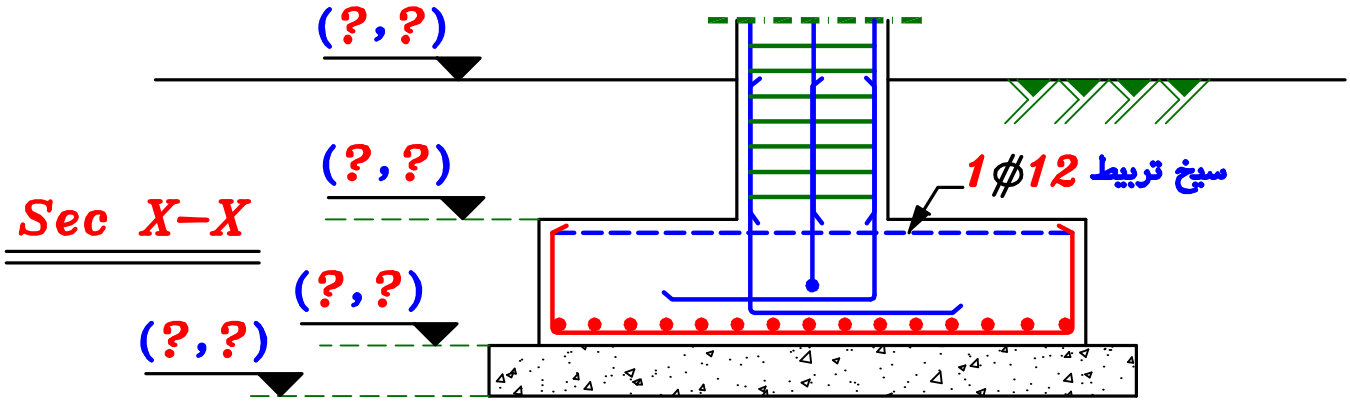

Sec X-X

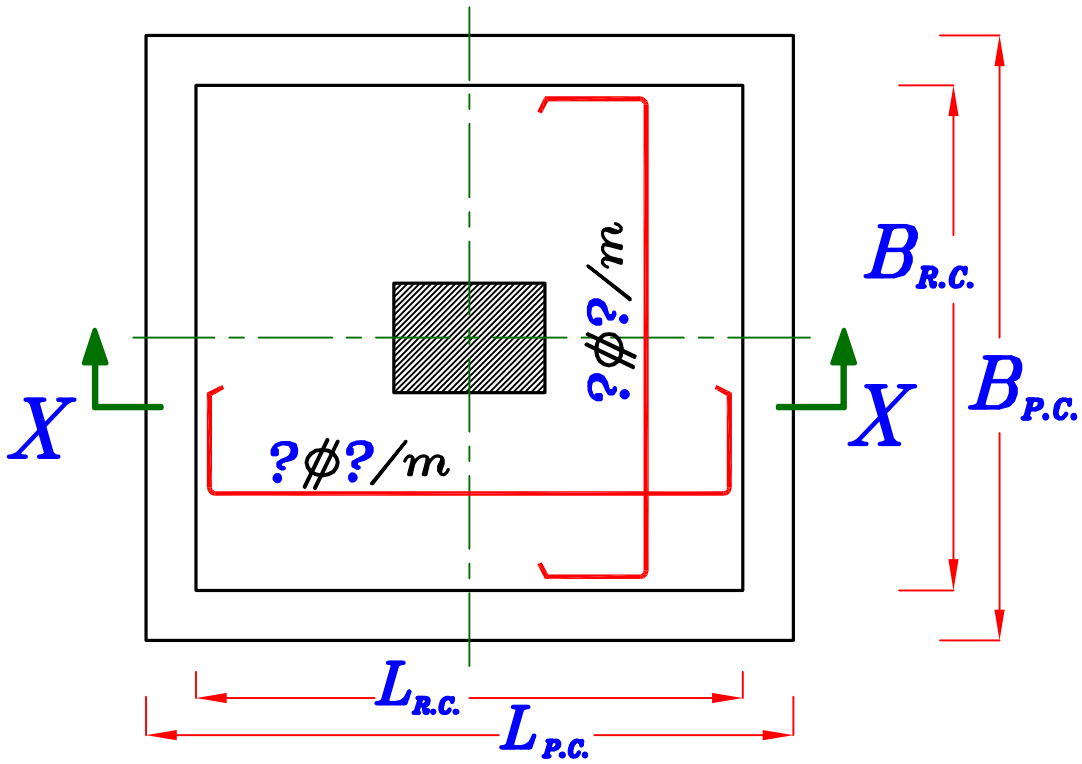

Plan

© Copyright Eng. Yasser El-Leathy 2010 . All rights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Example.

It is required to design a rectangular Footing to Support a R.C column of thickness $(40 * 70)$ cm.

The column working load is 1500 kN

and temporary moment $\rightarrow M_y = 400$ kN.m

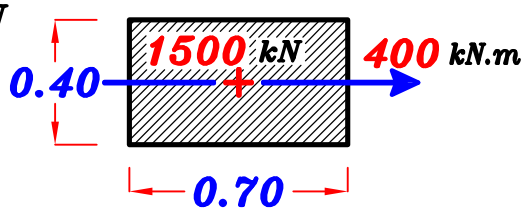

The allowable net bearing capacity in the Footing site is 150 kN/m^2. ($F_{cu} = 25$ N/mm^2, $F_y = 360$ N/mm^2).

and draw details of RFT. to scale 1:50

Solution.

Data given: Column dimensions $(400 * 700)$ mm

$P_{col.}$ (working) $= 1500$ kN $\qquad$ $P_{col.}$ (U.L.) $= 1500 * 1.5 = 2250$ kN

$M_y = 400$ kN.m $\qquad$ M_y (U.L.) $= 400 * 1.5 = 600$ kN.m

Bearing capacity of the soil $= q_{all} = 150$ kN/m^2

$F_{cu} = 25$ N/mm^2 $\qquad$ $F_y = 360$ N/mm^2

1– *Calculate the Footing area* (*Width & Length of R.C. Footing.*)

Choose $t_{P.C.} = 30$ cm > 20 cm

$L_{P.C.} - B_{P.C.} = b - a = 0.70 - 0.40 = 0.30$ m

$L_{P.C.} = B_{P.C.} + 0.30$ m ------(1)

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Actual Normal stress on soil = Bearing Capacity of soil.

$$F_1 = \frac{N}{B_{P.C.} * L_{P.C.}} + \frac{6\,M}{B_{P.C.} * L_{P.C.}^2} = q_{all} \quad \text{---} (2)$$

$$\frac{1500}{B_{P.C.} * L_{P.C.}} + \frac{6 * 400}{B_{P.C.} * L_{P.C.}^2} = 150 \quad \text{---} (2)$$

$$\therefore \frac{1500}{B_{P.C.} * (B_{P.C.} + 0.30)} + \frac{6 * 400}{B_{P.C.} * (B_{P.C.} + 0.30)^2} = 150$$

$$B_{P.C.} = 3.607\ m$$

$$\boxed{B_{P.C.} = 3.70\ m} \qquad \boxed{L_{P.C.} = 4.0\ m}$$

$$\boxed{B_{R.C.} = 3.10\ m} \qquad \boxed{L_{R.C.} = 3.40\ m}$$

Check . $F_1 = \frac{N}{B_{P.C.} * L_{P.C.}} + \frac{6\,M}{B_{P.C.} * L_{P.C.}^2} < q_{all} = 150$

$$F_1 = \frac{1500}{3.70 * 4.0} + \frac{6 * 400}{3.70 * (4.0)^2} = 141.9\ kN/m^2 < q_{all} \quad \boxed{o.k.}$$

$$F_2 = \frac{N}{B_{P.C.} * L_{P.C.}} - \frac{6\,M}{B_{P.C.} * L_{P.C.}^2} > Zero$$

$$F_2 = \frac{1500}{3.70 * 4.0} - \frac{6 * 400}{3.70 * (4.0)^2} = 60.81\ kN/m^2 > Zero \quad \boxed{o.k.}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

2– Design the critical sections For moment. (Depth of R.C. Footing.)

The actual ultimate Limits stresses on R.C. concrete.

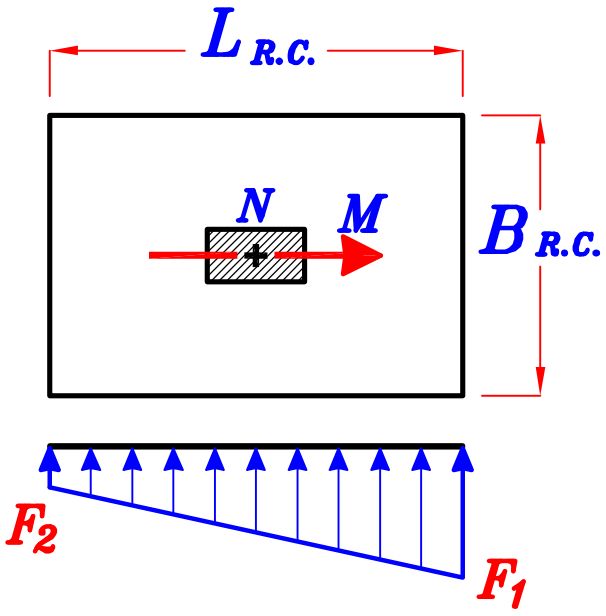

$$F_1 = \frac{N_{U.L.}}{B_{R.C.} * L_{R.C.}} + \frac{6\,M_{U.L.}}{B_{R.C.} * L_{R.C.}^{2}}$$

$$F_1 = \frac{2250}{3.10 * 3.40} + \frac{6 * 600}{3.10 * (3.40)^{2}} = 313.9 \ kN/m^2$$

$$F_2 = \frac{N_{U.L.}}{B_{R.C.} * L_{R.C.}} - \frac{6\,M_{U.L.}}{B_{R.C.} * L_{R.C.}^{2}}$$

$$F_2 = \frac{2250}{3.10 * 3.40} - \frac{6 * 600}{3.10 * 3.40^{2}} = 113.0 \ kN/m^2$$

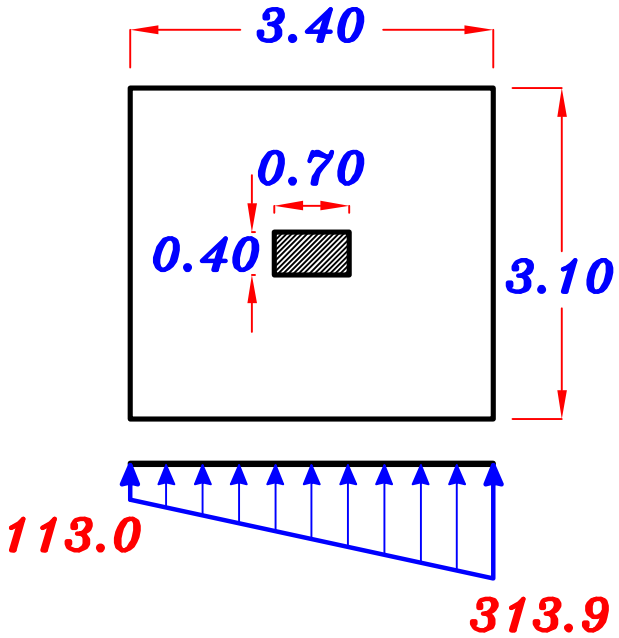

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Direction I

$$z_I = \frac{L_{R.C.} - b}{2} =$$

$$z_I = \frac{3.40 - 0.70}{2} = 1.35\ m$$

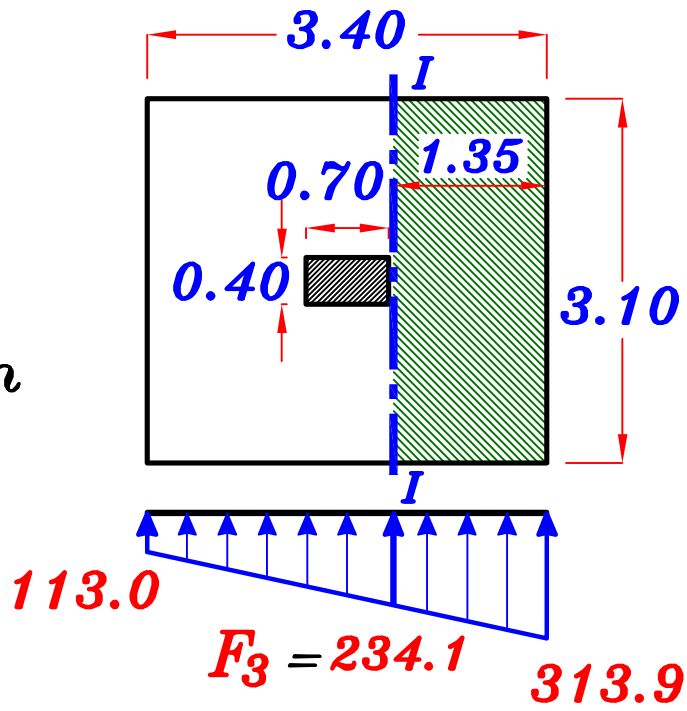

$$F_3 = \frac{L_{R.C.} - z_I}{L_{R.C.}} * (F_1 - F_2) + F_2$$

$$F_3 = \frac{3.40 - 1.35}{3.40} * (313.9 - 113.0) + 113.0 = 234.1\ kN/m^2$$

$$F_{1av.} = \frac{F_1 + F_3}{2}$$

$$F_{1av.} = \frac{313.9 + 234.1}{2} = 274.0\ kN/m^2$$

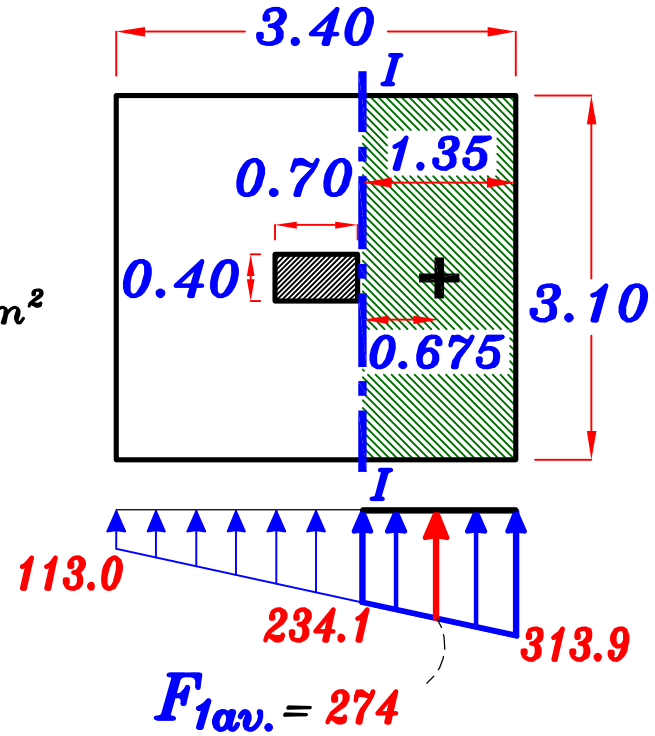

$$moment = Force * Distance$$

$$M_{I\,act.} = (F_{1av.} * z_I * B_{R.C.}) \frac{z_I}{2}$$

$$M_{I\,act.} = (274.0 * 1.35 * 3.10) \frac{1.35}{2} = 774.0\ kN.m$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

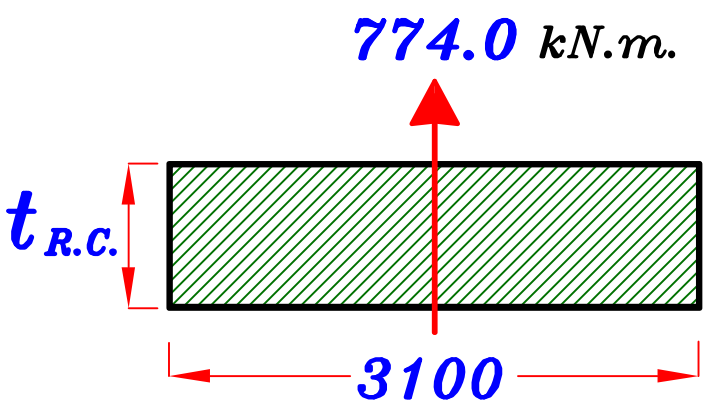

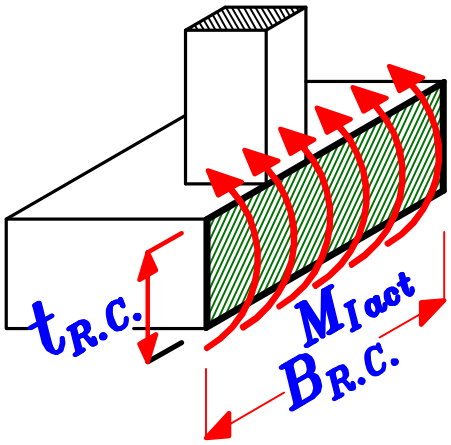

$$\because\ d_I = C_1 \sqrt{\frac{M_{I\,act.}}{F_{cu} * b}}$$

Choose $C_1 = 5.0$

$$\therefore\ d_I = 5.0 \sqrt{\frac{774.0 * 10^6}{25 * 3100}} = 499.6\ mm$$

Direction II

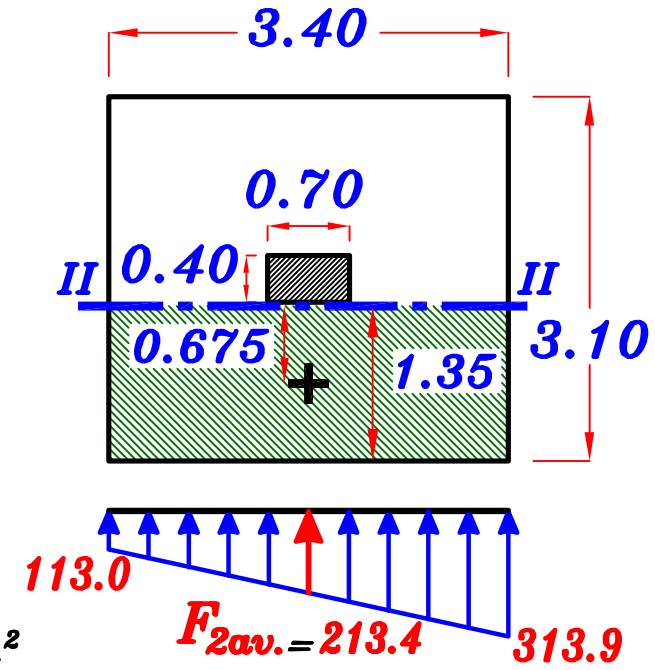

$$z_{II} = \frac{b_{R.C.} - a}{2} =$$

$$z_{II} = \frac{3.10 - 0.40}{2} = 1.35\ m$$

$$F_{2av.} = \frac{F_1 + F_2}{2}$$

$$F_{2av.} = \frac{313.9 + 113.0}{2} = 213.4\ kN/m^2$$

$$M_{II\,act.} = \left(F_{2av.} * z_{II} * L_{R.C.}\right) \frac{z_{II}}{2}$$

$$M_{II\,act.} = \left(213.4 * 1.35 * 3.40\right) \frac{1.35}{2} = 661.1\ kN.m$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

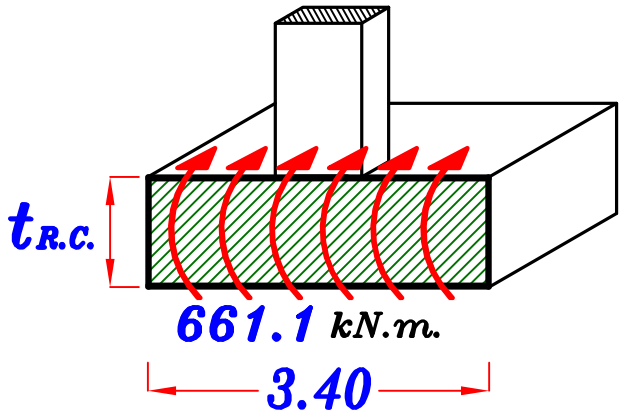

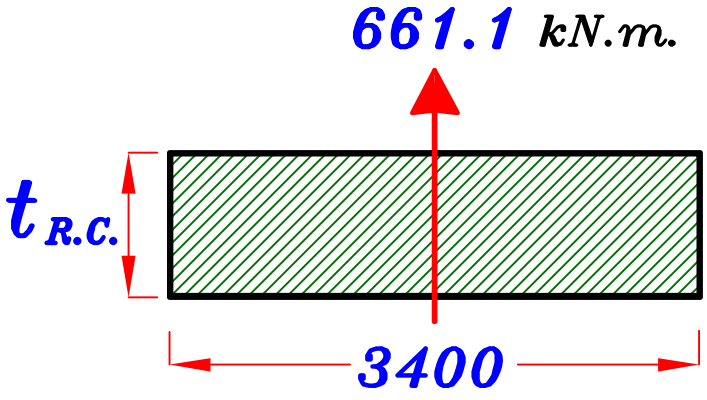

$$\because\ d = C_1 \sqrt{\frac{M_{act.}}{F_{cu} * b}}$$

Choose $C_1 = 5.0$

$$\therefore\ d = 5.0 \sqrt{\frac{661.1 * 10^6}{25 * 3400}} = 440.9\ mm$$

$$t_{R.C.} = d + 70\ mm = 499.6 + 70 = 569.6\ mm$$

$$t_{R.C.} = 600\ mm$$

$$d = 530\ mm$$

---

3 – Check Shear.

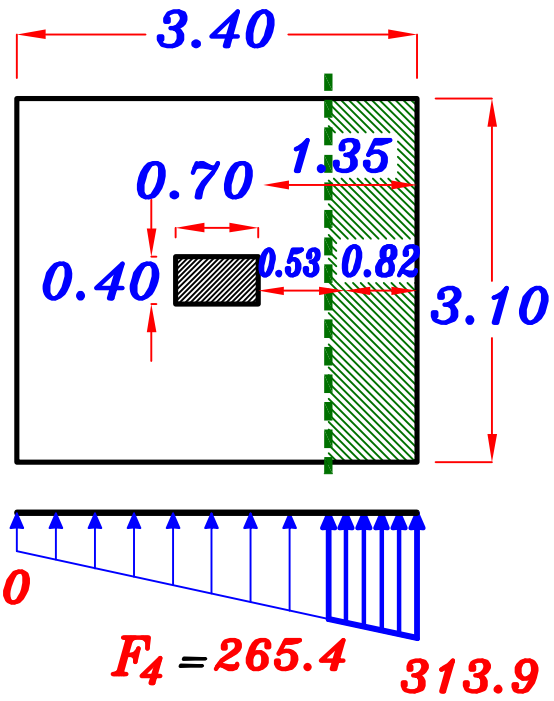

* Critical section For Shear.

$$l = z_I - d$$

$$l = 1.35 - 0.53 = 0.82\ m$$

* Calculate the shear stress at critical section.

$$F_4 = \frac{L_{R.C.} - l}{L_{R.C.}} * (F_1 - F_2) + F_2$$

$$F_4 = \frac{3.40 - 0.82}{3.40} * (313.9 - 113.0) + 113.0 = 265.4\ kN/m^2$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Get the average stress $F_{3av.}$

$$F_{3av.} = \frac{F_1 + F_4}{2}$$

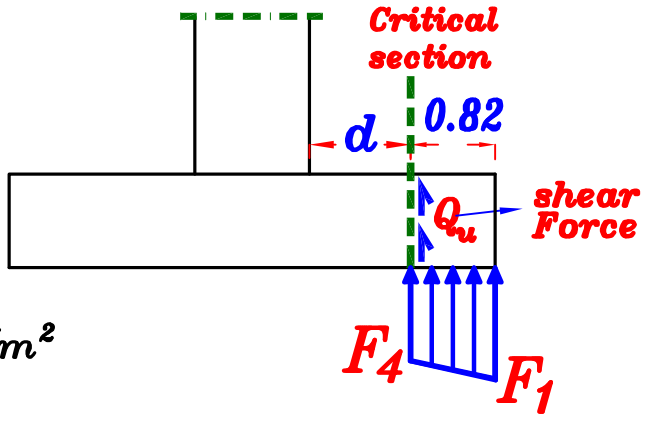

$$F_{3av.} = \frac{313.9 + 265.4}{2} = 289.6 \ kN/m^2$$

* Calculate Actual shear Force. (Q_u)

$$Q_u = F_{3av.} * l * 1.0\ m = 289.6 * 0.82 * 1.0\ m = 237.47\ kN$$

* Calculate Actual shear stress. (q_u)

$$q_u = \frac{Q_u}{b * d} = \frac{237.47 * 10^3}{1000 * 530} = 0.448 \ N/mm^2$$

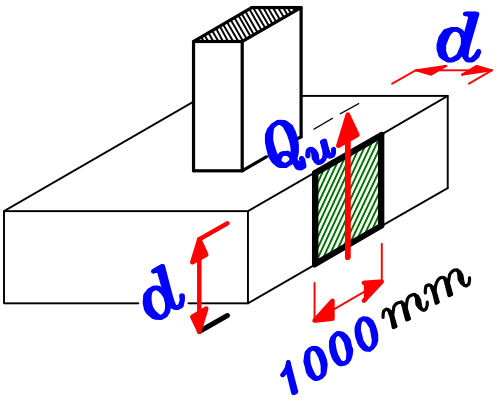

* Allowable shear stress. (q_{su})

$$q_{su} = 0.16\sqrt{\frac{F_{cu}}{\delta_c}} = 0.16\sqrt{\frac{25}{1.5}} = 0.653 \ N/mm^2$$

$q_u < q_{su}$ ⟶ Safe shear stresses

No need to increase dimensions.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

4 – Check Punching Shear.

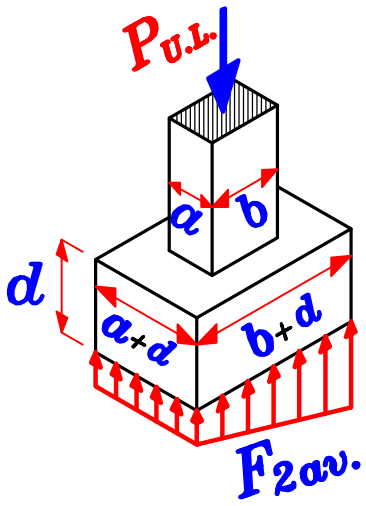

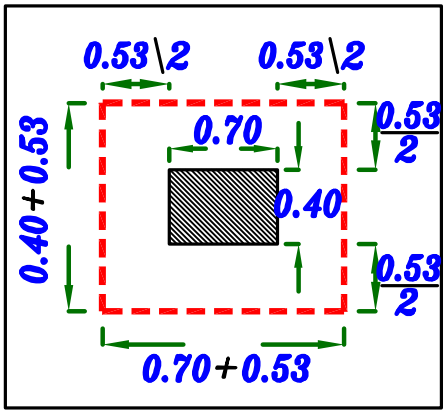

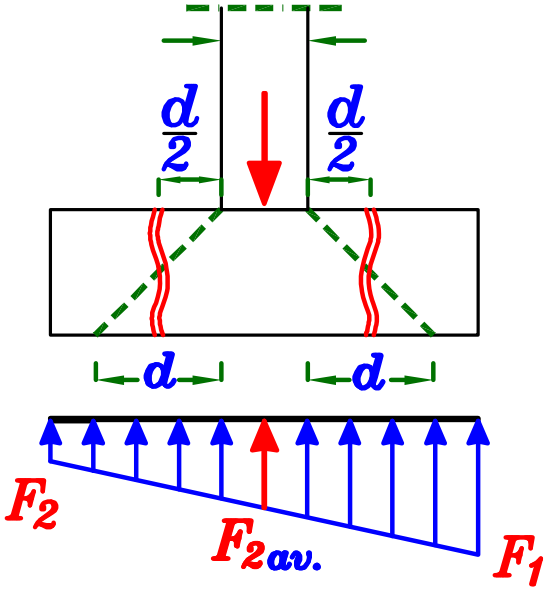

$$F_{2av.} = \frac{F_1 + F_2}{2} = \frac{313.9 + 113.0}{2} = 213.4 \ kN/m^2$$

$$a + d = 0.40 + 0.53 = 0.93 \ m$$

$$b + d = 0.70 + 0.53 = 1.23 \ m$$

* Calculate Punching Force. (Q_p)

$$Q_p = P_{U.L.} - (F_{2av}) [(a+d)(b+d)]$$

$$Q_p = 2250 - 213.4 [0.93 * 1.23] = 2005.9 \ kN$$

* Calculate Punching shear area. (A_p)

$$A_p = [2(a+d) + 2(b+d)] * d$$

$$A_p = [2(400+530) + 2(700+530)] * 530$$

$$A_p = 2289600 \ mm^2$$

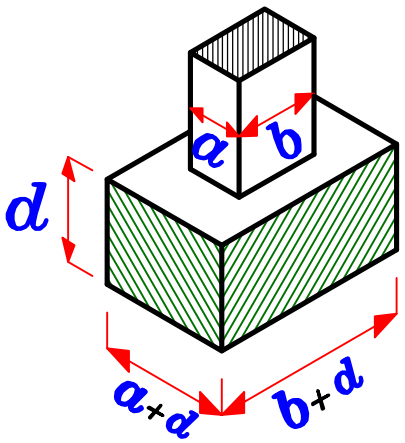

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

* Calculate Actual Punching shear stress. q_{pu}

$$q_{pu} = \frac{Q_p}{[2(a+d)+2(b+d)] * d}$$

$$q_{pu} = \frac{2005.9 * 10^3}{2289600} = 0.876 \ N/mm^2$$

* Calculate allowable Punching shear stress. q_{pcu}

$$q_{pcu} = 0.316 \left(0.5 + \frac{a}{b}\right) \sqrt{\frac{F_{cu}}{\delta_c}} =$$

$$q_{pcu} = 0.316 \left(0.5 + \frac{0.40}{0.70}\right) \sqrt{\frac{25}{1.5}} = 1.38 \ N/mm^2$$

$q_{pu} \leqslant q_{pcu} \longrightarrow$ Safe punching shear.
No need to increase dimensions.

5- Reinforcement of the Footing.

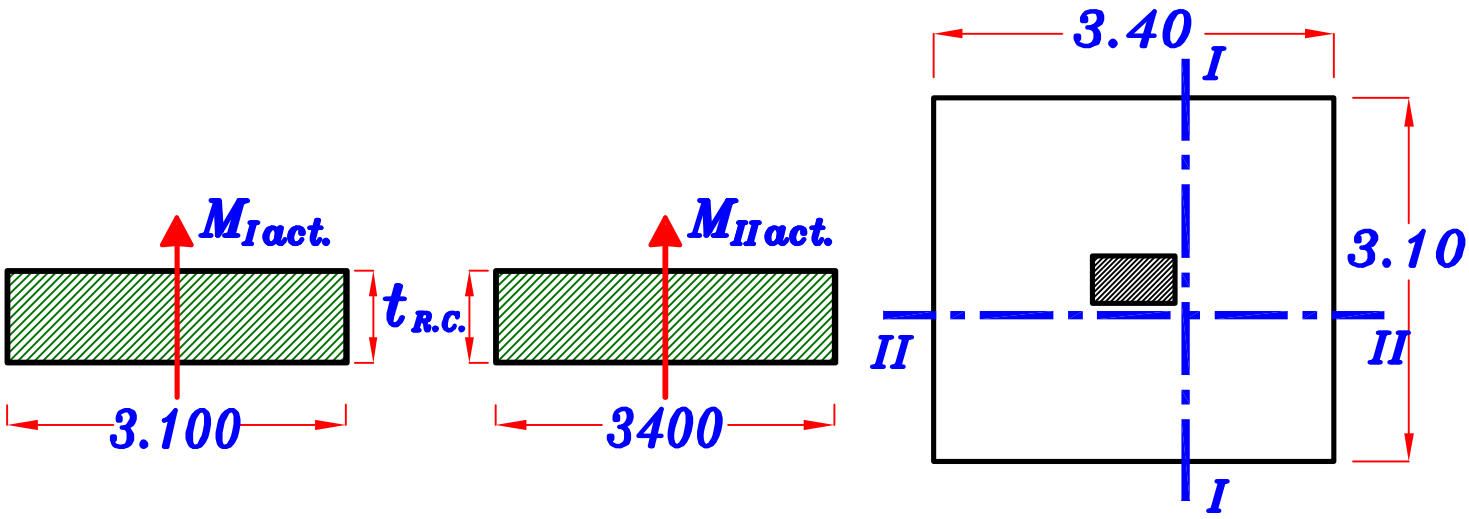

© Copyright Eng. Yasser El-Leathy 2010 . All rights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$$M_{I\,act.} = 774.0\ kN.m$$

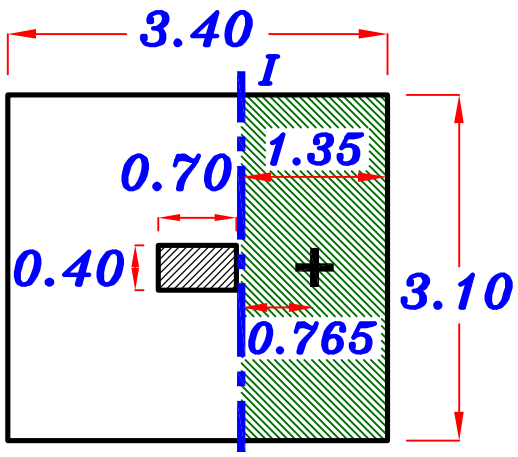

$$J = 0.826$$

$$A_S = \frac{M_{I\,act.}}{J\,F_y\,d} = \frac{774.0 * 10^6}{0.826 * 360 * 530} = 4911.1\ mm^2$$

$$A_S\ (mm^2/m) = \frac{A_S}{B_{R.C.}} = \frac{4911.1}{3.10} = 1584.2\ mm^2/m`$$

Check $A_{S\,min}$

$$A_{S\,min} = \left\{ \begin{array}{l} 1.5\,d = 1.5 * 530 = 790 \\ 5\,\phi\,12/m` = 565 \end{array} \right\} 790\,mm^2$$

$$\therefore\ A_S > A_{S\,min} \longrightarrow o.k.$$

$$A_S = 1584.2\ mm^2 \qquad \boxed{7\,\phi\,18/m`}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$$M_{II\,act.} = 661.1 \ kN.m$$

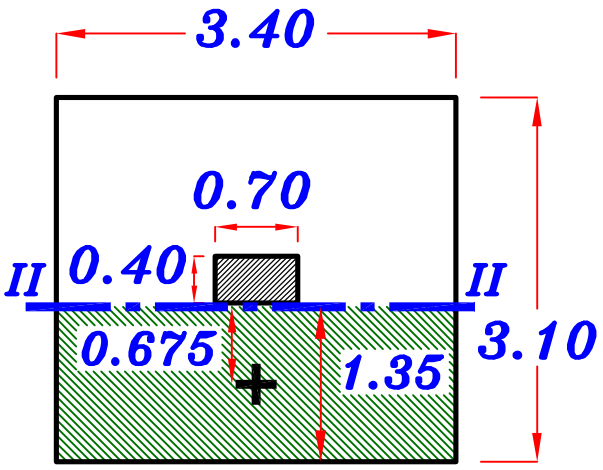

$$J = 0.826$$

$$A_S = \frac{M_{II\,act.}}{J\ F_y\ d} = \frac{661.1 * 10^6}{0.826 * 360 * 530} = 4194.7 \ mm^2$$

$$A_S \ (mm^2/m) = \frac{A_S}{B_{R.C.}} = \frac{4194.7}{3.40} = 1233.7 \ mm^2/m`$$

Check $A_{S\,min}$

$$A_{S\,min} = \left\{ \begin{array}{l} 1.5\,d = 1.5 * 530 = 790 \\ 5\,\phi\,12/m` = 565 \end{array} \right\} 790 mm^2$$

$$\therefore \ A_S > A_{S\,min} \longrightarrow o.k.$$

$$A_S = 1233.7 \ mm^2 \qquad \boxed{5\,\phi\,18/m`}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

6- Details of Reinforcement.

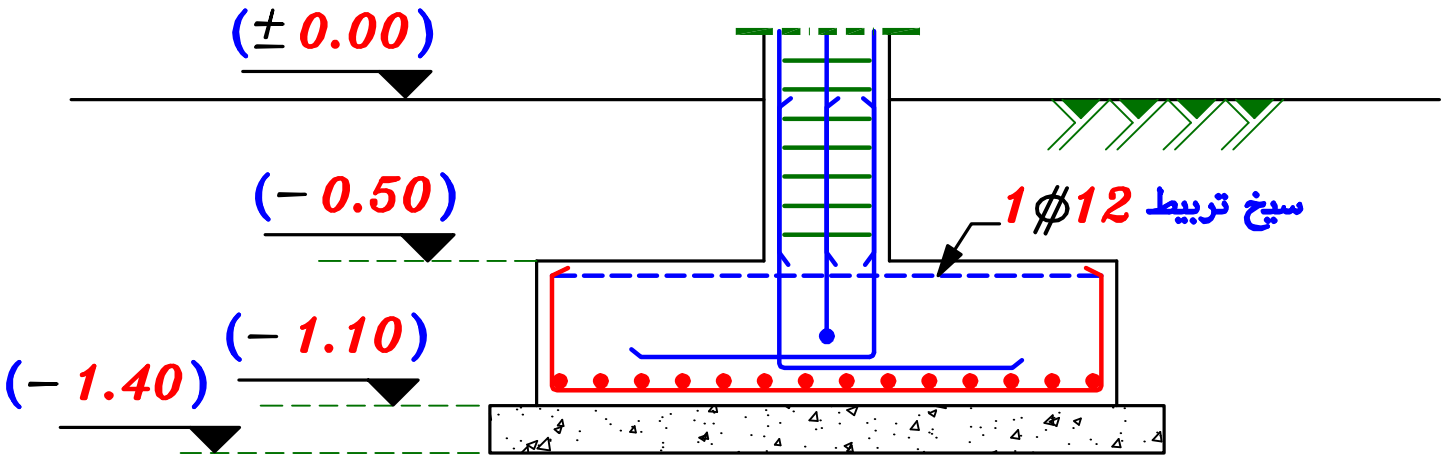

Sec X-X

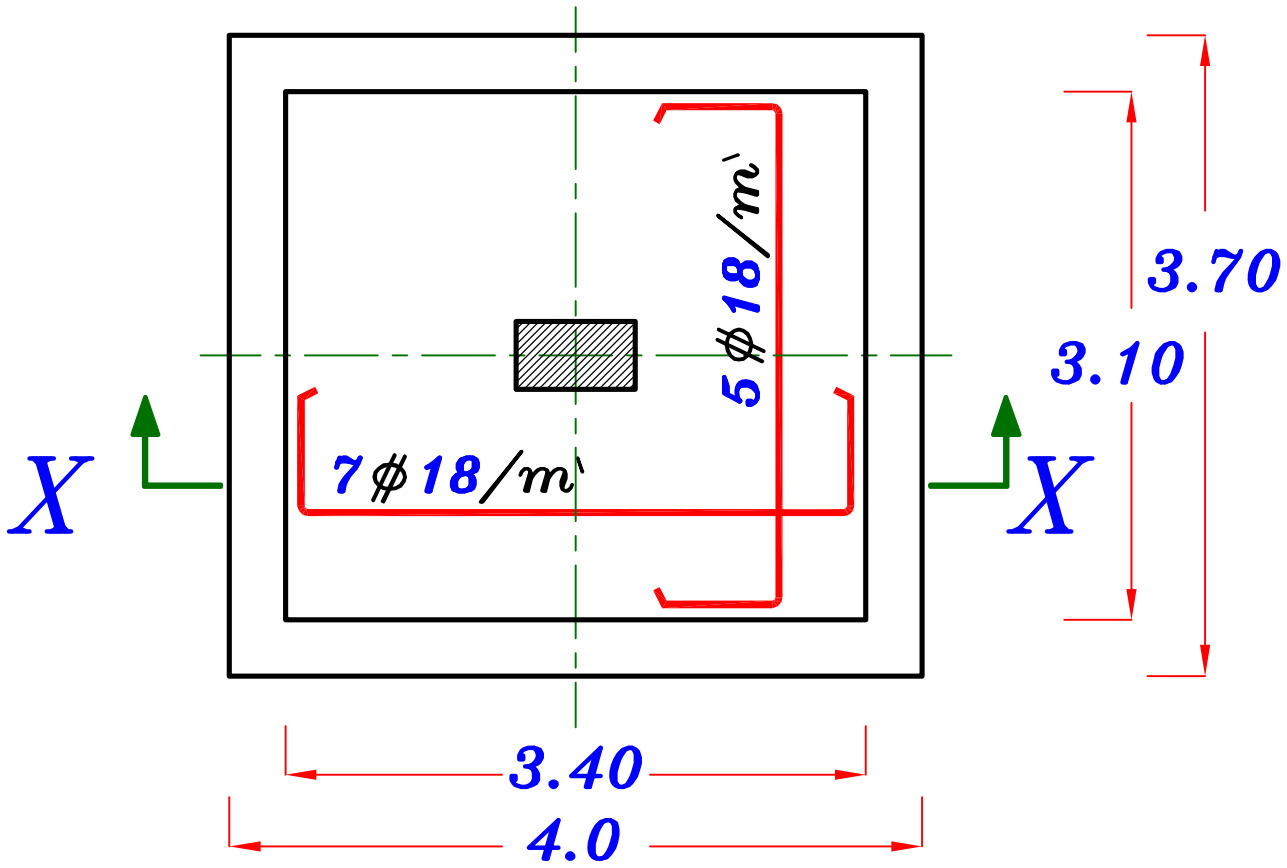

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

5 Design of Combined Footings.

تصميم القواعد المشتركه .

- القاعده المشتركه (*Combined Footing*) هى عباره عن قاعده واحده كبيره تحمل أكثر من عمود واحد و غالبا يكون شكلها مستطيل .

- عاده نحتاج لعمل قواعد مشتركه عند تداخل أكثر من قاعده منفصله .

أى عند تحديد أبعاد الـ *R.C.* لقاعدتين منفصلتين لعمودين متجاورين و وجد أن القاعدتين سوف يتداخلان معا و هو ما لا يمكن تنفيذه لذلك نلجاء لاستبدال القاعدتين المنفصلتين بقاعده واحده كبيره مشتركه بين العمودين .

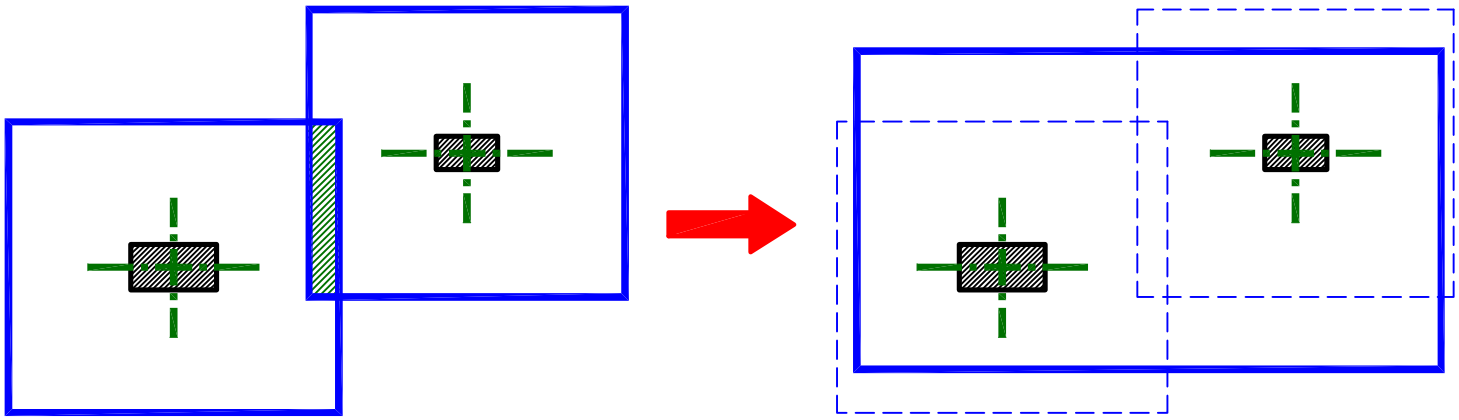

R.C. Isolated Footings *R.C. Combined Footing*

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

The basic concept to design Combined Footings.

المبدأ الرئيسى لتصميم القواعد المشتركه .

نحاول قدر المستطاع أن يكون مركز الاحمال

يقع تماما عند *C.G.* القاعده المسلحه .

حتى يكون على التربه اجهادات منتظمه *Uniform stresses*

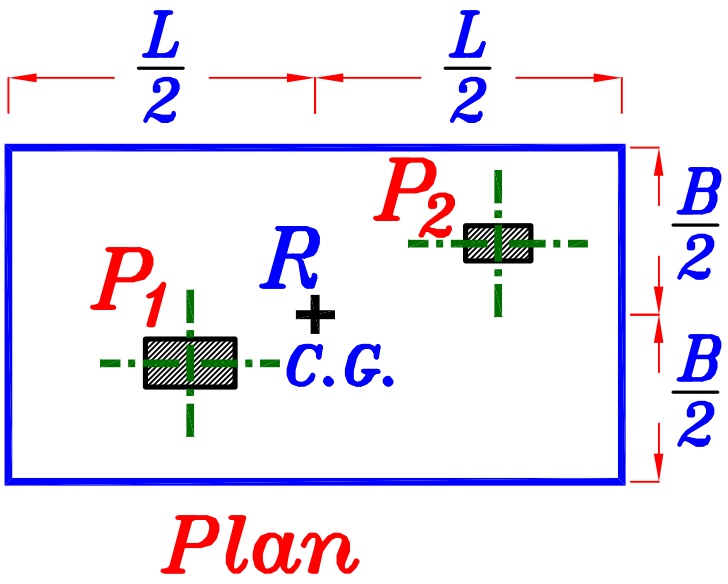

Plan

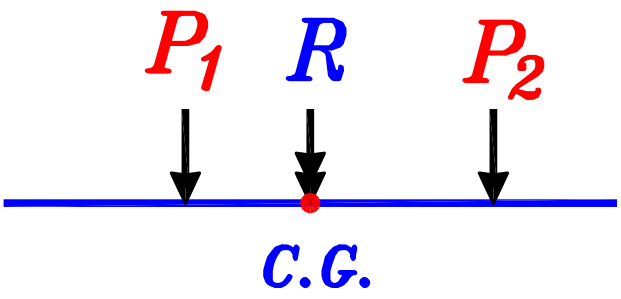

حل صعب أن تكون القاعده
موازيه لاضلاع الاعمده .

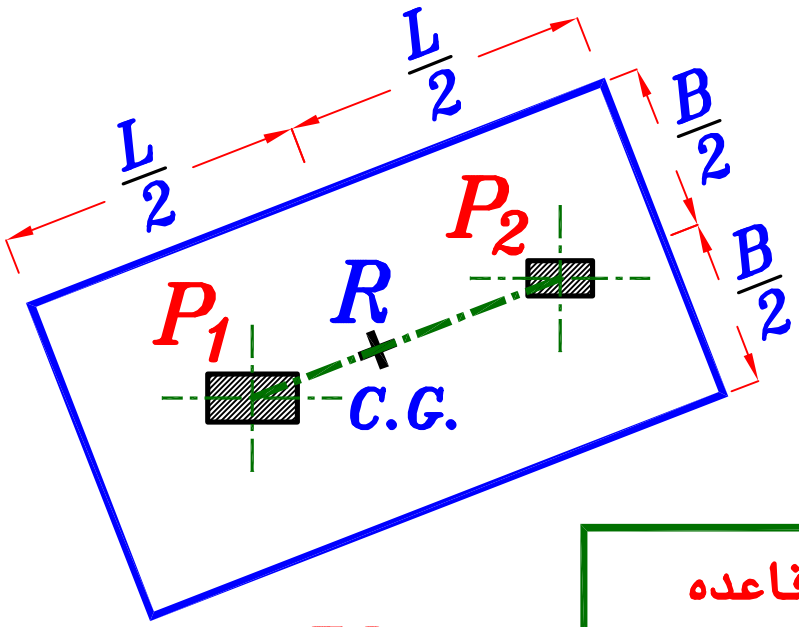

Plan

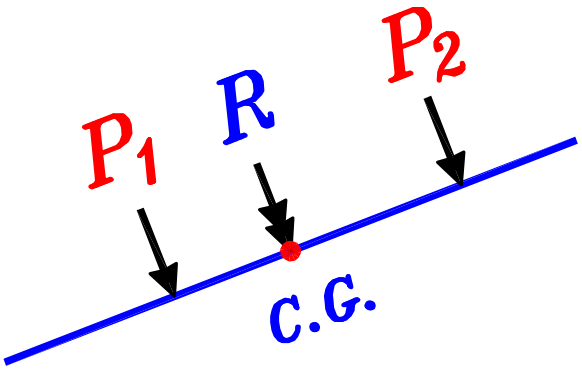

حل اسهل أن يكون اتجاه القاعده
موازى للخط الواصل بين العمودين .

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Steps of design of rectangular combined Footing.

1– Calculate the Footing area. (Width & Length of R.C. Footing.)

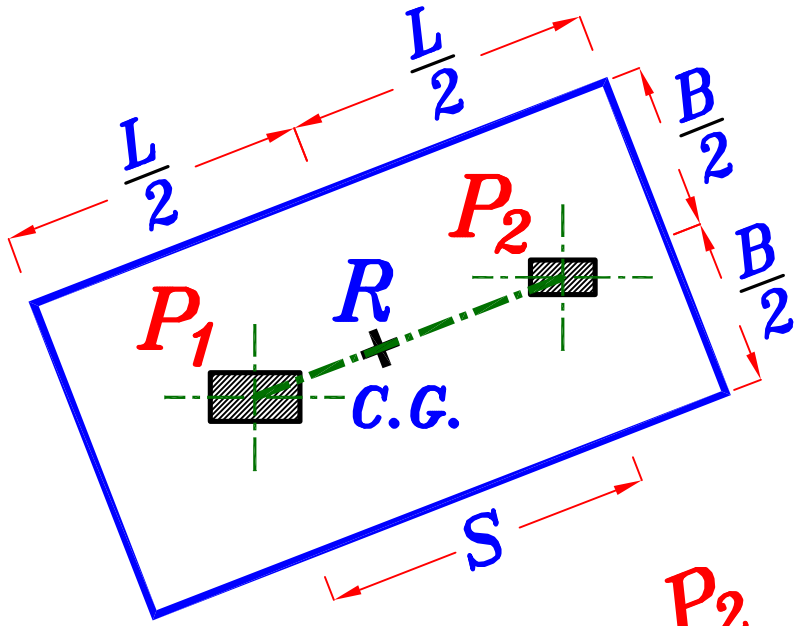

Plan

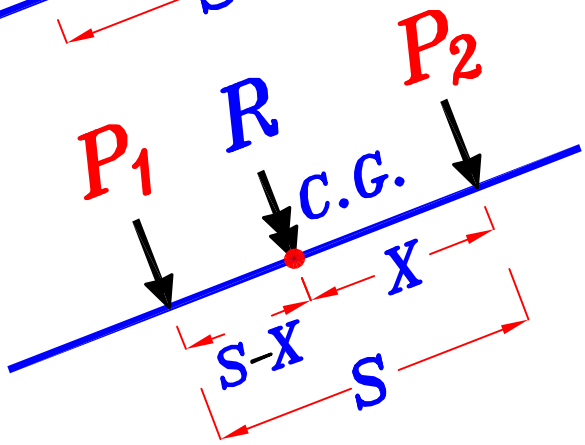

$$R = P_1 + P_2$$

R يتم حساب قيمه محصله الاحمال

X يتم تحديد مكان محصله الاحمال

$$R * X = P_1 * S \longrightarrow X = \frac{P_1}{R} * S$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

نأخذ طول القاعده المسلحه بحيث تكون نهايتها بعد وش العمود الخارجى بمسافه $(0.50\,m \longrightarrow 1.0\,m)$ من جهه الحمل الاصغر .

مثلا فى هذا المثال P_2 هو الاصغر .

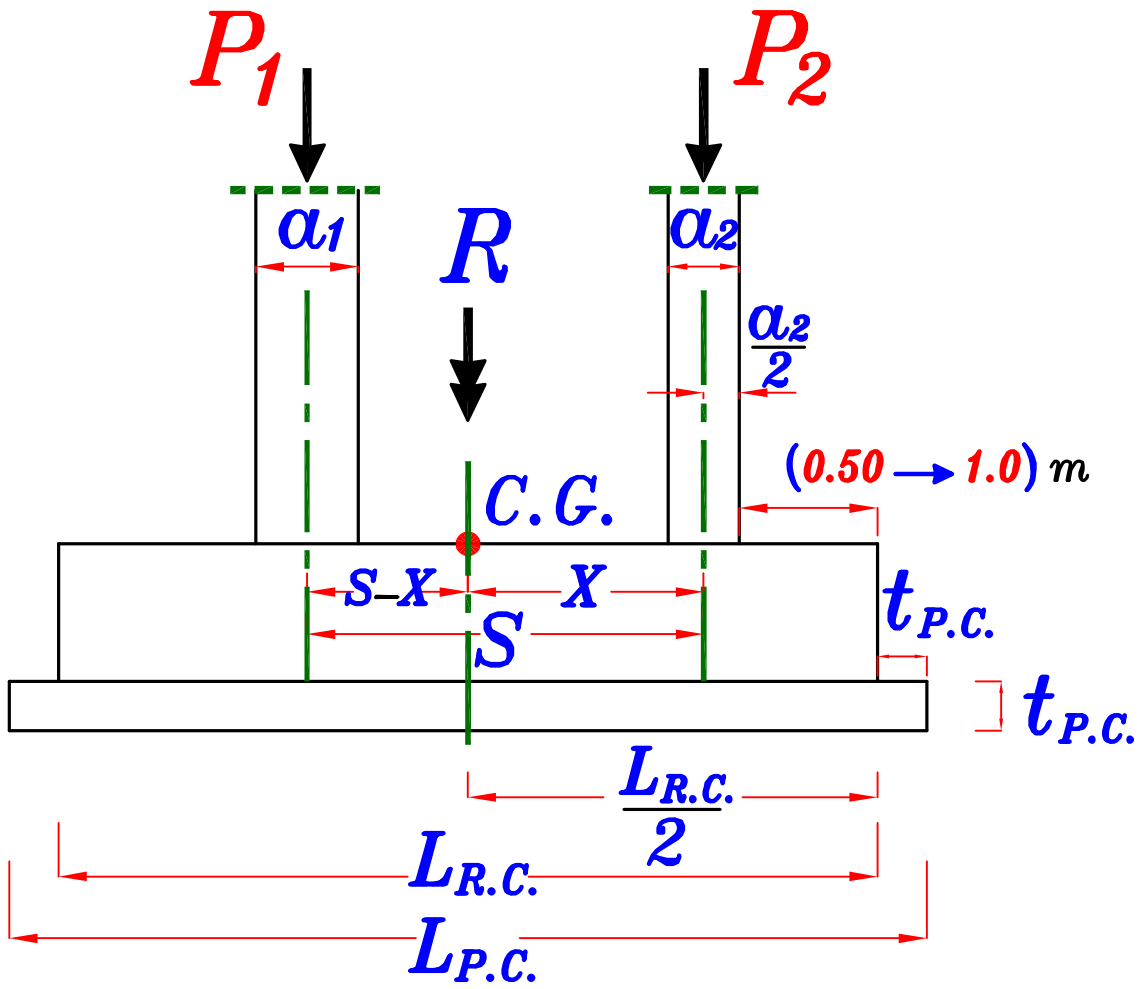

$$\frac{L_{R.C.}}{2} = (X) + \frac{a_2}{2} + (0.50 \longrightarrow 1.0)\,m \longrightarrow \boxed{L_{R.C.} = \checkmark}$$

$$\therefore \boxed{L_{P.C.} = L_{R.C.} + 2\,t_{P.C.}}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Calculate the width of the Footing. B

IF $t_{P.C.} \geq 20\ cm$ get $B_{P.C.}$ From

$$A_{P.C.} = \frac{R_w}{q_{all}} = \checkmark\ m^2 = B_{P.C.} * L_{P.C.} \longrightarrow \boxed{B_{P.C.} = \checkmark}$$

$$\boxed{B_{R.C.} = B_{P.C.} - 2\ t_{P.C.}}$$

IF $t_{P.C.} < 20\ cm$ get $B_{R.C.}$ From

$$A_{R.C.} = \frac{R_w}{q_{all}} = \checkmark\ m^2 = B_{R.C.} * L_{R.C.} \longrightarrow \boxed{B_{R.C.} = \checkmark}$$

$$\boxed{B_{P.C.} = B_{R.C.} + 2\ t_{P.C.}}$$

2– Design the critical sections For moment. (Depth of R.C. Footing.)

$$P_{1U.L.} = 1.5 * P_{1w}\ ,\ P_{2U.L.} = 1.5 * P_{2w}\ ,\ R_{U.L.} = 1.5 * R_w$$

– **Actual Normal stress on R.C. Footing (U.L.)**

$$\boxed{F_{act.} = \frac{R_{U.L.}}{B_{R.C.} * L_{R.C.}}} \quad (kN/m^2)$$

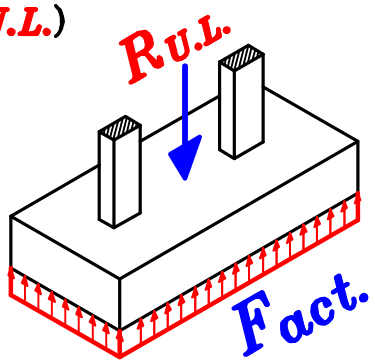

– **Actual Uniform Load on R.C. Footing (U.L.) as a beam.**

$B_{R.C.}$ نعتبر أن القاعده عباره عن كمره بعرض

$$\boxed{w_{U.L.} = \frac{R_{U.L.}}{L_{R.C.}}} \quad (kN/m`)$$

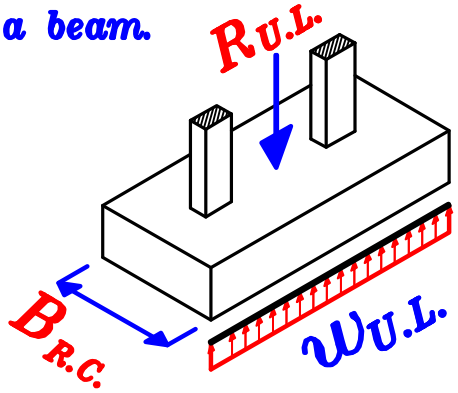

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Longitudinal direction.

نعتبر أن القاعده عباره عن كمره بعرض $B_{R.C.}$

يتم رسم ***B.M.D. , S.F.D.*** للقاعده كلها كأنها كمره بعرض $B_{R.C.}$

و يتم حساب قيم ***B.M. , S.F.*** على وش الاعمده .

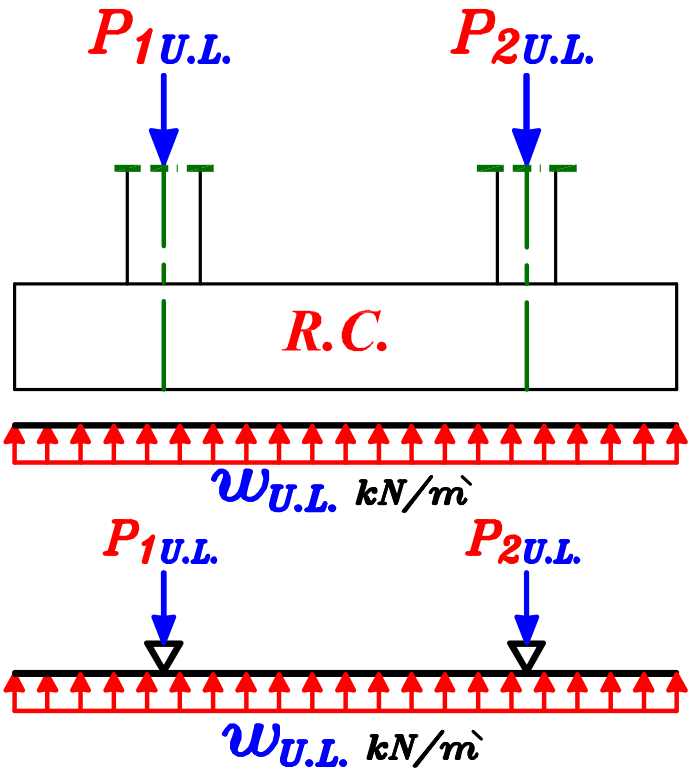

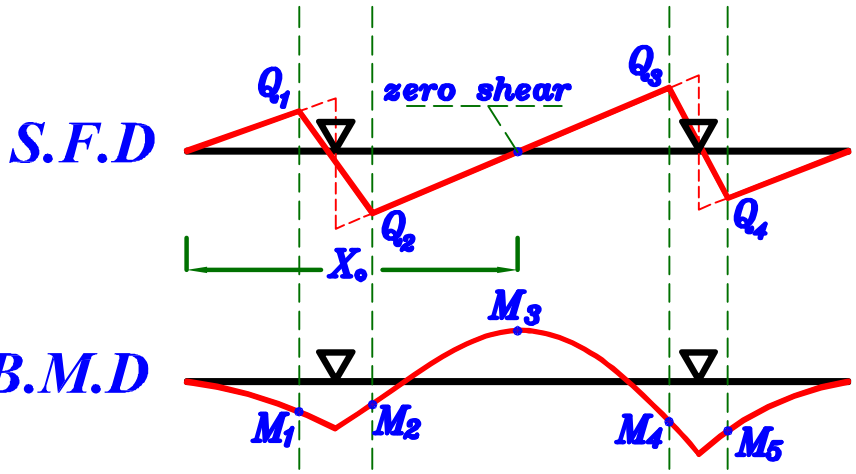

لتحديد أكبر ***moment*** فى منتصف القاعده M_3

يتم تحديد مكان نقطه ***zero shear*** أى حساب المسافه X_o

$$P_{1\,U.L.} = w_{U.L.} * X_o \longrightarrow X_o = \checkmark \longrightarrow M_3 = \checkmark$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Get M_{max}

نحسب أكبر moment على القاعده كلها . M_{max}

M_{max} is the biggest moment of M_1, M_2, M_3, M_4, M_5

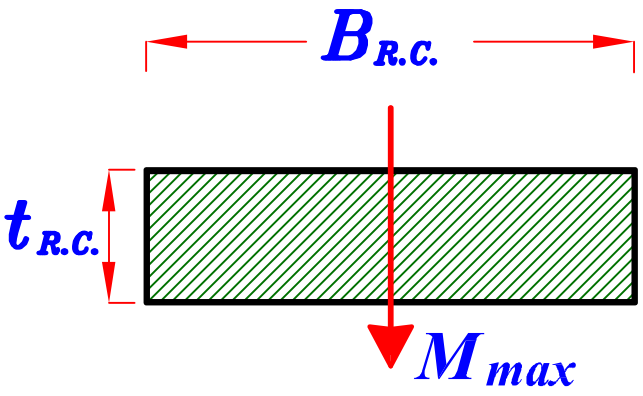

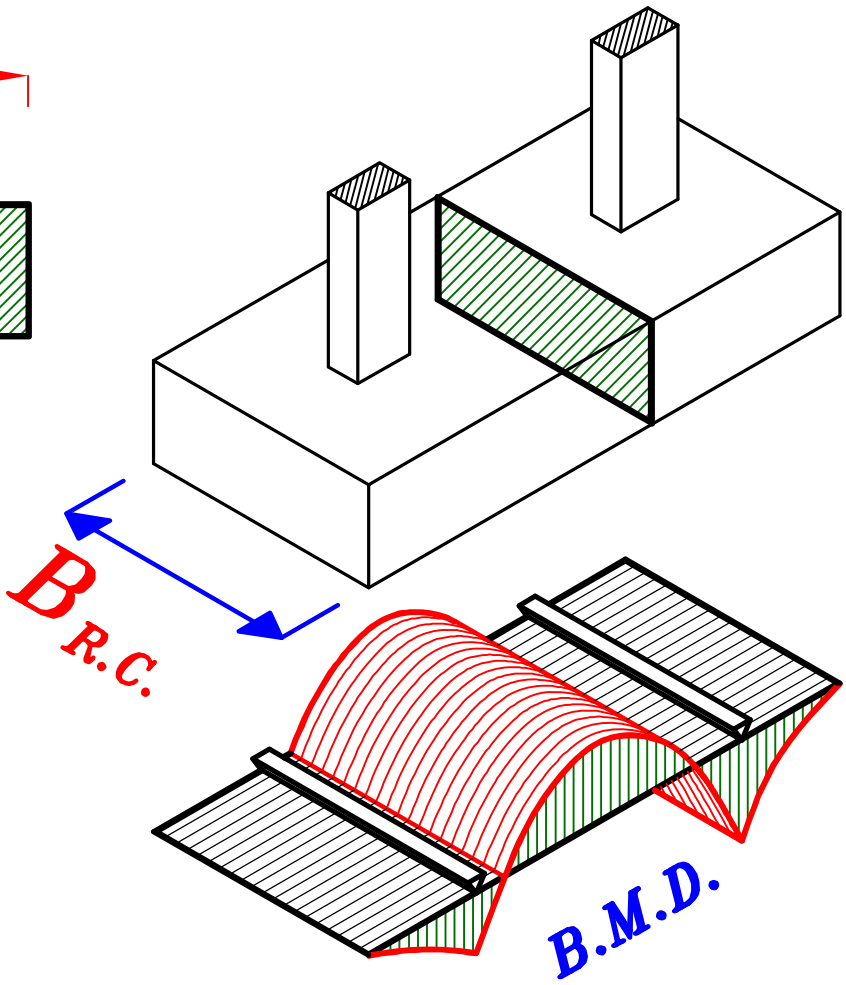

$$d_{(mm)} = C_1 \sqrt{\frac{M_{max}\,(kN.m) * 10^6}{F_{cu}\,(N/mm^2) * B_{R.C.}\,(mm)}}$$

Choose $C_1 = (3.5 \rightarrow 5.0)$

C_1 يفضل فى القواعد أن نختار قيمه كبيره لـ
حتى تكون تخانه القاعده كبيره
لضمان أن تكون القاعده Rigid

Get $d = \surd\surd$ (mm)

Take cover = 70 mm

يفضل أن يكون الـ cover فى القواعد كبير
لحمايه الحديد من الصداء .

$$t_{R.C.} = d + cover\ (70\ mm)$$

تقرب لاقرب ٥٠ مم بالزياده

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Check depth in Transverse direction. Short direction.

As a Hidden Beam.

نعتبر القاعده أسفل كل عمود كأنها كمره مدفونه (Hidden Beam)

أبعادها أسفل العمود $L * B_{R.C.}$

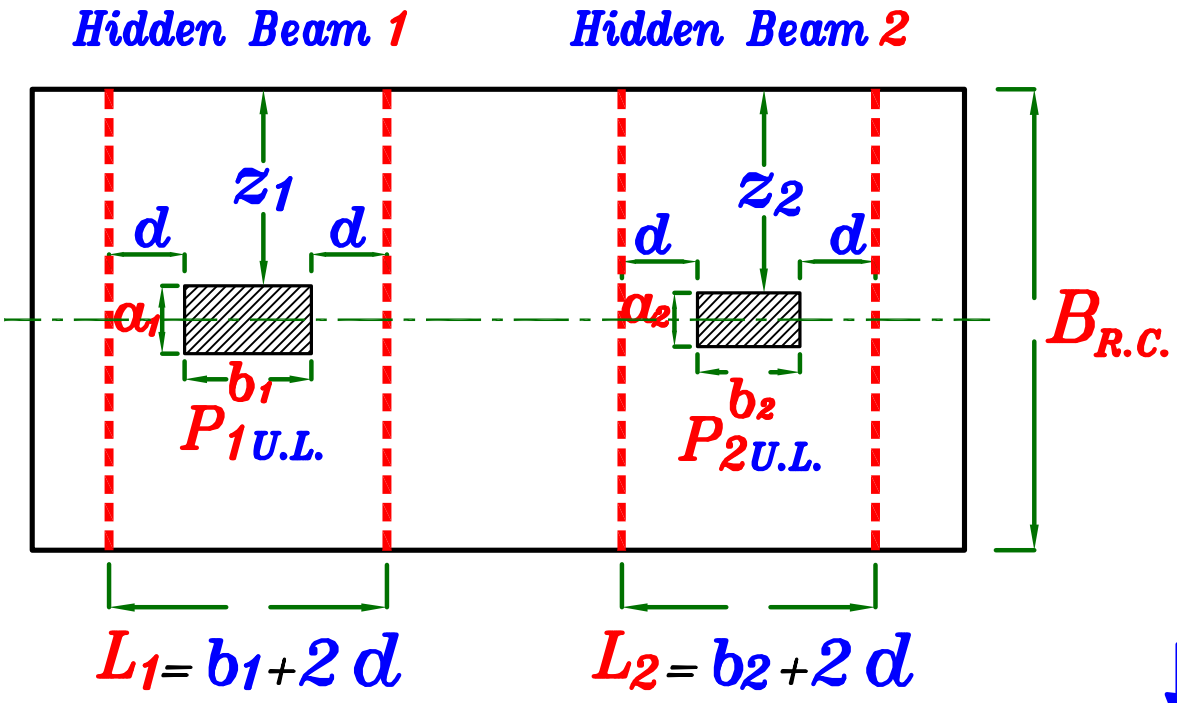

Hidden Beam 1

$$F_{1act.} = \frac{P_{1U.L.}}{B_{R.C.} * L_1} \quad (kN/m^2)$$

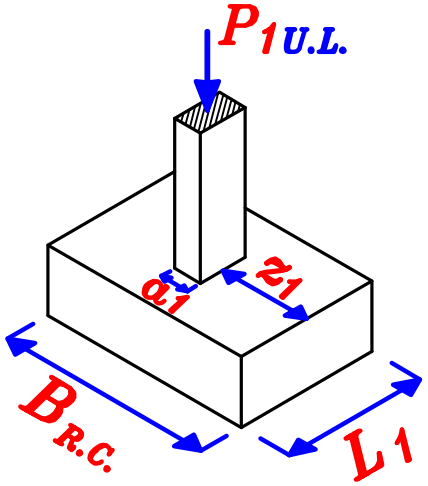

$$z_1 = \frac{B_{R.C.} - a_1}{2} \quad (m)$$

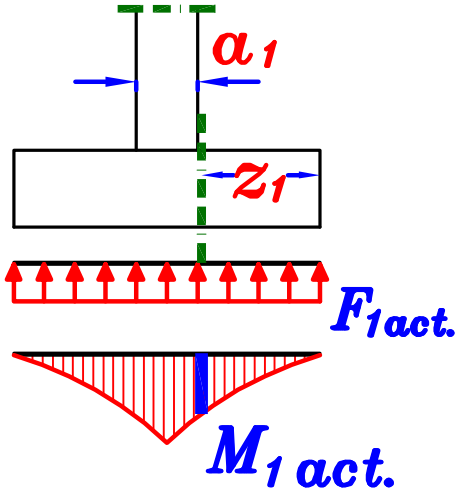

$$M_{1act.} = (F_{1act.} * z_1 * 1.0\,m)\ \frac{z_1}{2}$$

$(kN.m/1.0\,m)$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Hidden Beam 2

$$F_{2act.} = \frac{P_{2U.L.}}{B_{R.C.} * L_2} \quad (kN/m^2)$$

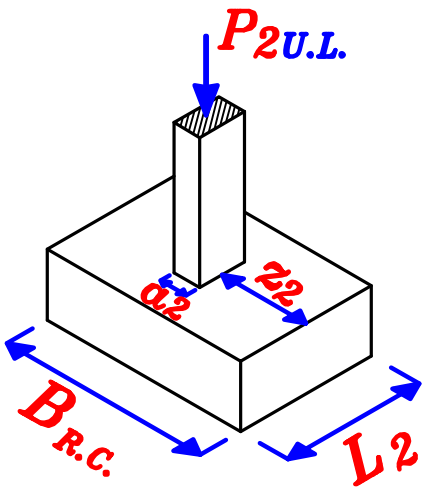

$$z_2 = \frac{B_{R.C.} - a_2}{2} \quad (m)$$

$$M_{2act.} = (F_{2act.} * z_2 * 1.0\,m)\ \frac{z_2}{2}$$

$(kN.m/1.0\,m)$

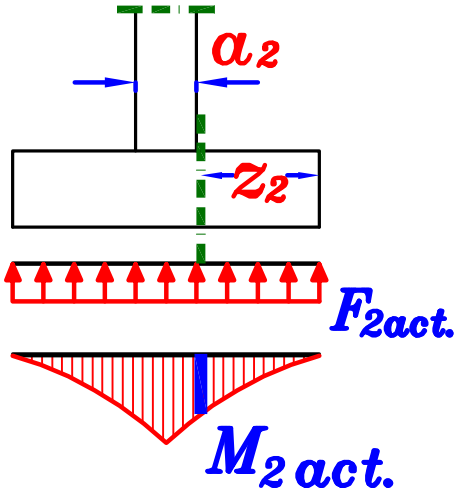

M2 act.

Choose M_{bigger} The bigger value of $M_{1act.}$ & $M_{2act.}$

$$d = C_1 \sqrt{\frac{M_{bigger} * 10^6}{F_{cu} * 1000}} \longrightarrow \text{Get} \longrightarrow C_1$$

Then Check on $C_1 \not< 3.0$

IF $C_1 < 3.0 \longrightarrow$ Increase d

and Recheck the transverse direction.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

3 – Check Shear. at long direction

Critical section For Shear.

$Q_{max.}$ على بعد d من وش العمود اللى عنده

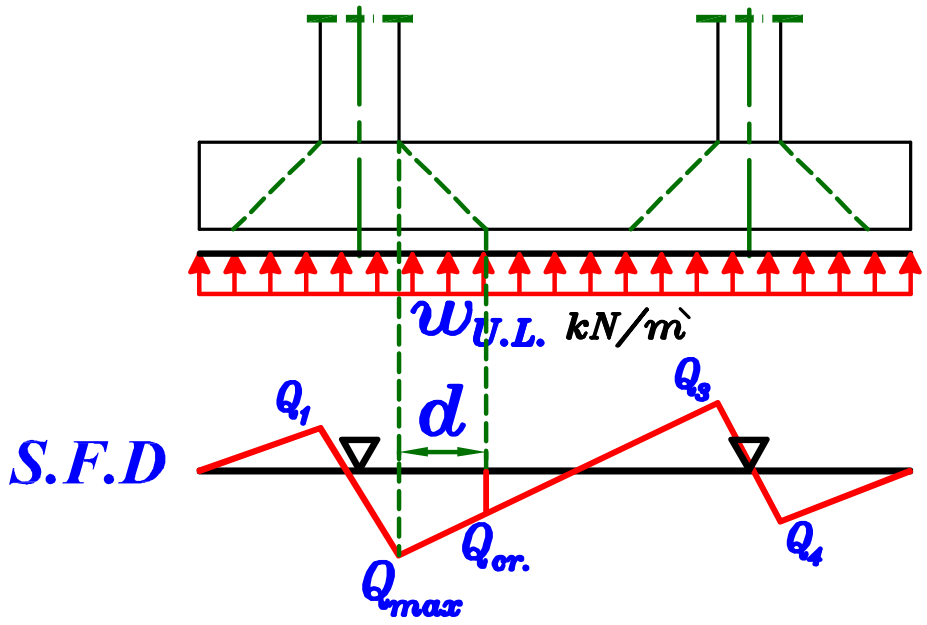

$$Q_{cr.} = Q_{max.} - w_{U.L.} * d$$

* Calculate Actual shear stress. (q_u)

$$q_u = \frac{Q_{cr.}\,(kN) * 10^3}{B\,(mm) * d\,(mm)} \quad (N/mm^2)$$

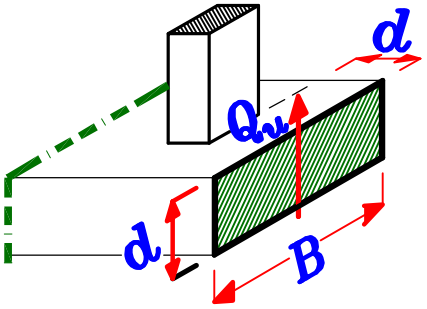

* Calculate Allowable shear stress. (q_{su})

$$q_{su} = 0.16\sqrt{\frac{F_{cu}}{\gamma_c}} \quad (N/mm^2)$$

* Compare between

Actual shear stress (q_u) & Allowable shear stress (q_{su})

* IF $q_u \leqslant q_{su}$ ⟶ Safe shear stresses
No need to increase dimensions.

* IF $q_u > q_{su}$ ⟶ UnSafe shear stresses
We have to increase dimensions.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

4 – Check Punching Shear. القص الثاقب .

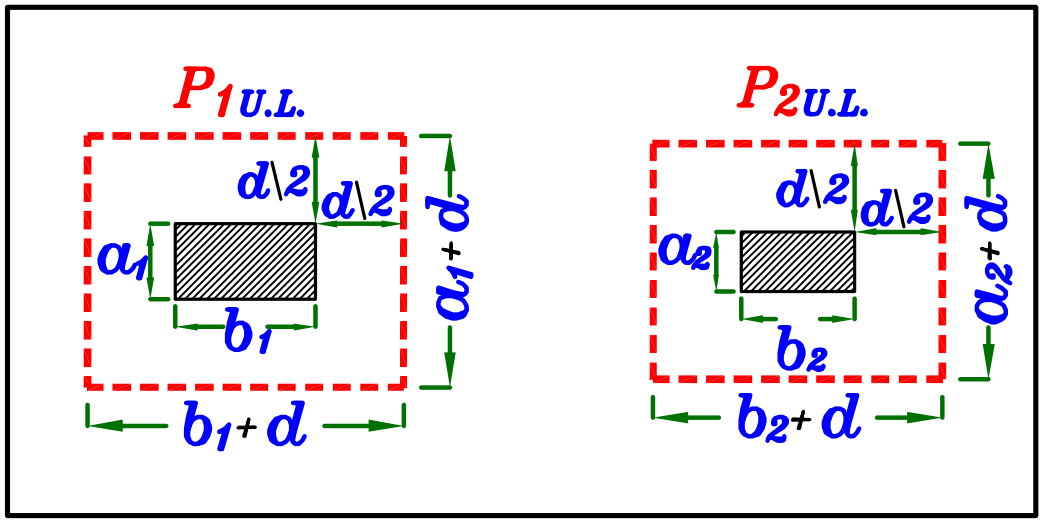

Column 1

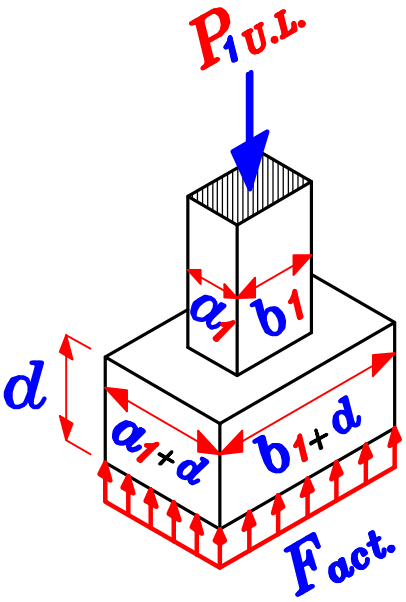

* Calculate Punching Force. (Q_{1p})

$$Q_{1p} = P_{1\,U.L.} - (F_{act.})\left[(a_1+d)(b_1+d)\right] \quad (kN)$$

* Calculate Punching shear area. (A_{1p})

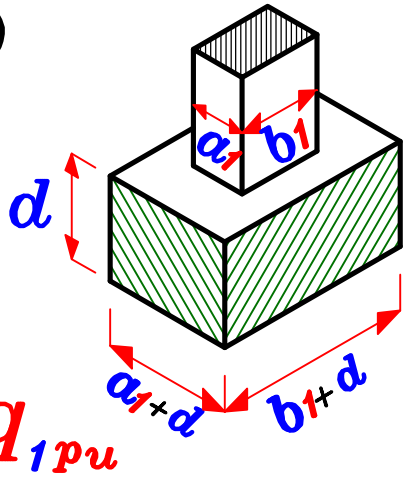

المحيط العمق

$$A_{1p} = \left[2(a_1+d)+2(b_1+d)\right] * d \quad (mm^2)$$

* Calculate Actual Punching shear stress. q_{1pu}

$$q_{1pu} = \frac{Q_{1p}\ (kN) * 10^3}{\left[2(a_1+d)+2(b_1+d)\right] * d\ (mm^2)} \quad (N/mm^2)$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Column 2

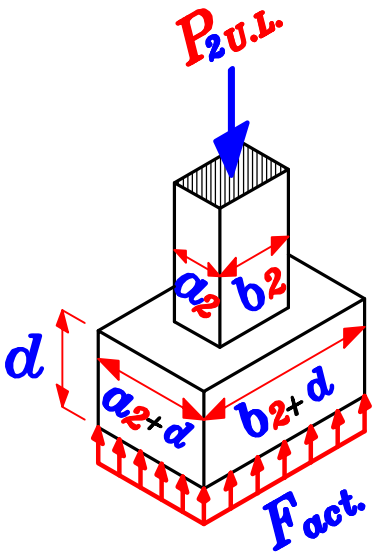

* Calculate Punching Force. (Q_{2p})

$$Q_{2p} = P_{2\,U.L.} - (F_{act.})\left[(a_2+d)(b_2+d)\right] \quad (kN)$$

* Calculate Punching shear area. (A_{2p})

المحيط العمق

$$A_{2p} = \left[2(a_2+d)+2(b_2+d)\right] * d \quad (mm^2)$$

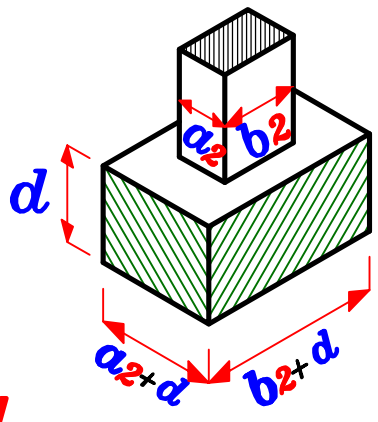

* Calculate Actual Punching shear stress. q_{2pu}

$$q_{2pu} = \frac{Q_{2p}\ (kN) * 10^3}{\left[2(a_2+d)+2(b_2+d)\right] * d\ (mm^2)} \quad (N/mm^2)$$

Choose q_{pumax} the bigger value of q_{1pu} & q_{2pu}

---

* Calculate allowable Punching shear stress. q_{pcu}

$$q_{pcu} = 0.316\left(0.5+\frac{a}{b}\right)\sqrt{\frac{F_{cu}}{\delta_c}} \quad (N/mm^2)$$

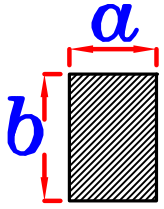

IF $\left(0.5+\frac{a}{b}\right) \leqslant 1.0$ Take $\longrightarrow$ $q_{pcu} = 0.316\sqrt{\frac{F_{cu}}{\delta_c}}$ (N/mm^2)

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

* Compare between

Actual punching shear stress (q_{pumax}) & Allowable punching shear stress (q_{pcu})

* IF $q_{pumax} \leqslant q_{pcu}$ ⟶ Safe punching shear.
No need to increase dimensions.

* IF $q_{pumax} > q_{pcu}$ ⟶ UnSafe punching shear.
We have to increase dimensions.

5- Reinforcement of the Footing.

Longitudinal direction.

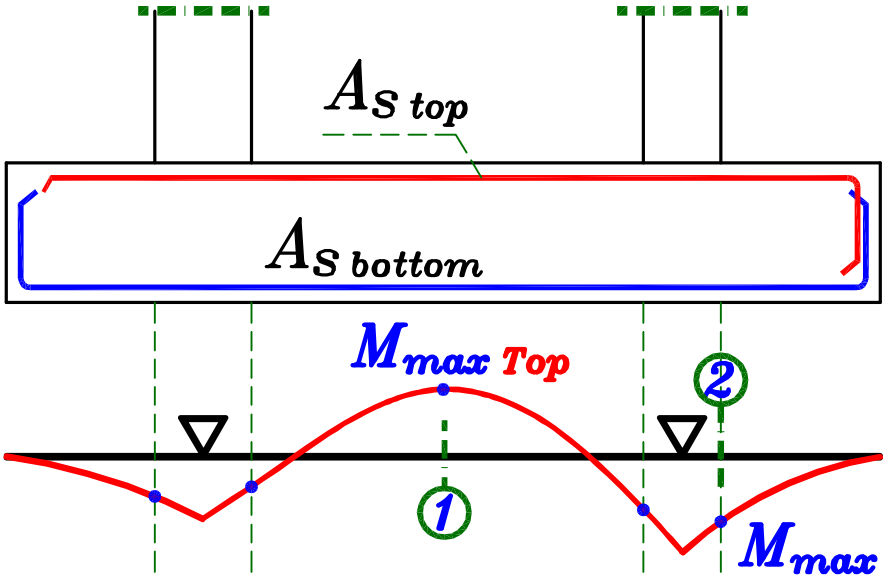

B.M.D

Sec. (1)

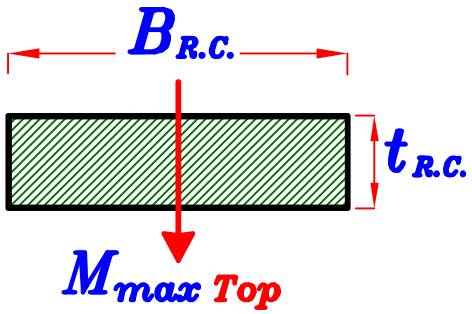

From $d = C_1 \sqrt{\dfrac{M_{max\ Top}}{F_{cu} * B_{R.C.}}}$ ⟶ Get ⟶ C_1 ⟶ J

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Get $$A_{s\,top} = \frac{M_{max\ Top}}{J\ F_y\ d} \quad (mm^2)$$

Check $A_{s\,min}$

$$A_{s\,min}\ (mm^2/m) = \left\{ \begin{array}{l} 1.5\,d\ (mm) \\ 5\,\phi\,12/m' \end{array} \right\} \text{الأكبر}$$

IF $A_{s\,top} \geq A_{s\,min} \longrightarrow$ o.k.

IF $A_{s\,top} < A_{s\,min} \longrightarrow$ Take $A_s = A_{s\,min}$

عاده يتم رص الحديد العلوى فى القواعد بحيث يتم عمل ركبه من جهه واحده فقط للتوفير بحيث تكون الركبه مره من جهه اليمين و السيخ التالى تكون الركبه جهه اليسار

$5\,\phi\,12/m'$ يوضع تسليح علوى ثانوى قيمته

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Sec. ②

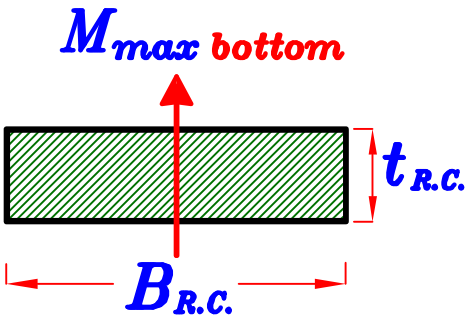

From $d = C_1 \sqrt{\dfrac{M_{max\ bottom}}{F_{cu} * B_{R.C.}}}$

Get $\longrightarrow C_1 \longrightarrow J$

Get $\boxed{A_{s\ bottom} = \dfrac{M_{max\ bottom}}{J\ F_y\ d}}\ (mm^2)$

Check $A_{s\ min}$

$$A_{s\ min}\ (mm^2/m) = \left\{ \begin{matrix} 1.5\ d\ (mm) \\ 5\ \phi\ 12/m' \end{matrix} \right\}$$ الأكبر

IF $A_{s\ top} \geq A_{s\ min} \longrightarrow$ o.k.

IF $A_{s\ top} < A_{s\ min} \longrightarrow$ Take $A_s = A_{s\ min}$

الحديد السفلى فى القواعد
يفضل أن يتم عمل ركبه من الجهتين

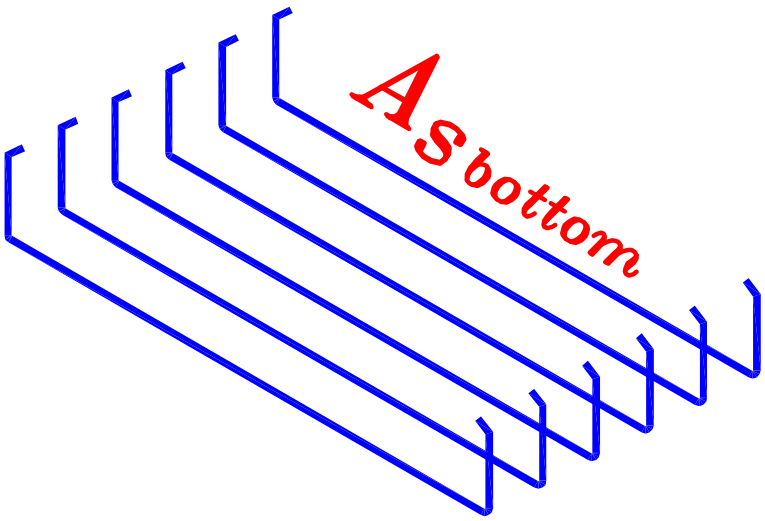

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Transverse direction. Short direction.

Hidden Beam 1

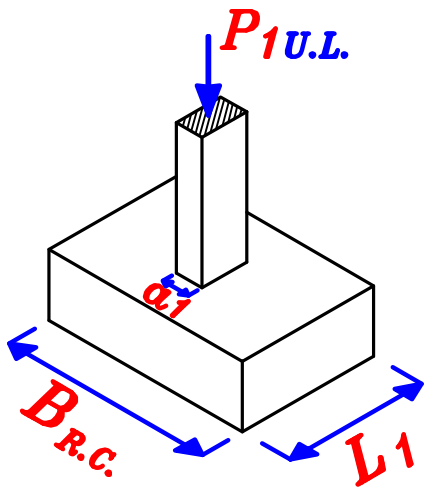

$$From\ d = C_1 \sqrt{\frac{M_{1act.}}{F_{cu} * 1000}}$$

$$\xrightarrow{Get} C_1 \longrightarrow J$$

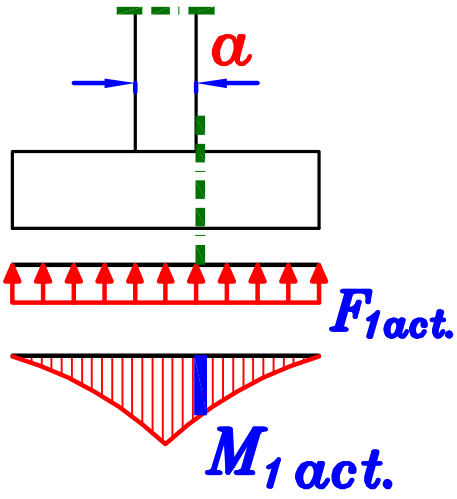

$$Get \quad \boxed{A_{s1} = \frac{M_{1act.}}{J\ F_y\ d}} \quad (mm^2/m`)$$

$$Check\ A_{s\,min}$$

$$\boxed{A_{s\,min}\ (mm^2/m) = \left\{ \begin{matrix} 1.5\,d\ (mm) \\ 5\,\phi\,12/m` \end{matrix} \right\}\ \text{الأكبر}}$$

$$IF\ A_{s1} \geqslant A_{s\,min} \longrightarrow o.k.$$

$$IF\ A_{s1} < A_{s\,min} \longrightarrow Take\ A_{s1} = A_{s\,min}$$

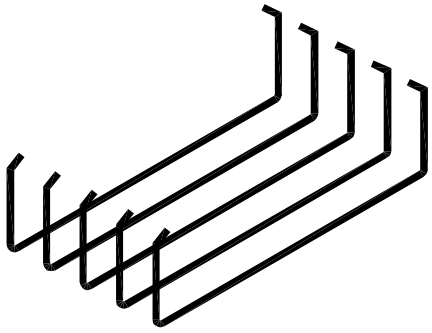

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Hidden Beam 2

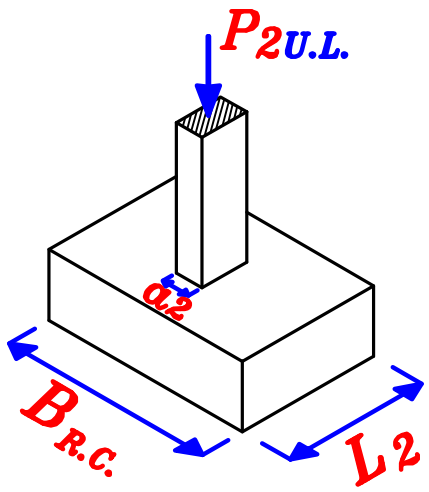

From $d = C_1 \sqrt{\dfrac{M_{2act.}}{F_{cu} * 1000}}$

Get $\longrightarrow C_1 \longrightarrow J$

Get $\boxed{A_{s2} = \dfrac{M_{2act.}}{J\, F_y\, d}}$ $(mm^2/m`)$

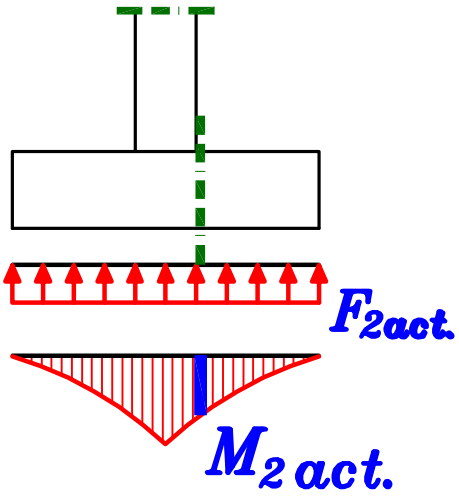

Check $A_{s\,min}$

$$A_{s\,min}\ (mm^2/m) = \left\{ \begin{array}{l} 1.5\,d\ (mm) \\ 5\,\phi\,12/m` \end{array} \right\} \text{الأكبر}$$

IF $A_{s2} \geqslant A_{s\,min} \longrightarrow$ o.k.

IF $A_{s2} < A_{s\,min} \longrightarrow$ Take $A_{s2} = A_{s\,min}$

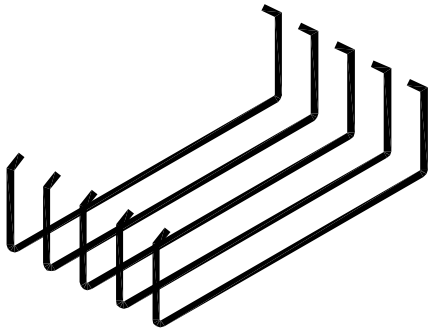

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

6 – Details of Reinforcement.

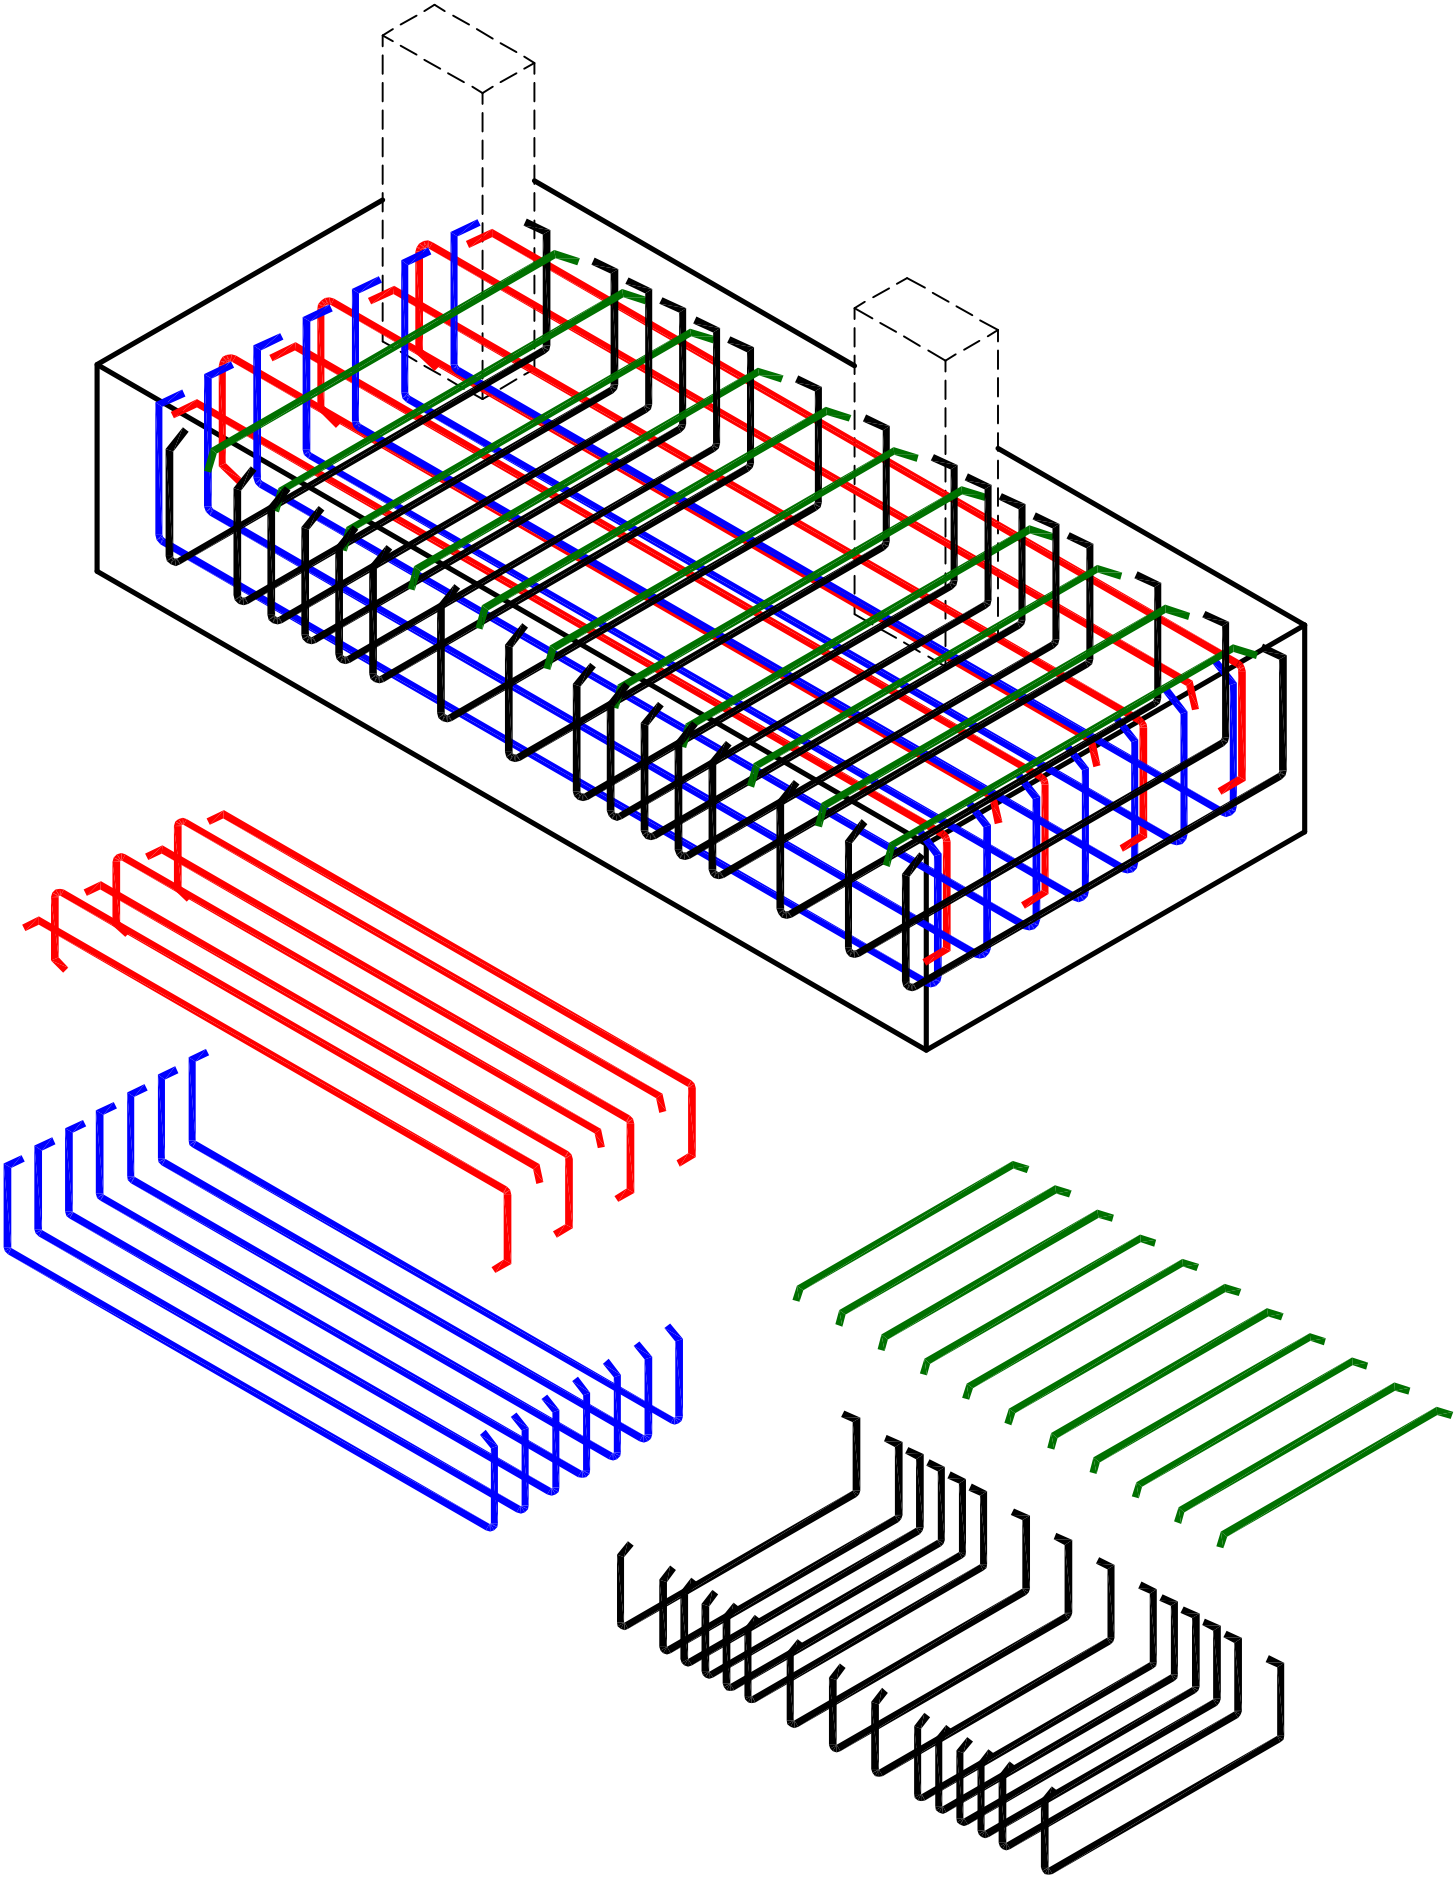

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

6– Details of Reinforcement.

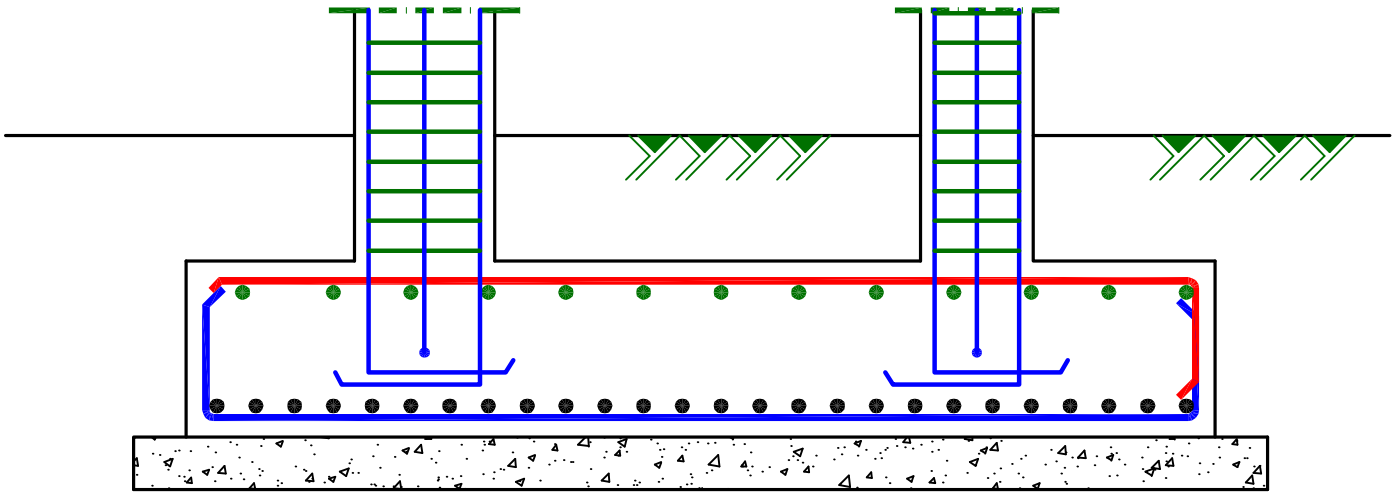

Sec X–X

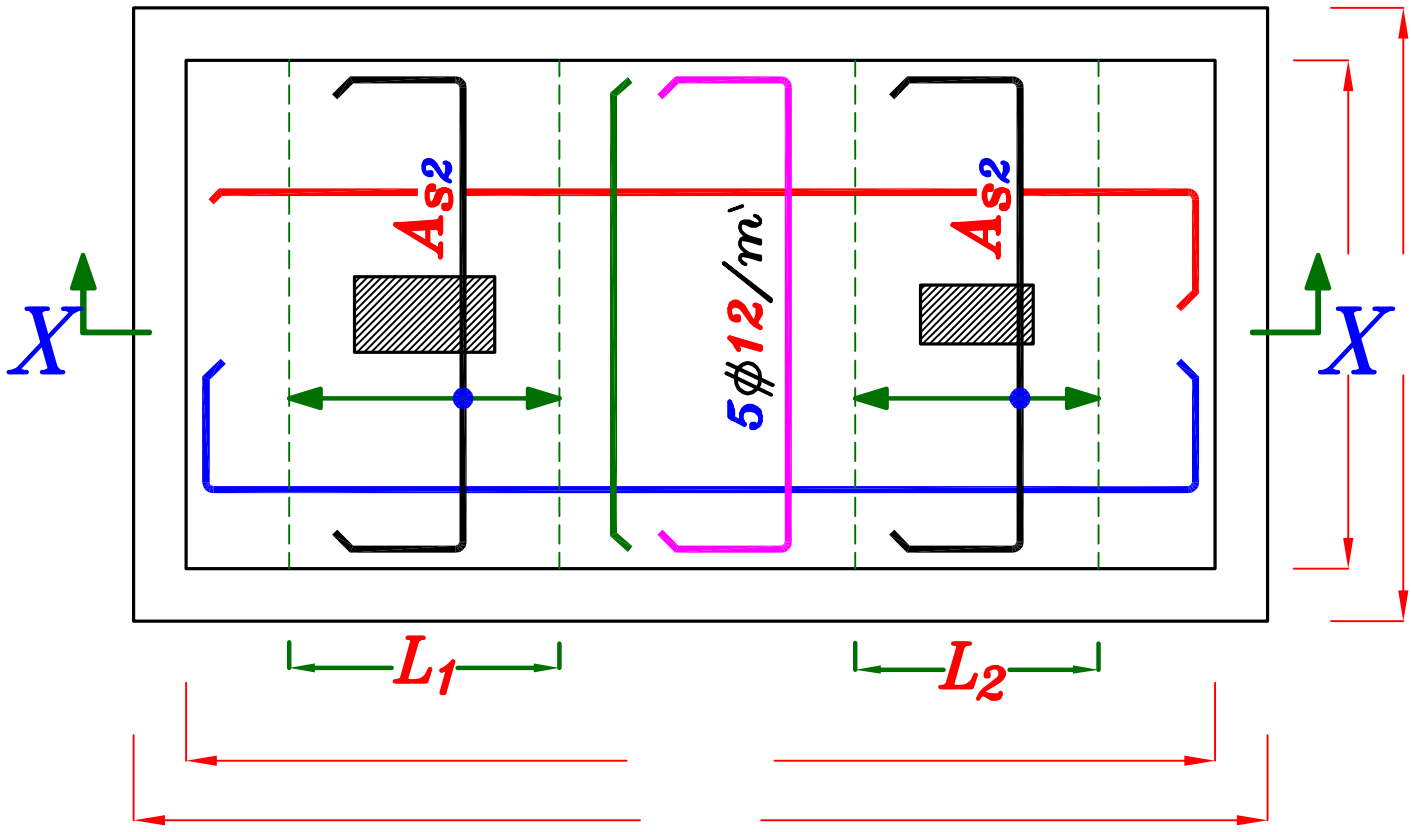

Plan

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Example.

It is required to design Footings to support a R.C. column C_1 $(45 * 70)$ cm. and carrying working load 2400 kN and column C_2 $(45 * 50)$ cm. and carrying working load 1800 kN the spacing between the C.L. of the two columns is 2.50 m as shown

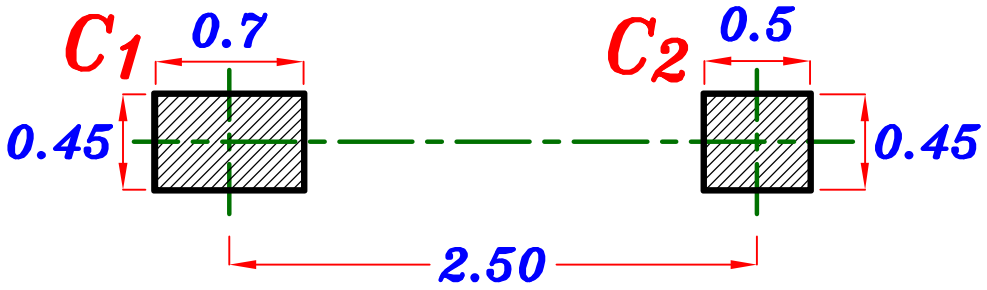

and the allowable net bearing capacity in the Footing site is 150 kN/m^2. ($F_{cu} = 25$ N/mm^2, $F_y = 360$ N/mm^2).
and draw details of RFT. to scale 1:50

Solution.

Data given:

Column C_1 dimensions $(450 * 700)$ mm

P_1 (working) $= 2400$ kN $\qquad$ P_1 (U.L.) $= 2400 * 1.5 = 3600$ kN

Column C_2 dimensions $(450 * 500)$ mm

P_2 (working) $= 1800$ kN $\qquad$ P_2 (U.L.) $= 1800 * 1.5 = 2700$ kN

$R_{(working)} = P_1 + P_2 = 4200$ kN

$R_{(U.L.)} = 1.5 * 4200 = 6300$ kN

Bearing capacity of the soil $= q_{all} = 150$ kN/m^2

$F_{cu} = 25$ N/mm^2 $\qquad$ $F_y = 360$ N/mm^2

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Use Isolated Footing. First.

1– Calculate the Footing area. (Width & Length of R.C. Footing.)

Choose $t_{P.C.} = 30\ cm > 20\ cm$

Column. C_1 $(450 * 700)\ mm$ P_1 (working) $= 2400\ kN$

$$L_{P.C.} - B_{P.C.} = b - a = 0.70 - 0.45 = 0.25\ m$$

$$L_{P.C.} = B_{P.C.} + 0.25\ m \quad \text{-----} (1)$$

$$A_{P.C.} = \frac{P_w}{q_{all}} = \frac{2400\ (kN)}{150\ (kN/m^2)} = 16.0\ m^2$$

$$A_{P.C.} = B_{P.C.} * L_{P.C.} = 16.0\ m^2 \quad \text{-----} (2)$$

$$B_{P.C.} * L_{P.C.} = B_{P.C.} * (B_{P.C.} + 0.25) = 16.0\ m^2$$

$$B_{P.C.} = 3.87\ m$$

$$\boxed{B_{P.C.} = 3.90\ m} \qquad \boxed{L_{P.C.} = 4.15\ m}$$

$$\boxed{B_{R.C.} = 3.30\ m} \qquad \boxed{L_{R.C.} = 3.55\ m}$$

Column. C_2 $(450 * 500)\ mm$ P_2 (working) $= 1800\ kN$

$$L_{P.C.} - B_{P.C.} = b - a = 0.50 - 0.45 = 0.05\ m$$

$$L_{P.C.} = B_{P.C.} + 0.05\ m \quad \text{-----} (1)$$

$$A_{P.C.} = \frac{P_w}{q_{all}} = \frac{1800\ (kN)}{150\ (kN/m^2)} = 12.0\ m^2$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$$A_{P.C.} = B_{P.C.} * L_{P.C.} = 12.0 \quad m^2 \quad \text{-----} (2)$$

$$B_{P.C.} * L_{P.C.} = B_{P.C.} * (B_{P.C.} + 0.05) = 12.0 \quad m^2$$

$$B_{P.C.} = 3.43 \; m$$

$$B_{P.C.} = 3.50 \; m \qquad L_{P.C.} = 3.55 \; m$$

$$B_{R.C.} = 2.90 \; m \qquad L_{R.C.} = 2.95 \; m$$

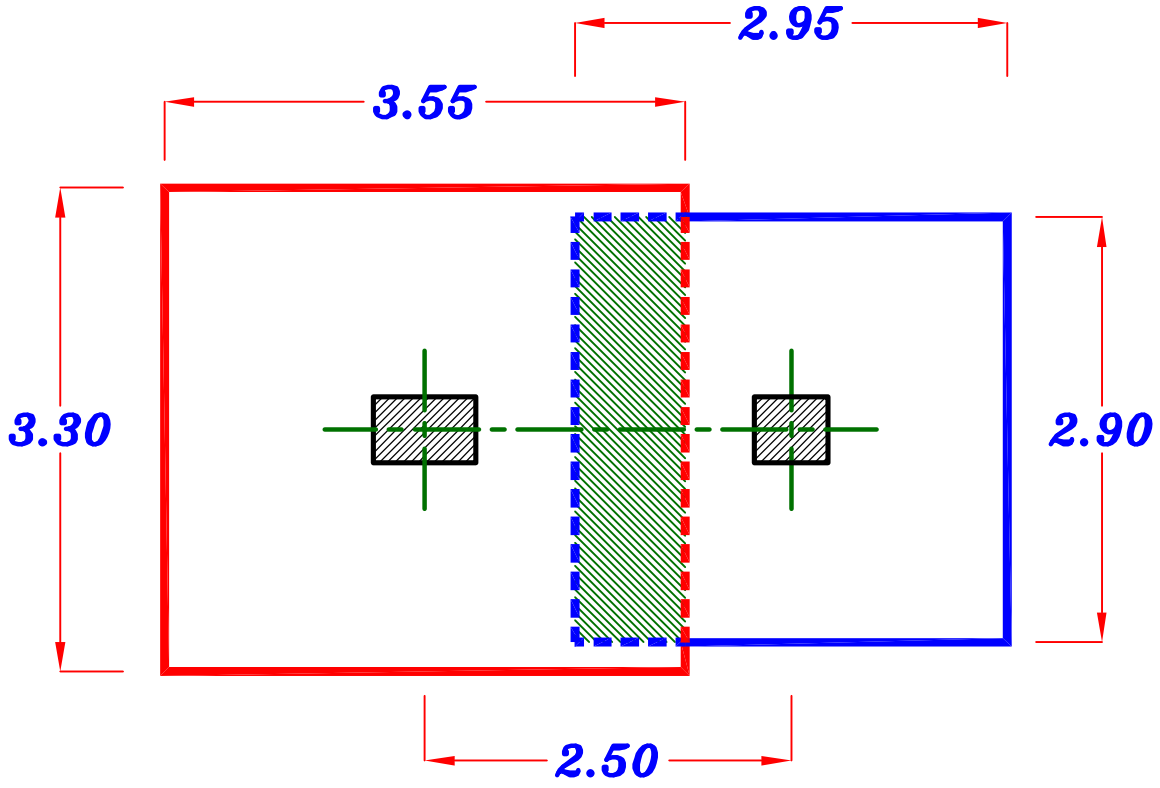

اذا استخدمنا قواعد منفصله سيحدث تداخل فى القواعد المسلحه
لذا سنحتاج لعمل قاعده واحده مشتركه . Combined Footing

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Use Combined Footing.

1– Calculate the Footing area. (Width & Length of R.C. Footing.)

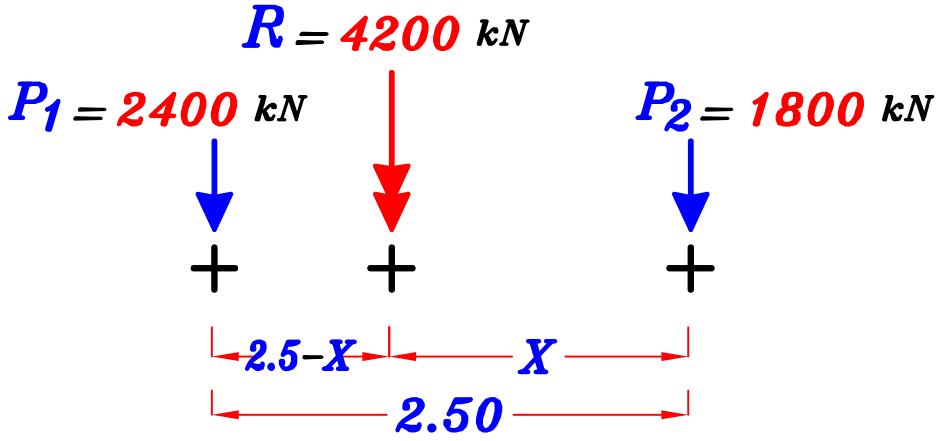

$$X = \frac{P_1}{R} * S = \frac{2400}{4200} * 2.5 = 1.43\ m$$

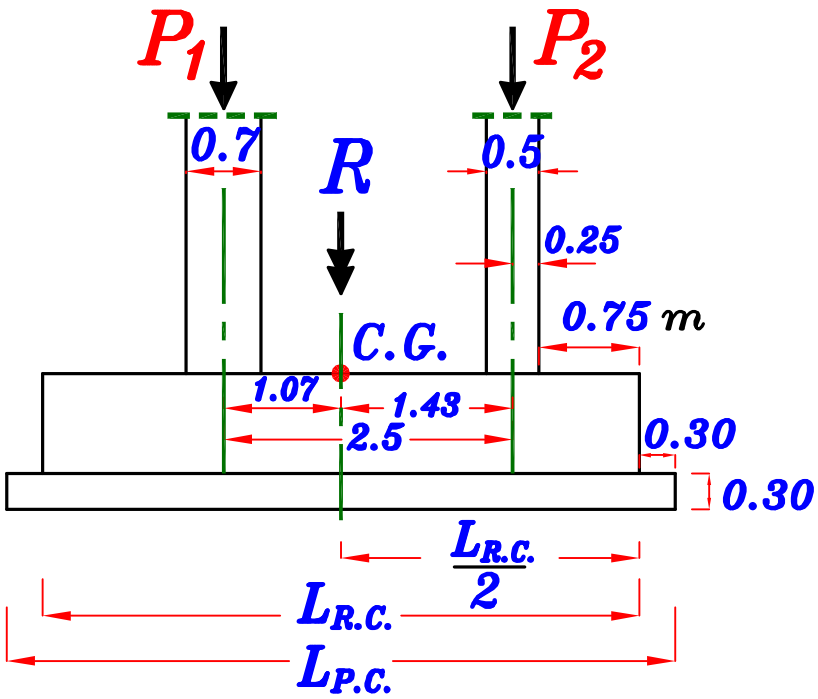

$$\frac{L_{R.C.}}{2} = (X) + \frac{a_2}{2} + (0.50 \rightarrow 1.0)\ m$$

$$\frac{L_{R.C.}}{2} = (1.43) + \frac{0.5}{2} + 0.75 \longrightarrow L_{R.C.} = 4.86$$

$$\boxed{L_{R.C.} = 4.90\ m}$$

$$L_{P.C.} = L_{R.C.} + 2\,t_{P.C.} = 4.90 + 2(0.3) = 4.80\ m$$

$$\boxed{L_{P.C.} = 5.50\ m}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Calculate the width of the Footing. B

$$A_{P.C.} = \frac{R_w}{q_{all}} = \frac{4200}{150} = 28.0\ m^2$$

$$A_{P.C.} = 28.0 = B_{P.C.} * L_{P.C.} = B_{P.C.} * 5.50 \longrightarrow B_{P.C.} = 5.09\ m$$

$$B_{P.C.} = 5.10\ m$$

$$B_{P.C.} = 5.10\ m \qquad L_{P.C.} = 5.50\ m$$

$$B_{R.C.} = 4.50\ m \qquad L_{R.C.} = 4.90\ m$$

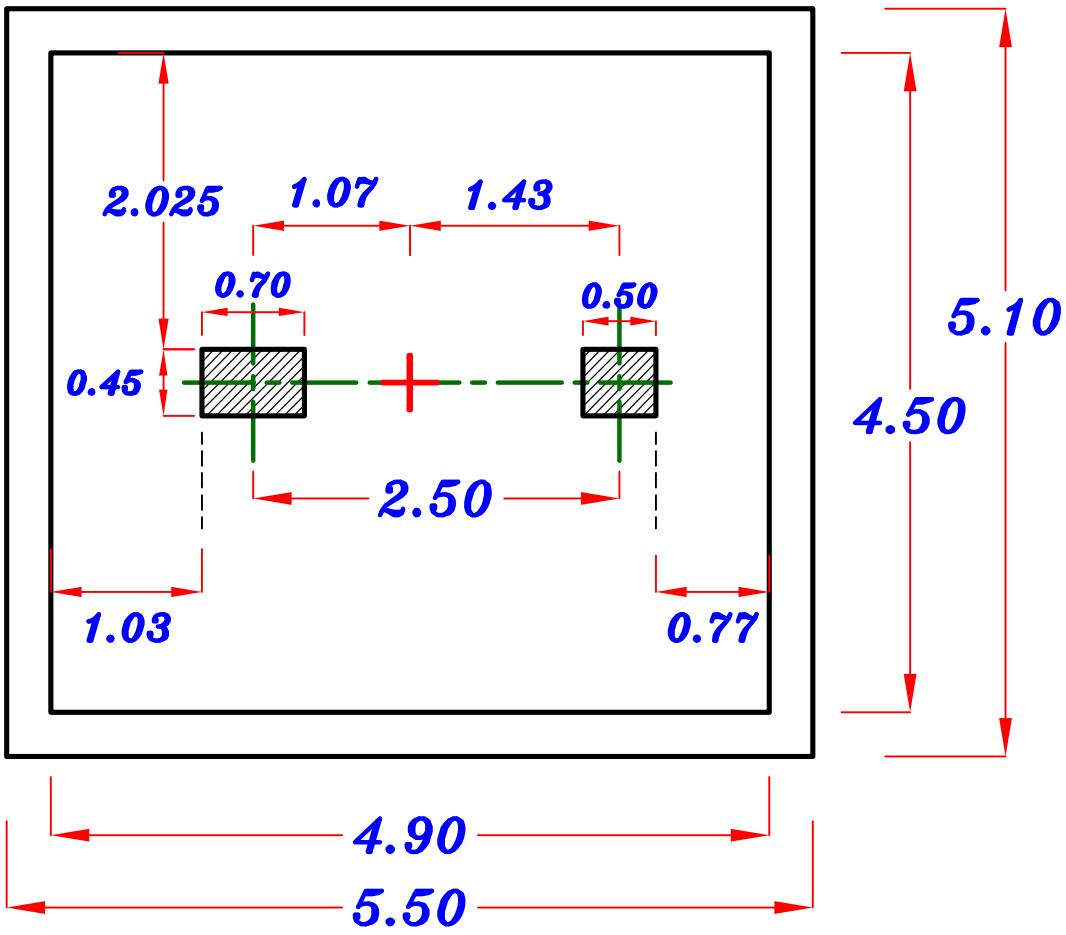

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

2– Design the critical sections For moment. (Depth of R.C. Footing.)

– Actual Normal stress on R.C. Footing (U.L.)

$$F_{act.} = \frac{R_{U.L.}}{B_{R.C.} * L_{R.C.}} = \frac{6300}{4.5 * 4.9} = 285.7 \ kN/m^2$$

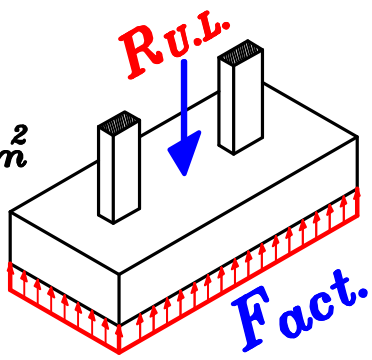

– Actual Uniform Load on R.C. Footing (U.L.) as a beam.

$$w_{U.L.} = \frac{R_{U.L.}}{L_{R.C.}} = \frac{6300}{4.9} = 1285.7 \ kN/m`$$

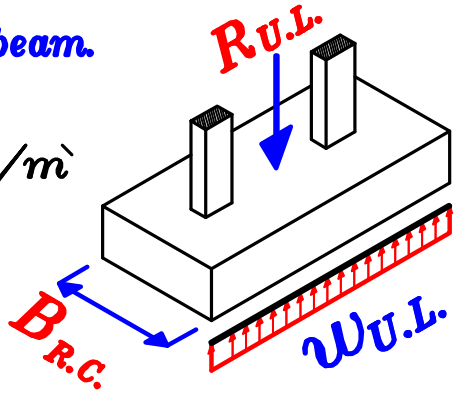

Drawing U.L. B.M.D. on all R.C. Footing. Longitudinal direction.

$$\text{Point of Zero Shear } (X_o) = \frac{3600}{1285.7} = 2.80 \ m$$

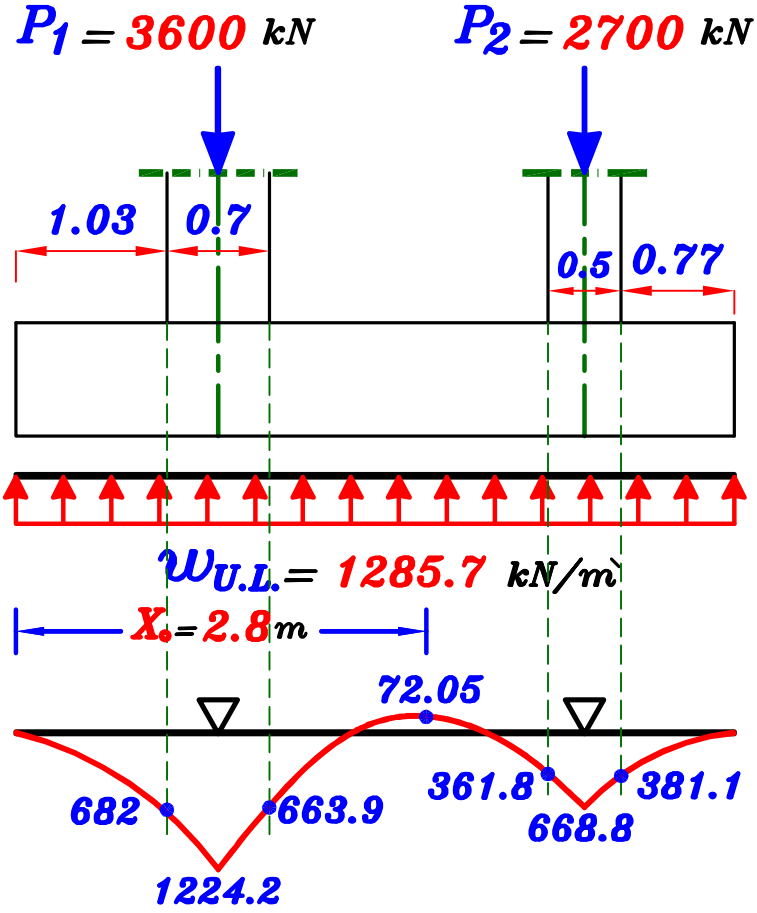

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$M_{max.} = 682$ kN.m

عند وش العمود

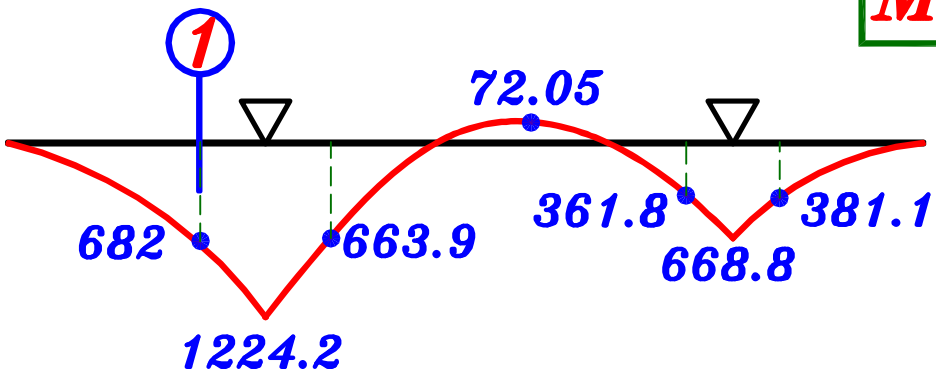

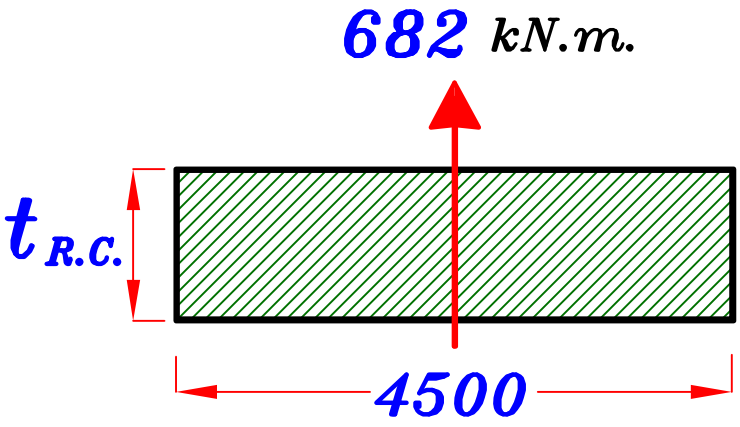

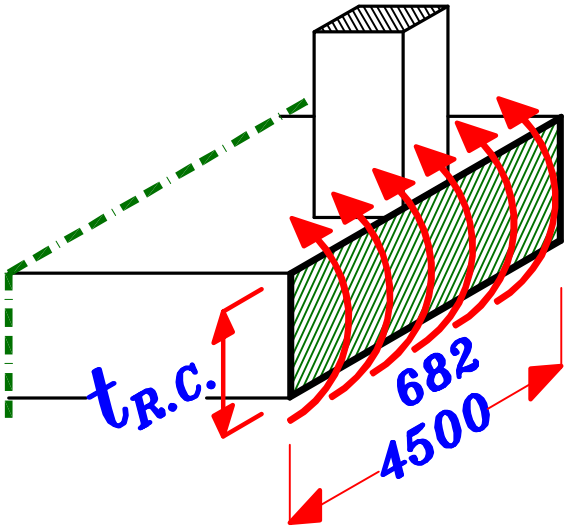

$$\because\ d = C_1 \sqrt{\frac{M_{act.}}{F_{cu} * b}}$$

Choose $C_1 = 5.0$

$$\therefore\ d = 5.0 \sqrt{\frac{682 * 10^6}{25 * 4500}} = 389.3\ mm$$

$$t_{R.C.} = d + 70\ mm = 389.3 + 70 = 459.3\ mm$$

$t_{R.C.} = 500\ mm$

$d = 430\ mm$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Check depth in Transverse direction.

As a Hidden Beam.

Hidden Beam 1

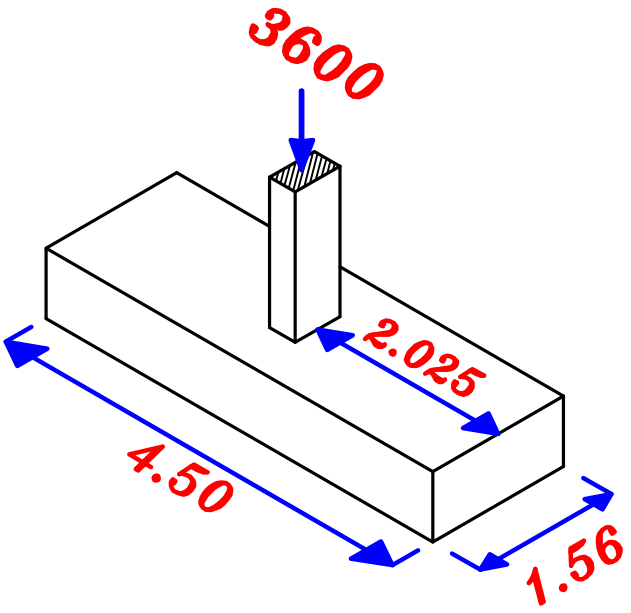

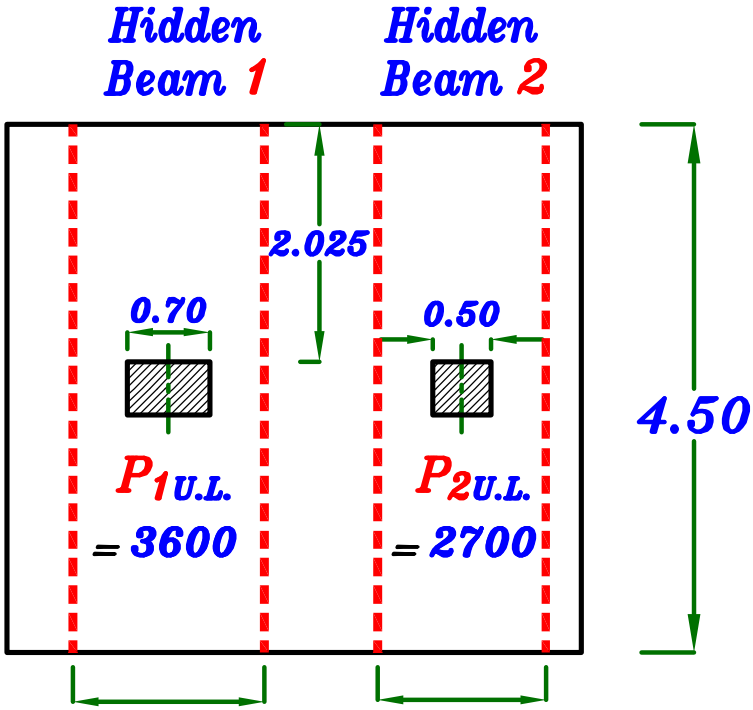

$L_1 = b_1 + 2d$

$= 0.7 + 2(0.43)$

$= 1.56\ m$

$L_2 = b_2 + 2d$

$= 0.5 + 2(0.43)$

$= 1.36\ m$

$$F_{1act.} = \frac{P_{1U.L.}}{B_{R.C.} * L_1} = \frac{3600}{4.5 * 1.56} = 512.8 \ kN/m$$

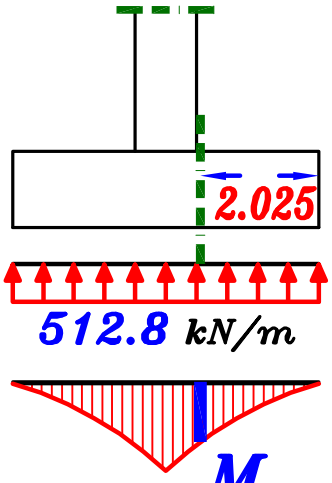

$$M_{1act.} = (512.8 * 2.025 * 1.0\,m)\ \frac{2.025}{2}$$

$$\boxed{M_{1act.} = 1051.4\ kN.m/m}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Hidden Beam 2

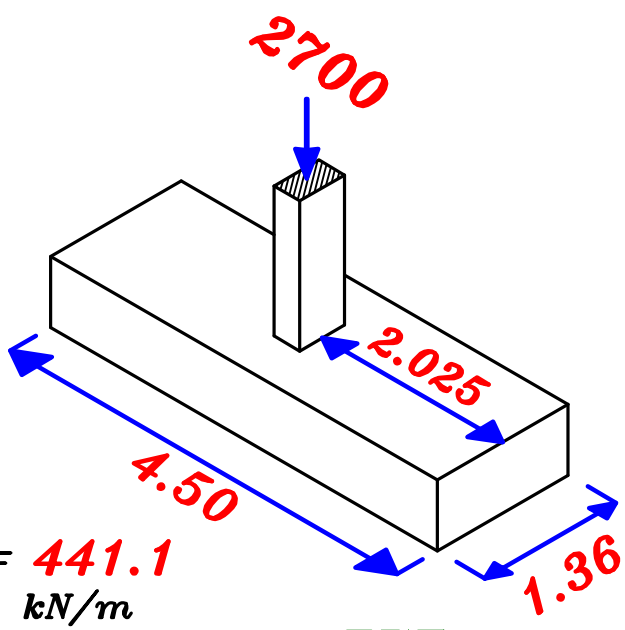

$$F_{2act.} = \frac{P_{2U.L.}}{B_{R.C.} * L_2} = \frac{2700}{4.5 * 1.36} = 441.1 \ kN/m$$

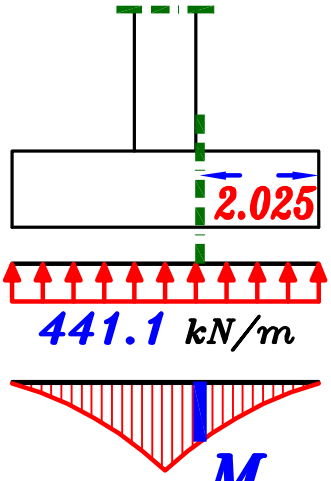

$$M_{2act.} = (441.1 * 2.025 * 1.0\,m)\ \frac{2.025}{2}$$

$$\boxed{M_{2act.} = 904.4 \ kN.m/m}$$

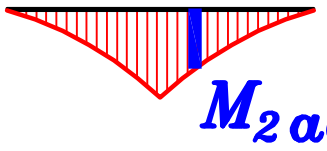

M_{bigger} From $M_{1act.}$ & $M_{2act.}$

$$\boxed{M_{bigger} = 1051.4 \ kN.m/m}$$

$$430 = C_1 \sqrt{\frac{1051.4 * 10^6}{25 * 1000}} \longrightarrow C_1 = 2.09 < 3.0$$

$\therefore$ **We have to increase the depth**

$$\therefore d = 4.5 \sqrt{\frac{1051.4 * 10^6}{25 * 1000}} = 922.8 \ mm$$

$$t_{R.C.} = d + 70\ mm = 922.8 + 70 = 992.8\ mm$$

$$\boxed{t_{R.C.} = 1000\ mm} \qquad \boxed{d = 930\ mm}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Hidden Beam 1

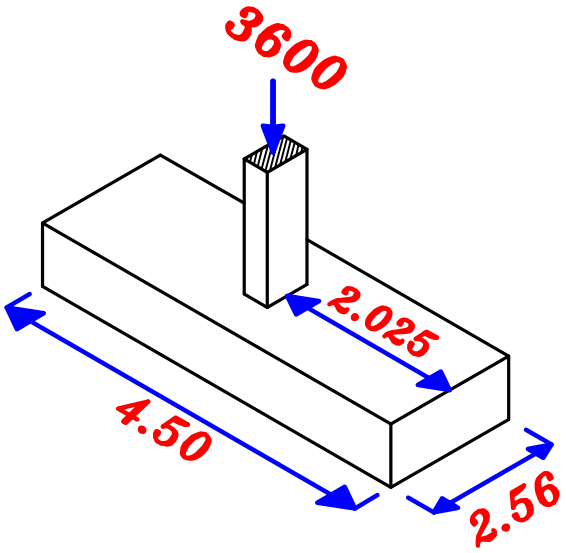

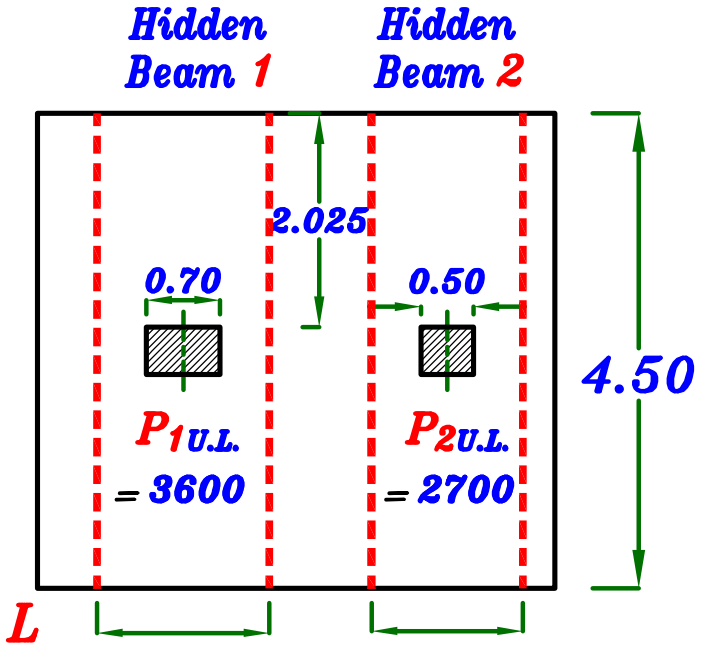

$$F_{1act.} = \frac{P_{1\,U.L.}}{B_{R.C.} * L_1}$$

$$= \frac{3600}{4.5 * 2.56} = 312.5 \ kN/m$$

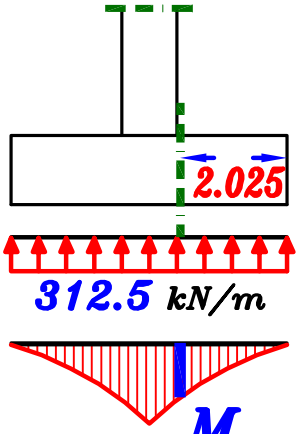

$$M_{1act.} = (312.5 * 2.025 * 1.0\,m)\ \frac{2.025}{2}$$

$$\boxed{M_{1act.} = 640.7 \ kN.m/m}$$

Hidden Beam 2

$$F_{2act.} = \frac{P_{2U.L.}}{B_{R.C.} * L_2} = \frac{2700}{4.5 * 2.36} = 254.2 \ kN/m$$

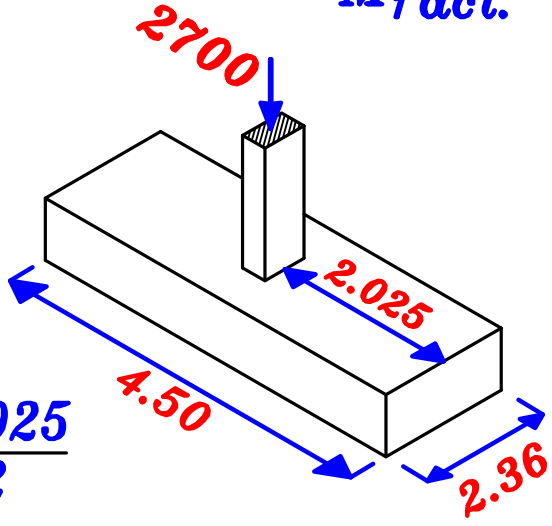

$$M_{2act.} = (254.2 * 2.025 * 1.0\,m)\ \frac{2.025}{2}$$

$$\boxed{M_{2act.} = 521.2 \ kN.m/m}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

3 – Check Shear. at long direction

Critical section For Shear.

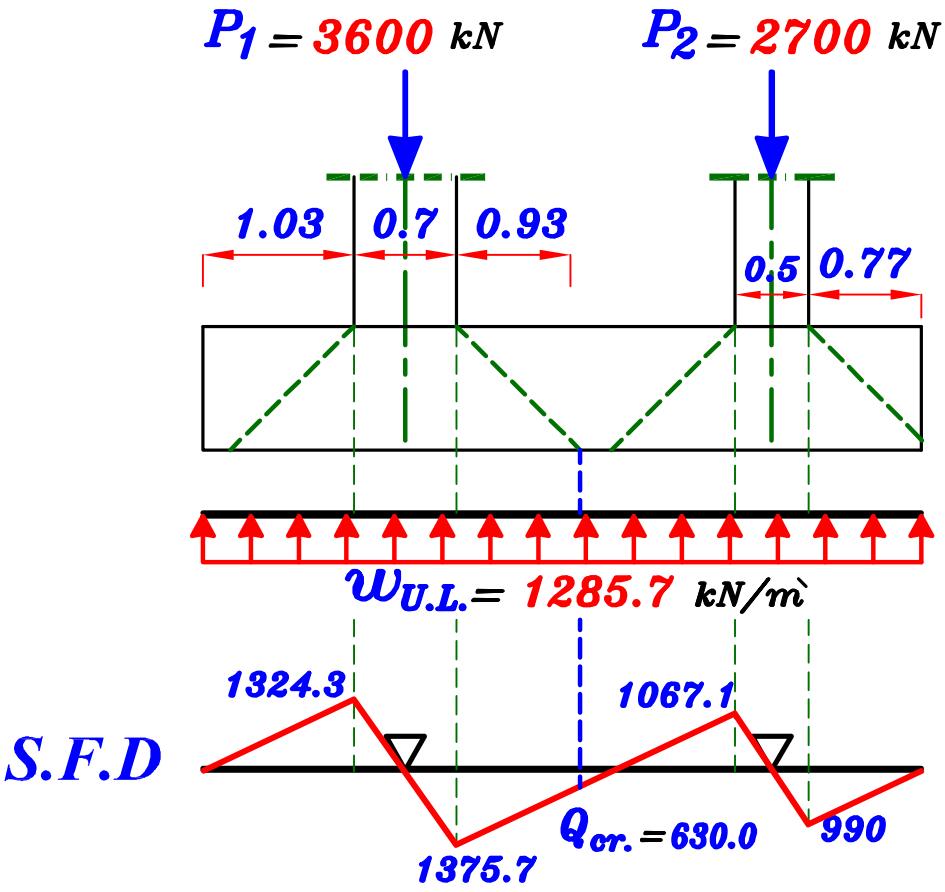

$$Q_{cr.} = Q_{max.} - w_{U.L.} * d = 1375.7 - 1285.7 * 0.93 = 180 \text{ kN}$$

* Calculate Actual shear stress. (q_u)

$$q_u = \frac{Q_{cr.}}{B * d} = \frac{180.0 * 10^3}{4500 * 930} = 0.043 \text{ kN/m}^2$$

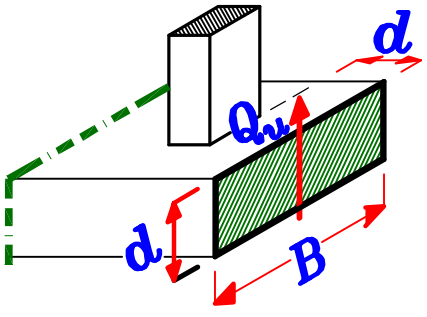

* Allowable shear stress. (q_{su})

$$q_{su} = 0.16\sqrt{\frac{F_{cu}}{\gamma_c}} = 0.16\sqrt{\frac{25}{1.5}} = 0.653 \text{ N/mm}^2$$

$q_u < q_{su}$ ⟶ Safe shear stresses

No need to increase dimensions.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

4 – Check Punching Shear. القص الثاقب .

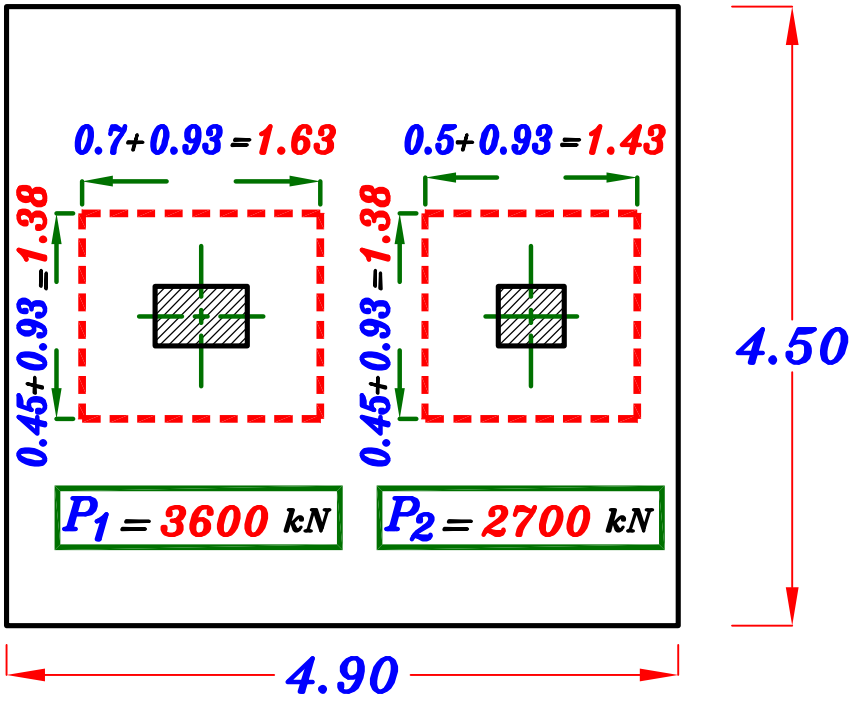

Column 1

* Calculate Punching Force. (Q_{1p})

$$Q_{1p} = 3600 - 285.7\ (1.38 * 1.63)$$

$$= 2957.3\ kN$$

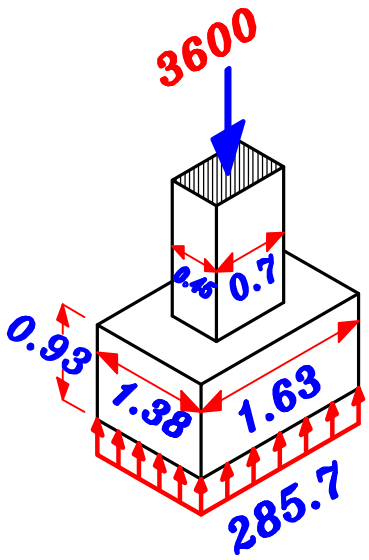

$$A_{1p} = \left[2(1380) + 2(1630)\right] * 930$$

$$= 5598600\ mm^2$$

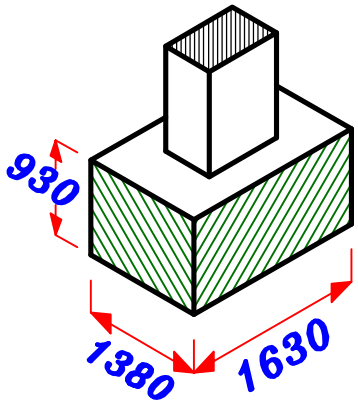

* Calculate Actual Punching shear stress. q_{1pu}

$$q_{1pu} = \frac{2957.3 * 10^3}{5598600} = 0.528\ N/mm^2$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Column 2

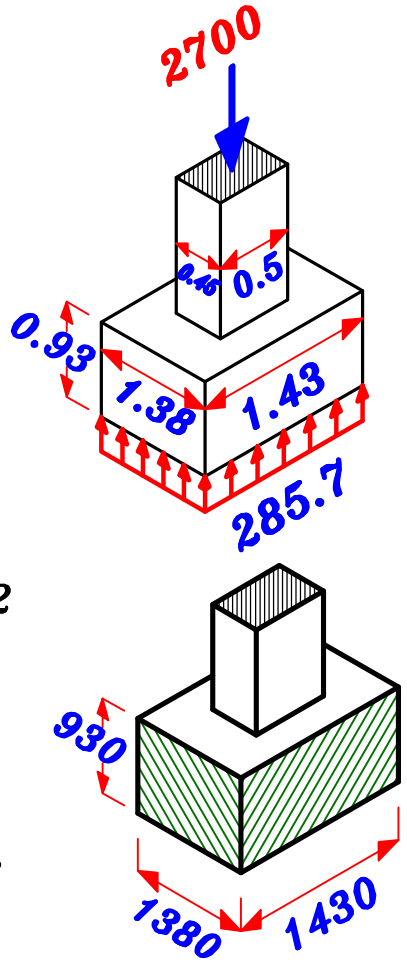

* Calculate Punching Force. (Q_{2p})

$$Q_{2p} = 2700 - 285.7\ (1.38 * 1.43)$$

$$= 2136.2\ kN$$

$$A_{2p} = \left[2(1380) + 2(1430)\right] * 930$$

$$= 5226600\ mm^2$$

* Calculate Actual Punching shear stress. q_{1pu}

$$q_{2pu} = \frac{2136.2 * 10^3}{5226600} = 0.408\ N/mm^2$$

q_{pumax} the bigger q_{1pu} & $q_{2pu} = 0.528\ N/mm^2$

* Calculate allowable Punching shear stress. q_{pcu}

$$q_{pcu} = 0.316\left(0.5 + \frac{a}{b}\right)\sqrt{\frac{F_{cu}}{\delta_c}} =$$

$$q_{pcu} = 0.316\left(0.5 + \frac{0.45}{0.70}\right)\sqrt{\frac{25}{1.5}} = 1.47\ N/mm^2$$

$q_{pu} \leqslant q_{pcu} \longrightarrow$ Safe punching shear.
No need to increase dimensions.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

5 – Reinforcement of the Footing.

Longitudinal direction.

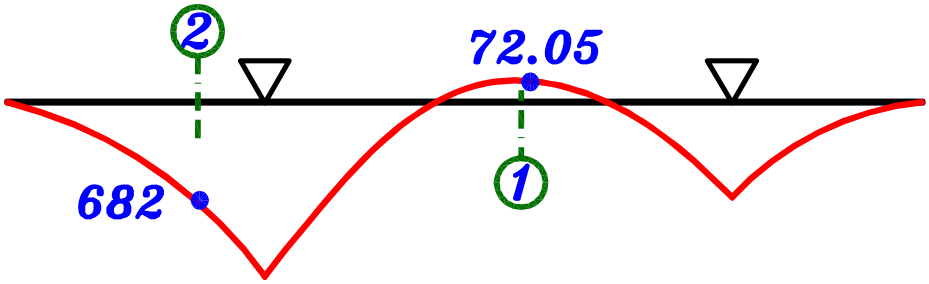

Sec. (1)

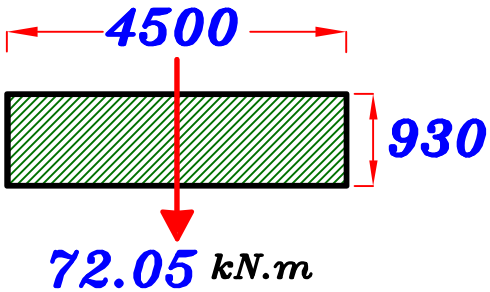

$$930 = C_1 \sqrt{\frac{72.05 * 10^6}{25 * 4500}}$$

$$\longrightarrow C_1 = 36.7 \longrightarrow J = 0.826$$

$$A_S = \frac{M_{act.}}{J\, F_y\, d} = \frac{72.05 * 10^6}{0.826 * 360 * 930} = 260.53 \ mm^2$$

$$A_S \ (mm^2/m) = \frac{A_S}{B_{R.C.}} = \frac{260.53}{4.50} = 57.9 \ mm^2/m`$$

Check $A_{S\,min}$

$$A_{S\,min} = \left\{ \begin{array}{l} 1.5\, d = 1.5 * 930 = 1395 \\ 5\, \phi\, 12/m` = 565 \end{array} \right\} 1395 \ mm^2$$

$$\therefore A_S < A_{S\,min} \longrightarrow \text{Take } A_S = 1395 \ mm^2$$

$$\boxed{7\, \phi\, 16/m`}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

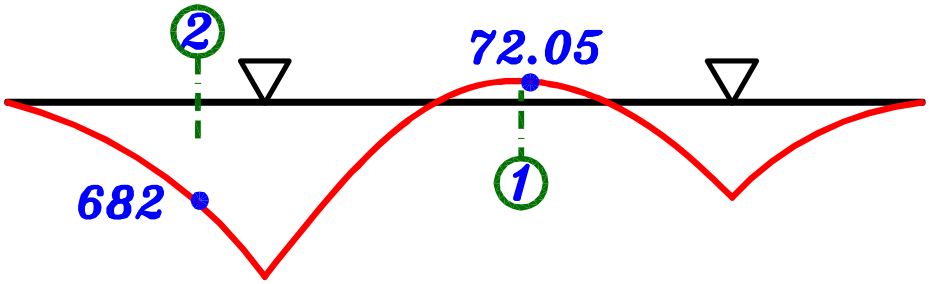

Sec. (2)

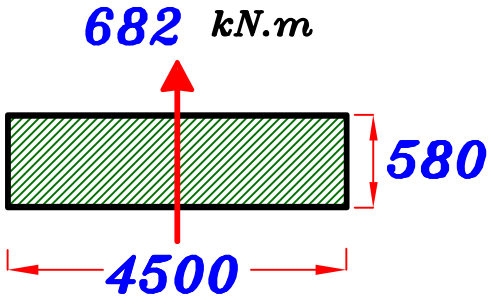

$$930 = C_1 \sqrt{\frac{682 * 10^6}{25 * 4500}}$$

$$\longrightarrow C_1 = 11.9 \longrightarrow J = 0.826$$

$$A_S = \frac{M_{act.}}{J F_y d} = \frac{682 * 10^6}{0.826 * 360 * 930} = 2466.1 \ mm^2$$

$$A_S \ (mm^2/m) = \frac{A_S}{B_{R.C.}} = \frac{2466.1}{4.50} = 548.0 \ mm^2/m`$$

Check $A_{S\,min}$

$$A_{S\,min} = \left\{ \begin{array}{l} 1.5\,d = 1.5 * 930 = 1395 \\ 5\,\phi\,12/m` = 565 \end{array} \right\} 1395 \ mm^2$$

$$\therefore A_S < A_{S\,min} \longrightarrow \text{Take } A_S = 1395 \ mm^2$$

$$\boxed{7\,\phi\,16/m`}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Transverse direction. Short direction.

Hidden Beam 1

$$M_{1act.} = 640.7 \ kN.m/m$$

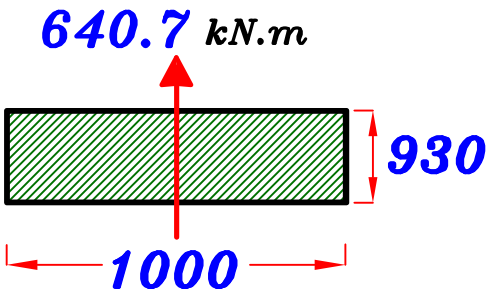

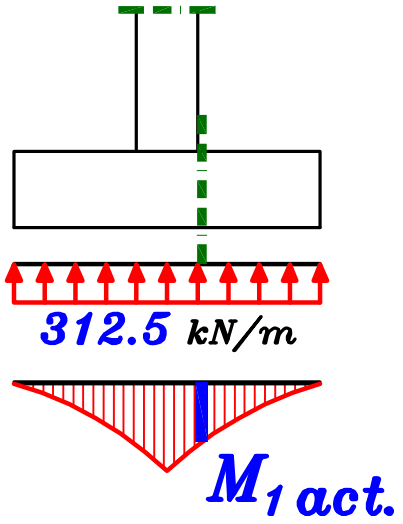

$$930 = C_1 \sqrt{\frac{640.7 * 10^6}{25 * 1000}} \longrightarrow C_1 = 5.81 \longrightarrow J = 0.826$$

$$A_s = \frac{M_{act.}}{J F_y d} = \frac{640.7 * 10^6}{0.826 * 360 * 930} = 2316.8 \ mm^2/m`$$

Check $A_{s\,min}$

$$A_{s\,min} = \left\{ \begin{array}{l} 1.5\,d = 1.5 * 930 = 1395 \\ 5\,\phi\,12/m` = 565 \end{array} \right\} \ 1395 \ mm^2$$

$$\therefore \ A_s > A_{s\,min} \longrightarrow o.k.$$

$$A_s = 2316.8 \ mm^2 \qquad \boxed{7\,\phi\,22/m`}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Hidden Beam 2

$$M_{2act.} = 521.2 \ kN.m/m$$

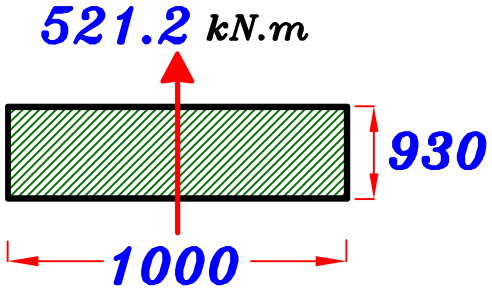

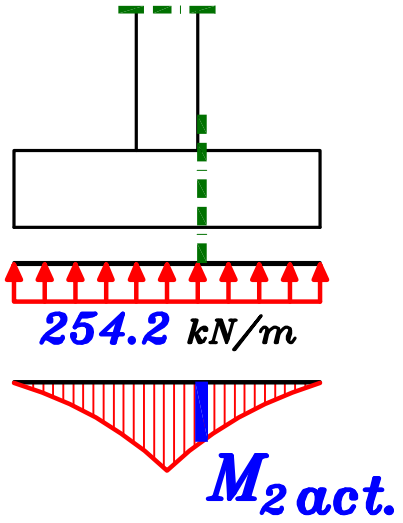

$$930 = C_1 \sqrt{\frac{521.2 * 10^6}{25 * 1000}} \longrightarrow C_1 = 6.44 \longrightarrow J = 0.826$$

$$A_s = \frac{M_{act.}}{J F_y d} = \frac{521.2 * 10^6}{0.826 * 360 * 930} = 1884.7 \ mm^2/m`$$

Check $A_{s\,min}$

$$A_{s\,min} = \left\{ \begin{array}{l} 1.5\,d = 1.5 * 930 = 1395 \\ 5\,\phi\,12/m` = 565 \end{array} \right\} 1395 \ mm^2$$

$\therefore A_s > A_{s\,min} \longrightarrow$ o.k.

$A_s = 1884.7 \ mm^2$ **5 ϕ 22/m`**

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

6– Details of Reinforcement.

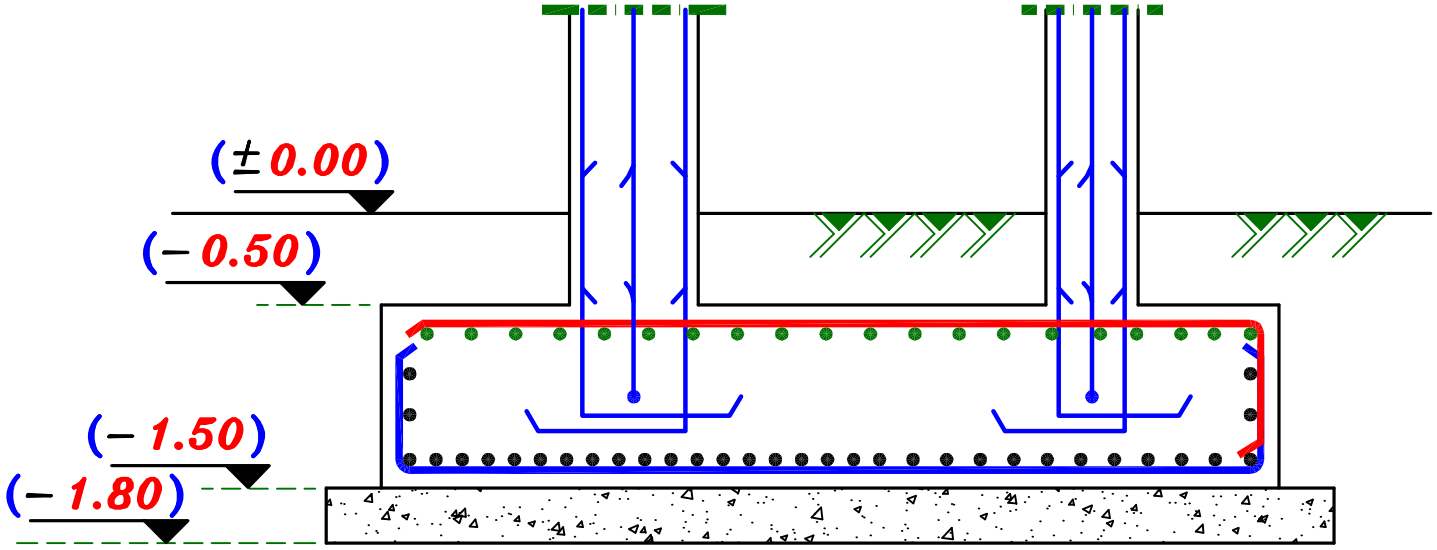

Sec X–X

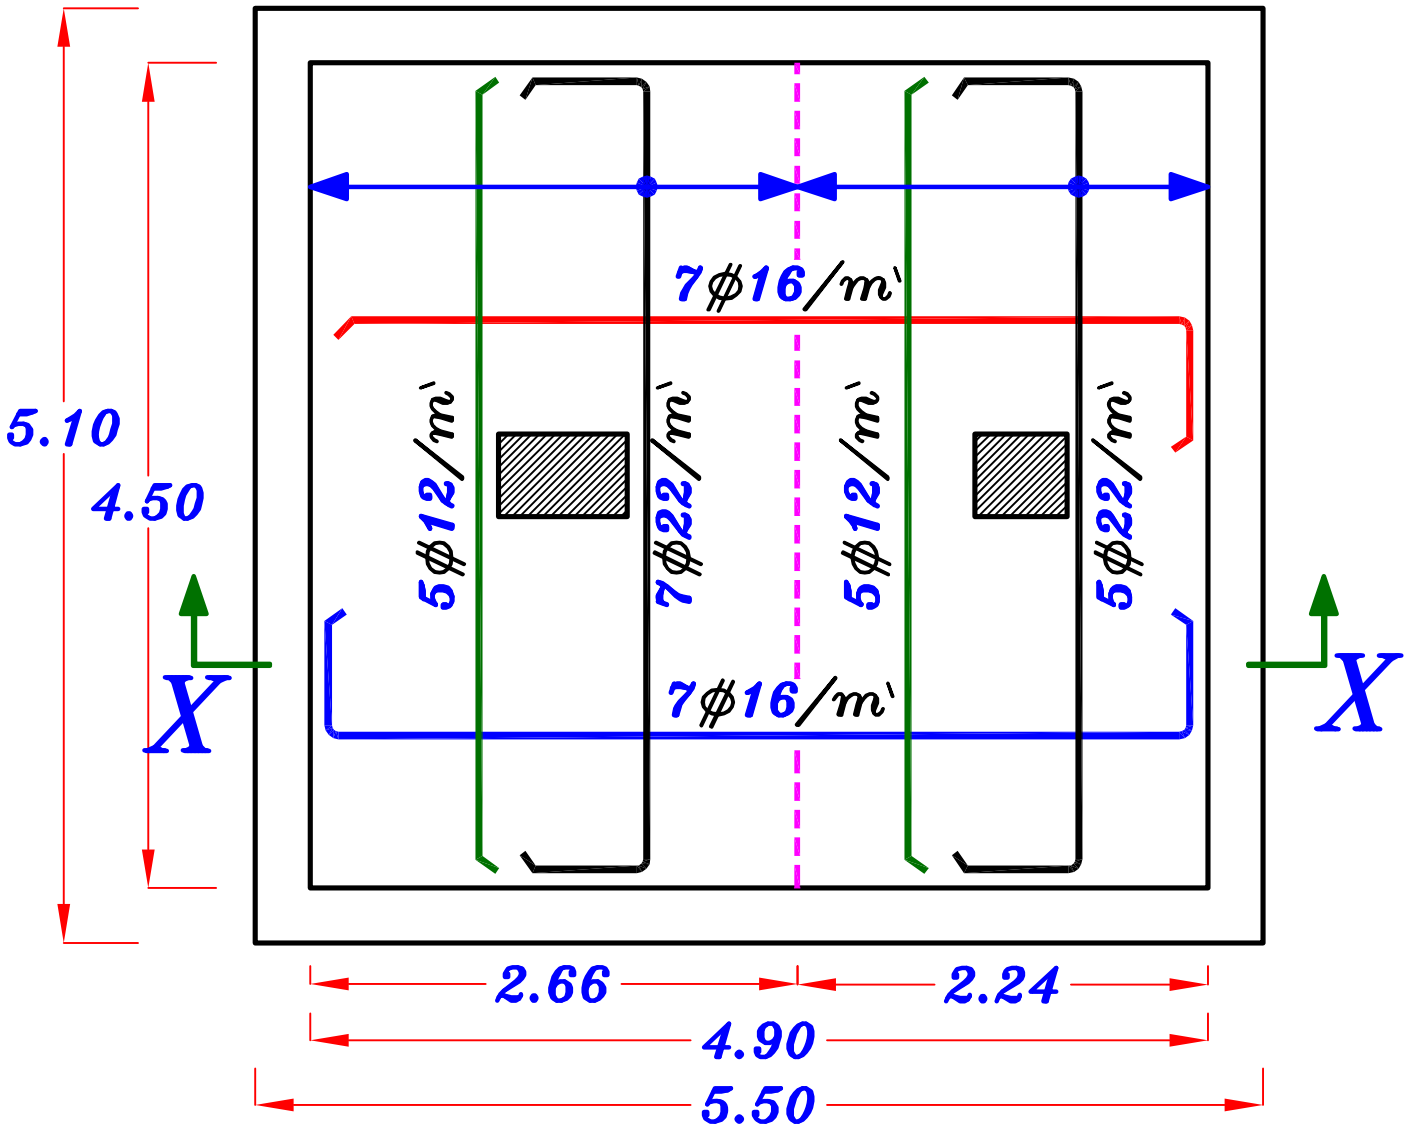

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

تصميم القواعد بجوار حد الجار .

يتم عمل قواعد لاعمده حد الجار فى احدى الحالتان التاليتان :-

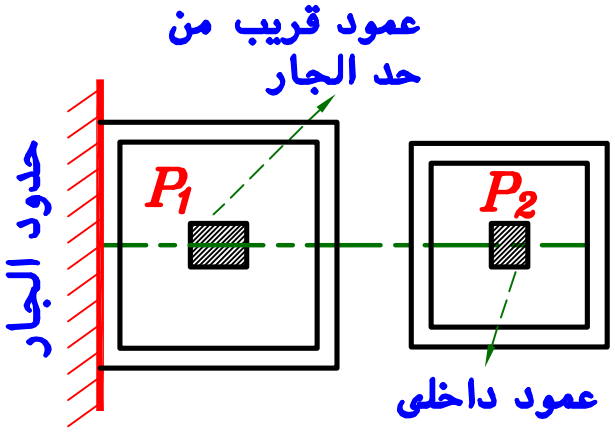

١- عند وجود عمود قريب من حد الجار نحاول أولا أن نعمل قاعده منفصله بأبعاد خاصه بحيث لا تدخل القاعده العاديه فى حدود الجار .

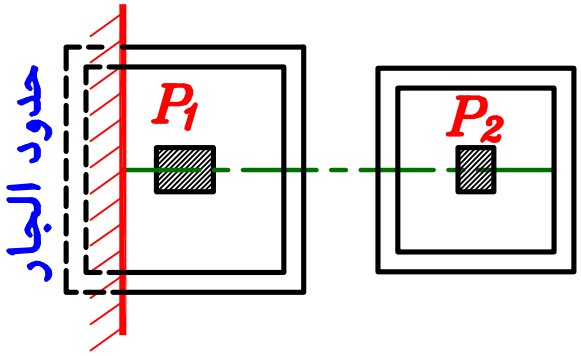

و لكن اذا زادت أبعاد القاعده و تعدت حدود الجار فيتم ربط عمود الجار بعمود داخلى مجاور

اما عن طريق قاعده مشتركه

Combined Footing

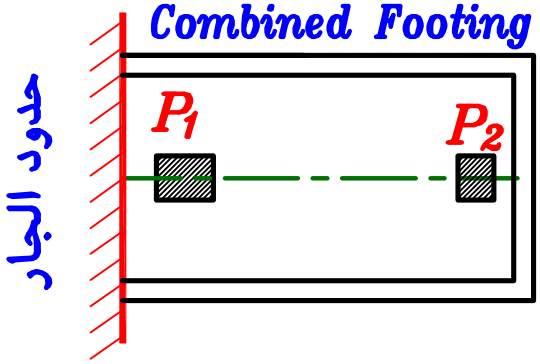

أو كمره كبيره للتحزيم

Strap beam

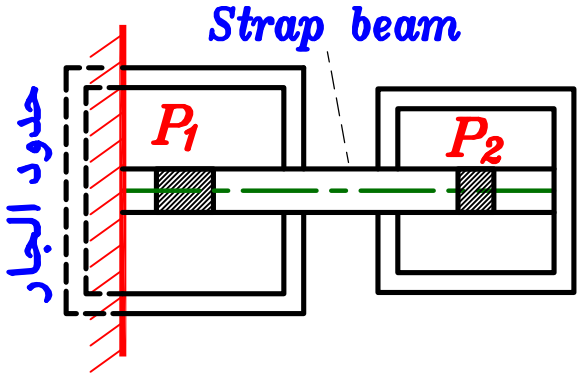

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

٢- عند وجود عمود عند حد الجار مباشره
يتم ربط عمود الجار بعمود داخلى
مجاور له

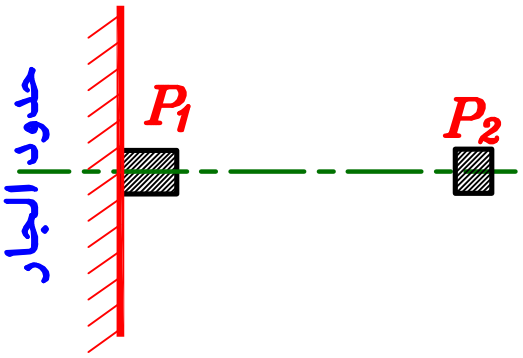

اما عن طريق قاعده مشتركه
Combined Footing
بحيث يكون مكان محصله الاحمال
هو نفس مكان *C.G.* القاعده

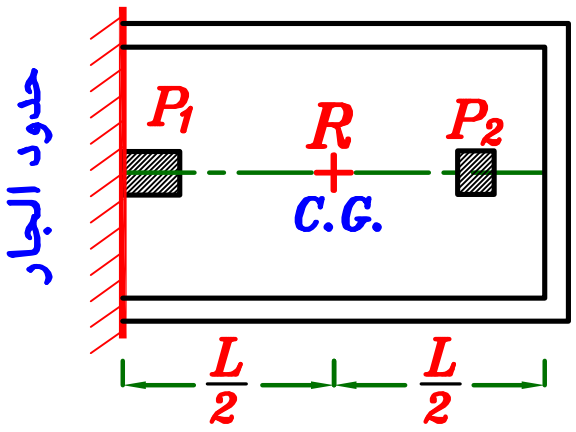

أو كمره كبيره للتحزيم
Strap beam

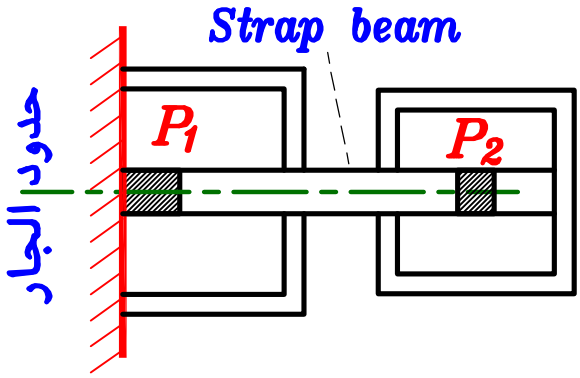

و يتوقف اختيار نوع القاعده التى سوف تربط عمود حد الجار بالعمود الداخلى على :

١- المسافه بين عمود حد الجار و العمود الداخلى المجاور C_1 , C_2 .

٢- قيمه الاحمال الواقعه على العمودين P_1 , P_2 .

٣- أكبر اجهاد تتحمله التربه *Bearing capacity of soil*

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

الحالات التى يمكن استخدام قاعده منفصله لعمود عند حد الجار .

١ ـ يجب أن لا يكون العمود ملاصق تماما لحد الجار .

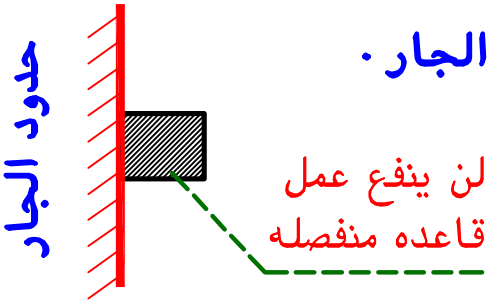

٢ ـ يجب أن لا تقل المسافه من (*C.L.*) العمود

الى حد الجار مسافه (*D*)

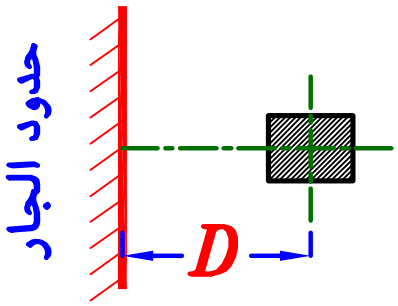

$$D > \frac{1}{2}\sqrt{\frac{P_{col.}}{q_{all}}}$$

اذا لم تتحقق هذه الشروط لن نستطيع عمل قاعده منفصله

و نضطر لربط هذا العمود بالعمود الداخلى المجاور له

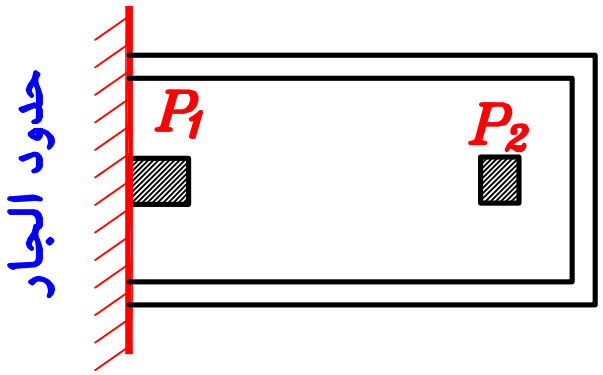

قاعده مشتركه

Combined Footing

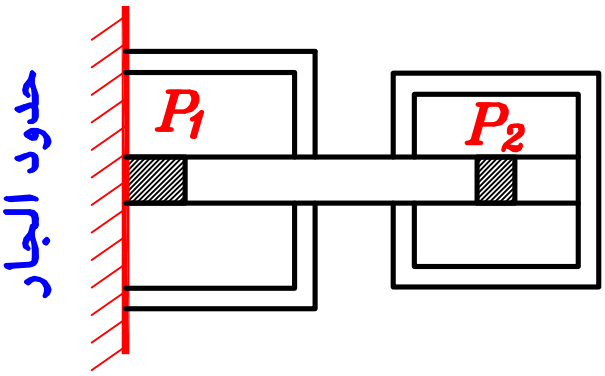

Strap beam

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

1 - Strap Beam. كمره تحزيم

اذا لم ينفع حل القواعد المنفصله لوجود احدى الاسباب التاليه .

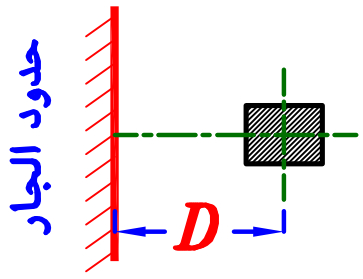

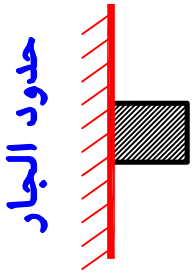

العمود ملاصق تماما لحد الجار .

$$D > \frac{1}{2}\sqrt{\frac{P_{col.}}{q_{all}}}$$

يتم التفكير فى استخدام Strap Beam

و لتحديد اذا كانت الـ Strap Beam تنفع أم لا فيتم حساب أبعاد القواعد المنفصله F_1 , F_2

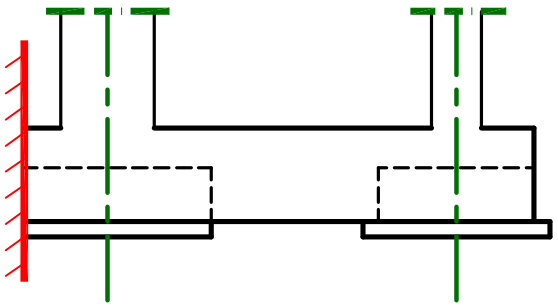

اذا حدث تداخل فى القواعد لن تنفع الـ Strap Beam و نعمل Combined Footing

اذا كانت المسافه بين القواعد المسلحه X أصغر من $\frac{L_1}{2}$ and $\frac{L_2}{2}$ لن تنفع Strap Beam و نعمل Combined Footing

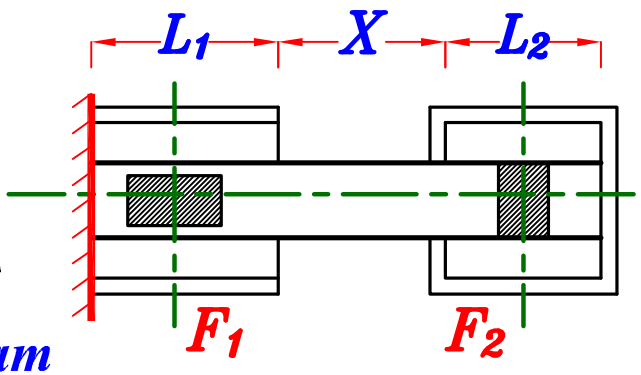

IF $X \geqslant \frac{L_1}{2}$ or $\frac{L_2}{2}$ أيهما أصغر ⟶ use strap beam

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

2 - Combined Footing. قاعده مشتركه

اذا لم ينفع حل ال Strap Beam

عندما تكون $IF\ X < \frac{L_1}{2}\ \&\ \frac{L_2}{2}$

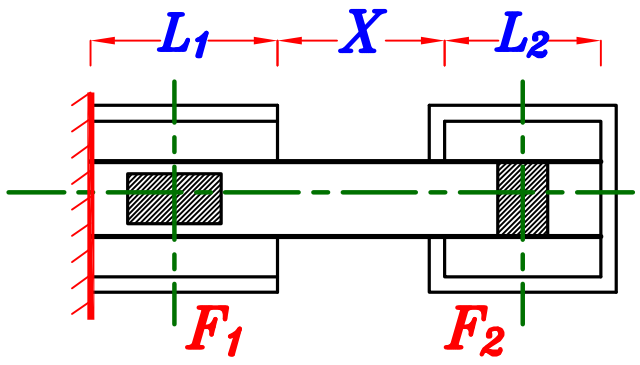

يتم عمل قاعده مشتركه و يكون شكلها كالاتى :

1- IF $P_1 < P_2$ use **Rectangular** combined Footing.

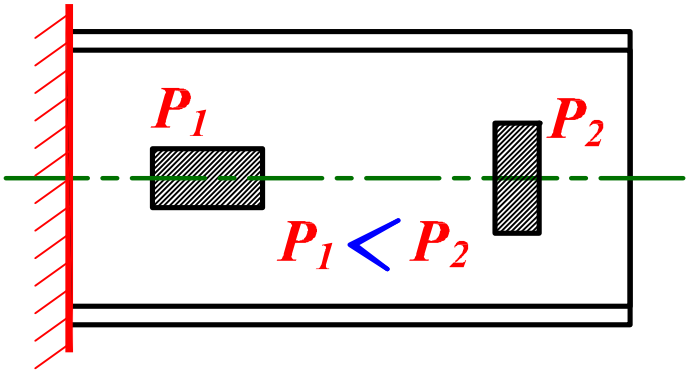

2- IF $P_1 > P_2$ use **Trapezoidal** combined Footing.

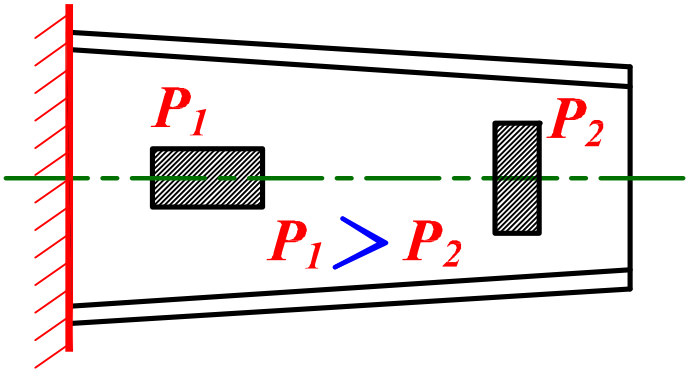

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Design of Strap Beam.

اذا لم ينفع حل القواعد المنفصله للاسباب السابقه .

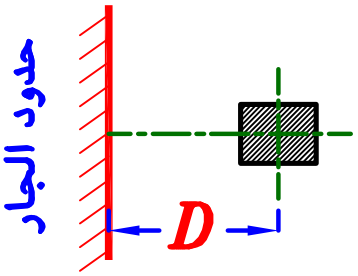

$$D > \frac{1}{2}\sqrt{\frac{P_{col.}}{q_{all}}}$$

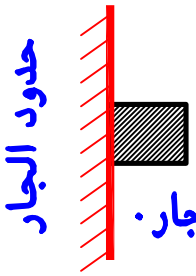

العمود ملاصق تماما لحد الجار .

يتم التفكير أولا فى استخدام Strap Beam

و لتحديد اذا كانت الـ Strap Beam تنفع أم لا فيتم حساب أبعاد القواعد المنفصله F_1 , F_2

اذا حدث تداخل فى القواعد لن تنفع الـ Strap Beam و نعمل Combined Footing

اذا كانت المسافه بين القواعد المسلحه X أصغر من $\frac{L_1}{2}$ and $\frac{L_2}{2}$

لن تنفع Strap Beam

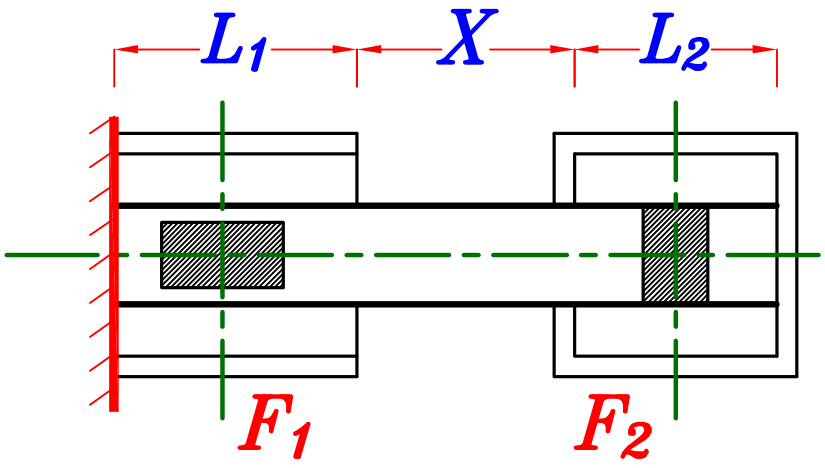

$$IF\ X \geqslant \frac{L_1}{2}\ or\ \frac{L_2}{2} \longrightarrow use\ strap\ beam$$

أيهما أصغر

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

الفكره العامه لاختيار Strap Beam

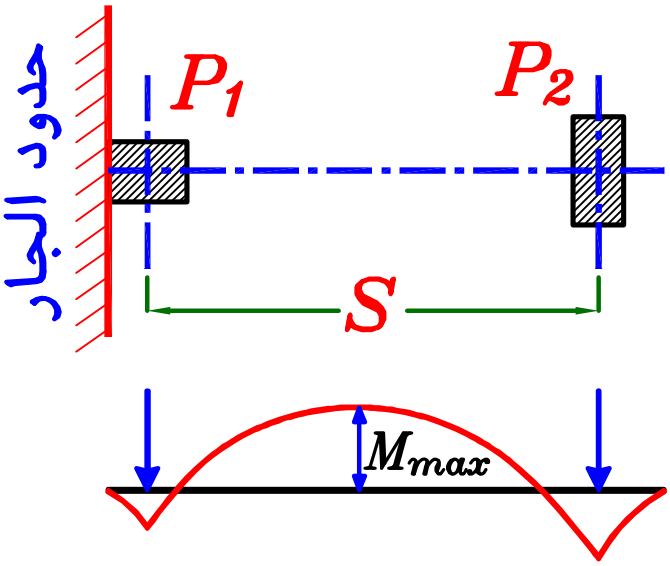

عندما تكون المسافه (S) بين العمود ناحيه الجار و العمود الداخلى كبيره و المفترض عمل قاعده مشتركه تربط بين العمودين معا فان طول هذه القاعده يكون كبير جدا و بالتالى يكون عليها عزم كبير جدا (M_{max}) .

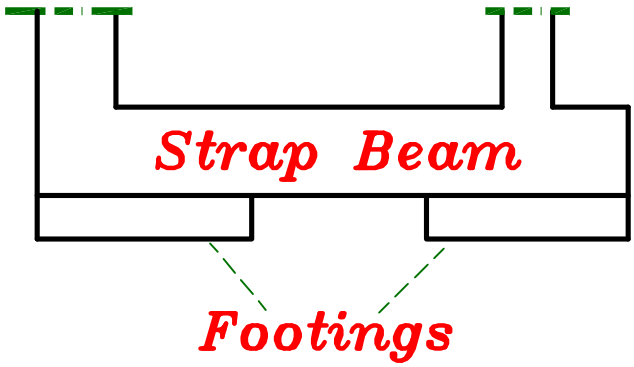

لذلك نلجاء لفكره الـ Strap Beam و هى أن أحمال الاعمده تنزل أولا على كمره كبيره (ذات عرض و عمق كبيرين) ثم يتم عمل قاعدتين أسفل العمودين ليكونا بمثابه supports للكمره لنقل الـ reactions الى التربه .

ترتيب نقل حمل العمود يكون كالاتى :

Columns ⟶ Strap Beam ⟶ 2 Footings ⟶ Soil

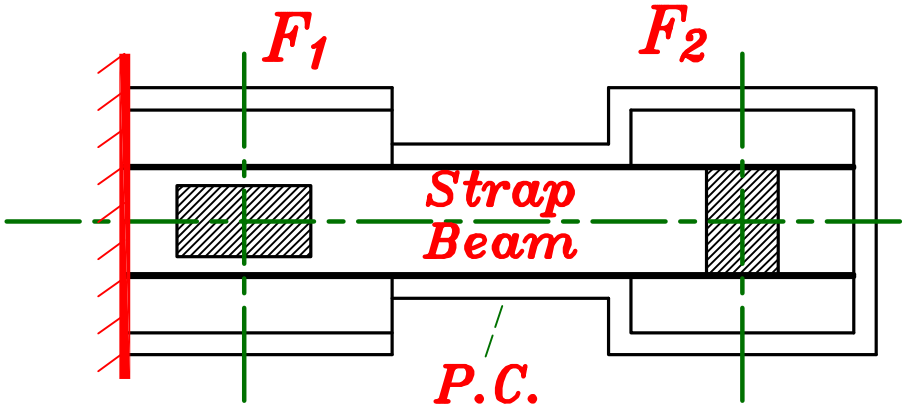

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

أشكال الـ Strap Beam و القاعدتين.

١- منسوب قاع القاعدتين
عند منسوب قاع الكمره

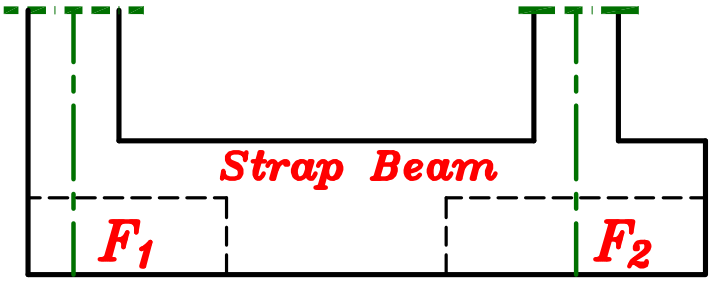

و هو الاكثر استخداما لانه أوفر فى عمق الحفر

٢- منسوب قاع القاعدتين
أسفل منسوب قاع الكمره

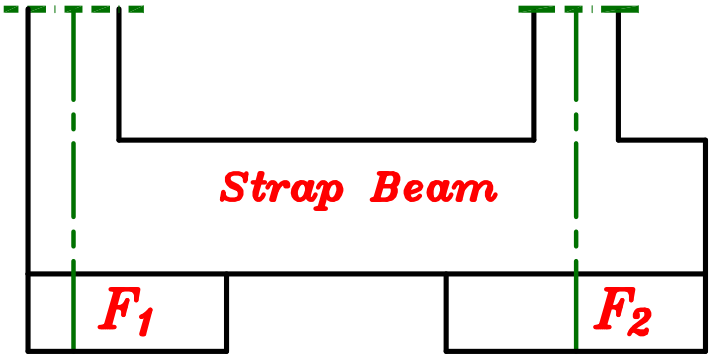

هذا الحل غير مفضل لانه يحتاج عمق حفر كبير.
و يتطلب معه أن يكون سُمك القاعدتين واحد.

٣- منسوب قاع القاعدتين
أسفل بكثير من منسوب
قاع الكمره.

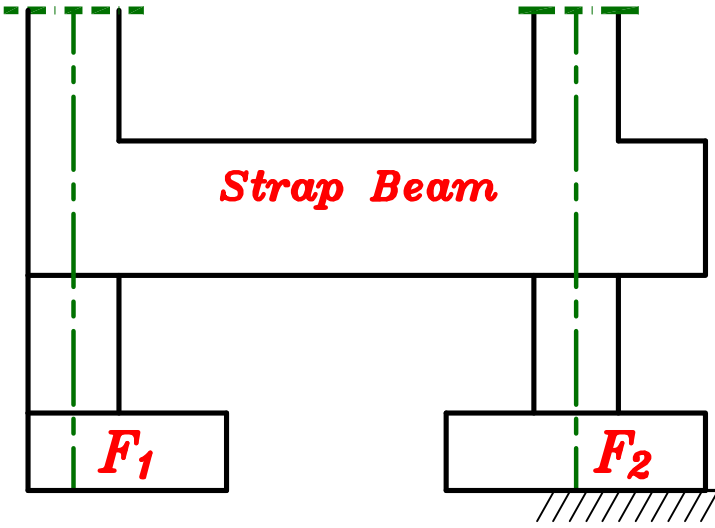

هذا الحل نلجاء له عندما تكون طبقه التأسيس عميقه.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Important Notes. ملحوظه هامه .

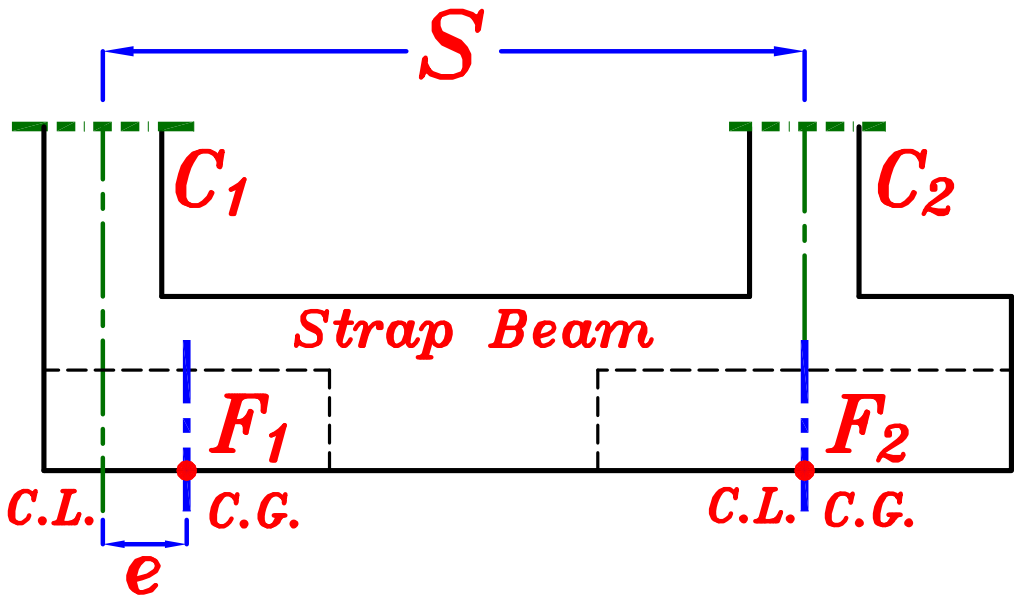

١- مركز القاعده أسفل العمود الداخلى يكون أسفل محور العمود مباشره .

القاعده C.G. F_2 تكون منطبقه مع C.L. العمود C_2 .

٢- مركز القاعده F_1 أسفل عمود الجار C_1 يكون على بعد مسافه (e) من محور العمود .

$$e = 0.1 + 0.2\ (S)$$

و ذلك حتى لا تدخل القاعده F_1 فى منطقه الجار .

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

6 a Design the Strap Beam and the two Footings.

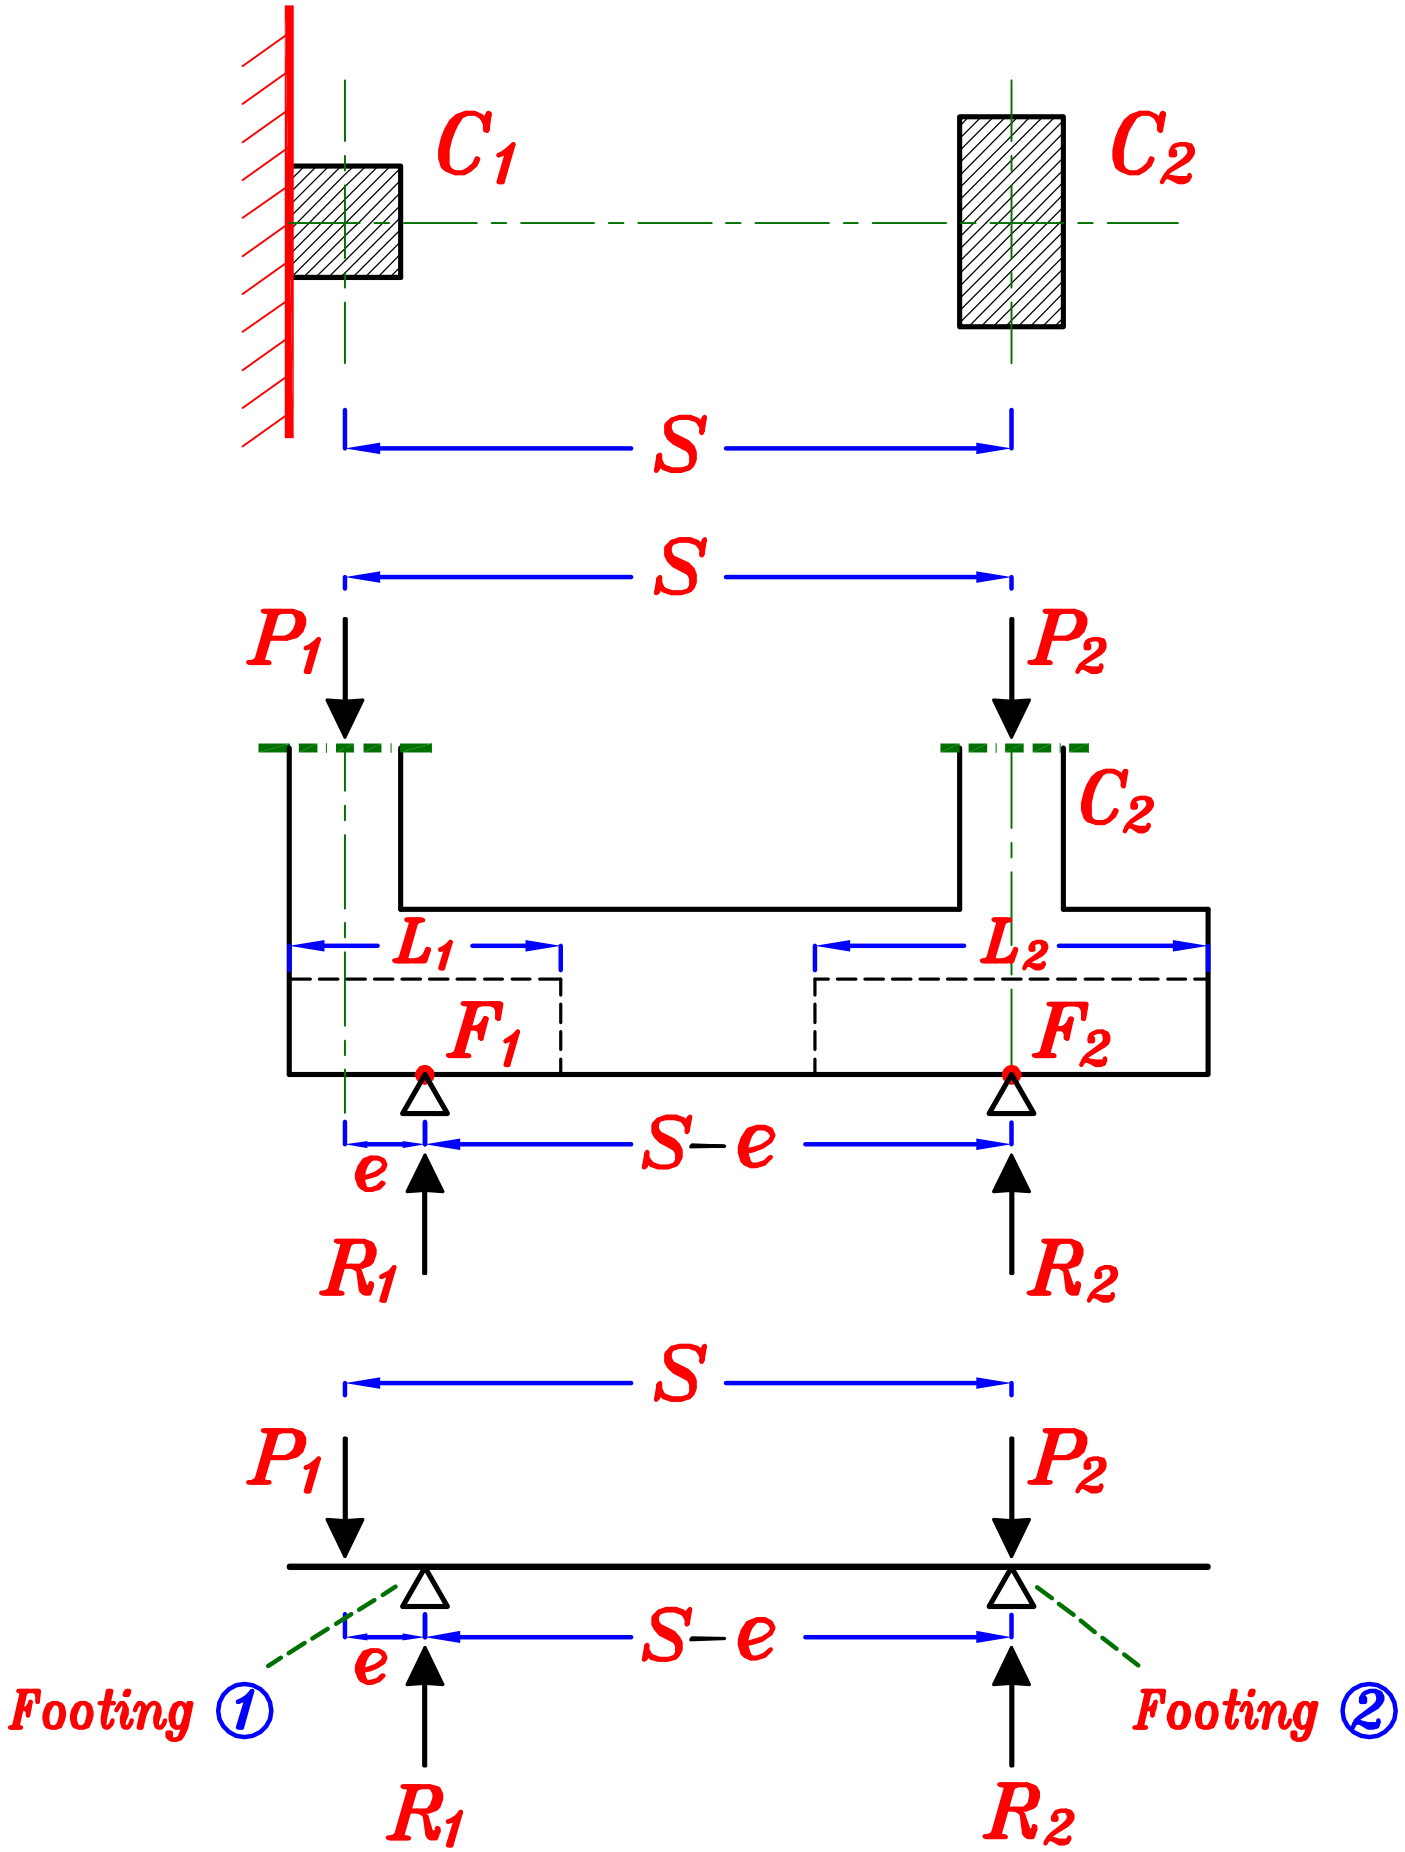

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

1– Calculate the Footing area. (Width & Length of R.C. Footings.)

- Take $e = 0.1 + 0.2\ (S)$
- Calculate the reactions on Footings R_1, R_2

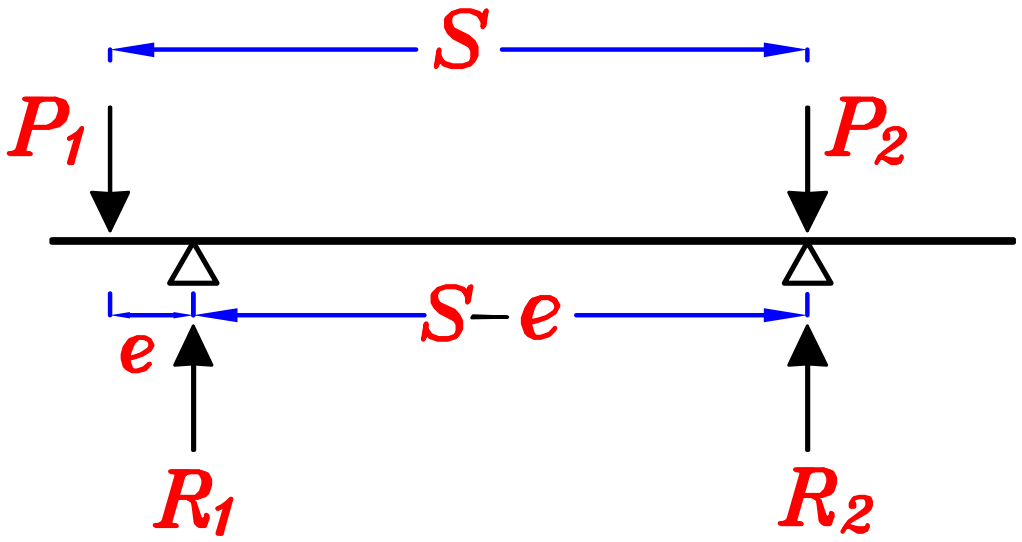

$$P_1 * S = R_1 * (S - e)$$

$$R_1 = \frac{P_1 * S}{S - e}$$

$$P_1 + P_2 = R_1 + R_2 \longrightarrow R_2 = R_1 - P_1 - P_2$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Footing F_1

IF $t_{P.C.} > 20\ cm$

$$L_{1\,P.C.} = 2\left(e + \frac{C_1}{2}\right)$$

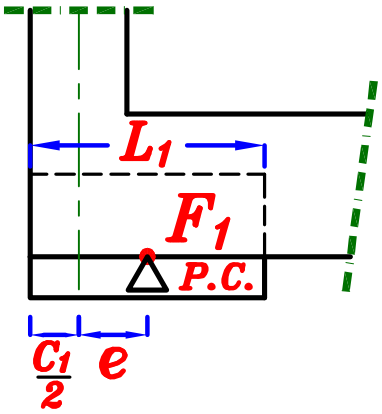

get $B_{1\,P.C.}$ From

$$A_{P.C.} = \frac{R_1}{q_{all}} = \surd\surd\ m^2$$

$$A_{P.C.} = B_{1P.C.} * L_{1P.C.} \longrightarrow B_{1P.C.} = \surd$$

$B_{1\,P.C.}$ بعد حساب

تقرب لاقرب ٥٠ مم بالزياده

$$B_{1R.C.} = B_{1P.C.} - 2\ t_{P.C.}$$

$$L_{1R.C.} = L_{1P.C.}$$

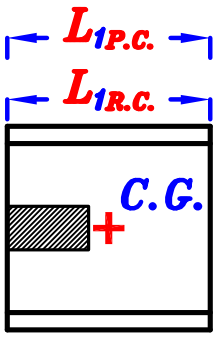

لا يوجد بروز للقاعده العاديه

حتى يكون C.G. للقاعده العاديه ينطبق على C.G. للقاعده المسلحه

IF $t_{P.C.} < 20\ cm$

$$L_{1\,R.C.} = 2\left(e + \frac{C_1}{2}\right)$$

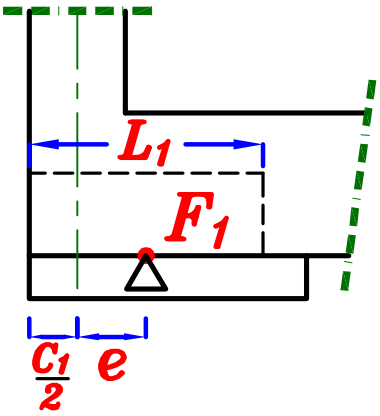

Get $B_{1R.C.}$ From $A_{R.C.} = \frac{R_1}{q_{all}} = \surd\surd\ m^2$

$$A_{R.C.} = B_{1R.C.} * L_{1R.C.} \longrightarrow B_{1R.C.} = \surd$$

$$B_{1P.C.} = B_{1R.C.} + 2\ t_{P.C.}$$

$$L_{1P.C.} = L_{1R.C.} + t_{P.C.}$$

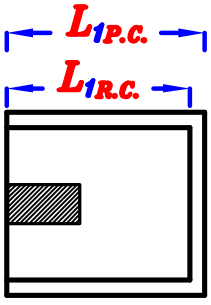

بروز من ناحيه واحده لان الناحيه الاخرى عندها حد الجار

لا يهم فى هذه الحاله أن ينطبق C.G. للقاعده العاديه و المسلحه

لان القاعده العاديه فى هذه الحاله فرشه نظافه .

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Footing F_2

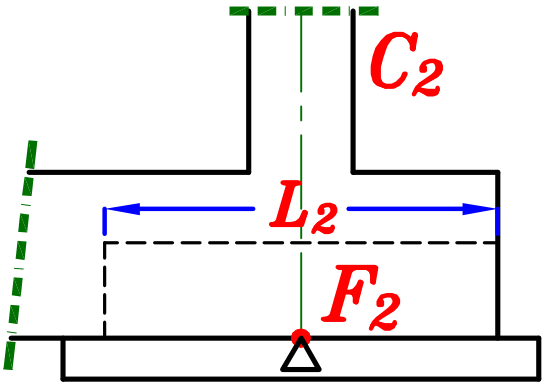

IF $t_{P.C.} > 20\ cm$

get $B_{P.C.}$, $L_{P.C.}$ From

$$A_{P.C.} = \frac{R_2}{q_{all}} = \surd\surd\ m^2 = B_{2\,P.C.} * L_{2\,P.C.} \text{ ------ (1)}$$

$$L_{2\,P.C.} - B_{2\,P.C.} = b - a \text{ ------ (2)}$$

بعد حساب $B_{2\,P.C.}$ & $L_{2\,P.C.}$ يقربا لاقرب ٥٠ مم بالزياده

$$B_{2\,R.C.} = B_{2\,P.C.} - 2\ t_{P.C.}$$

$$L_{2\,R.C.} = L_{2\,P.C.} - 2\ t_{P.C.}$$

IF $t_{P.C.} < 20\ cm$

get $B_{R.C.}$, $L_{R.C.}$ From

$$A_{R.C.} = \frac{R_2}{q_{all}} = \surd\surd\ m^2 = B_{2\,R.C.} * L_{2\,R.C.} \text{ ------ (1)}$$

$$L_{2\,R.C.} - B_{2\,R.C.} = b - a \text{ ------ (2)}$$

بعد حساب $B_{2\,R.C.}$ & $L_{2\,R.C.}$ يقربا لاقرب ٥٠ مم بالزياده

$$B_{2\,P.C.} = B_{2\,R.C.} + 2\ t_{P.C.}$$

$$L_{2\,P.C.} = L_{2\,R.C.} + 2\ t_{P.C.}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

2– Check the validity of using Strap Beam .

نتأكد من سماحيه عمل Strap Beam أم لا .

نرسم sketch للقاعدتين F_2 , F_1 و نحدد عليه أبعاد كل قاعده .

IF $t_{P.C.} > 20\ cm$

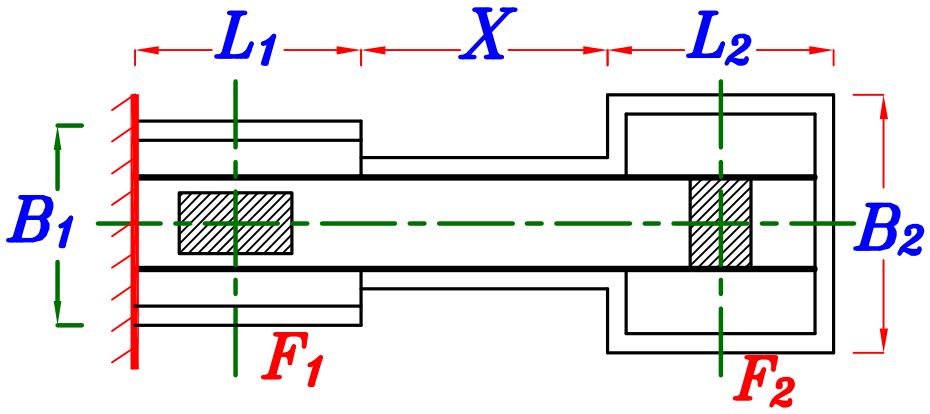

IF $t_{P.C.} < 20\ cm$

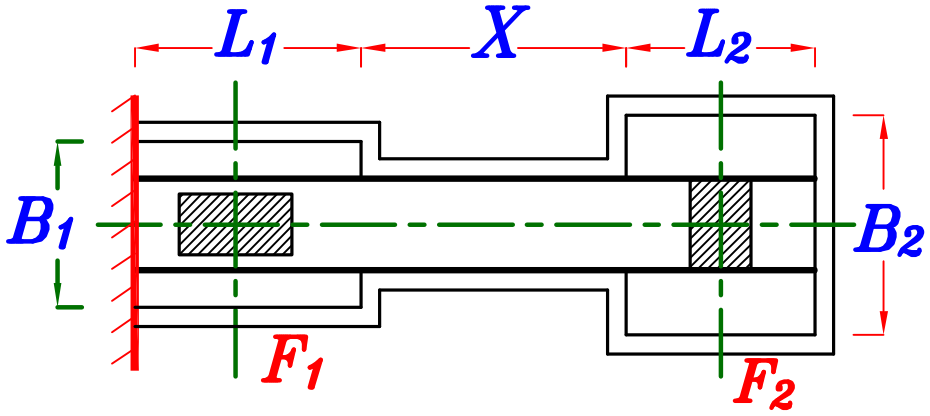

شروط استخدام الـ Strap Beam .

١- عدم حدوث تداخل بين القاعدتين F_1 , F_2

٢- أن لا تقل المسافه X عن الاصغر من $\frac{L_1}{2}$ and $\frac{L_2}{2}$

٣- أن تكون أبعاد القاعده F_1 لها الاستطاله الاكبر فى اتجاه حد الجار .

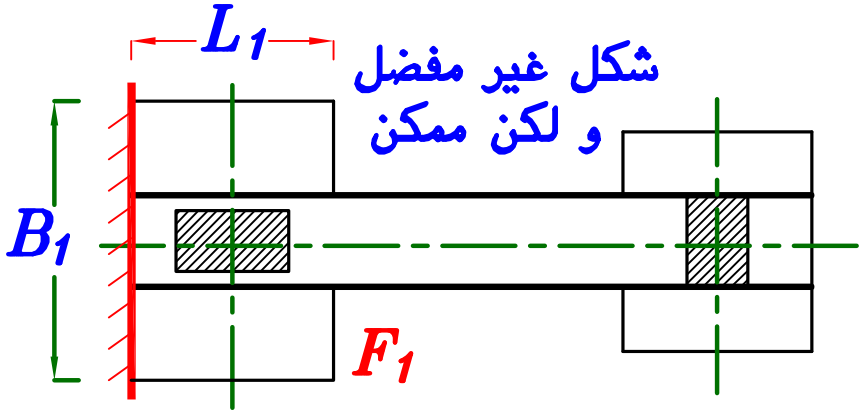

شكل غير مفضل
و لكن ممكن

$$L_1 \geqslant B_1$$

اذا لم يتحقق أيا من الشروط السابقه نضطر لعمل
Combined Footing

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

3 – Dimensions of the Strap Beam. (Width & depth)

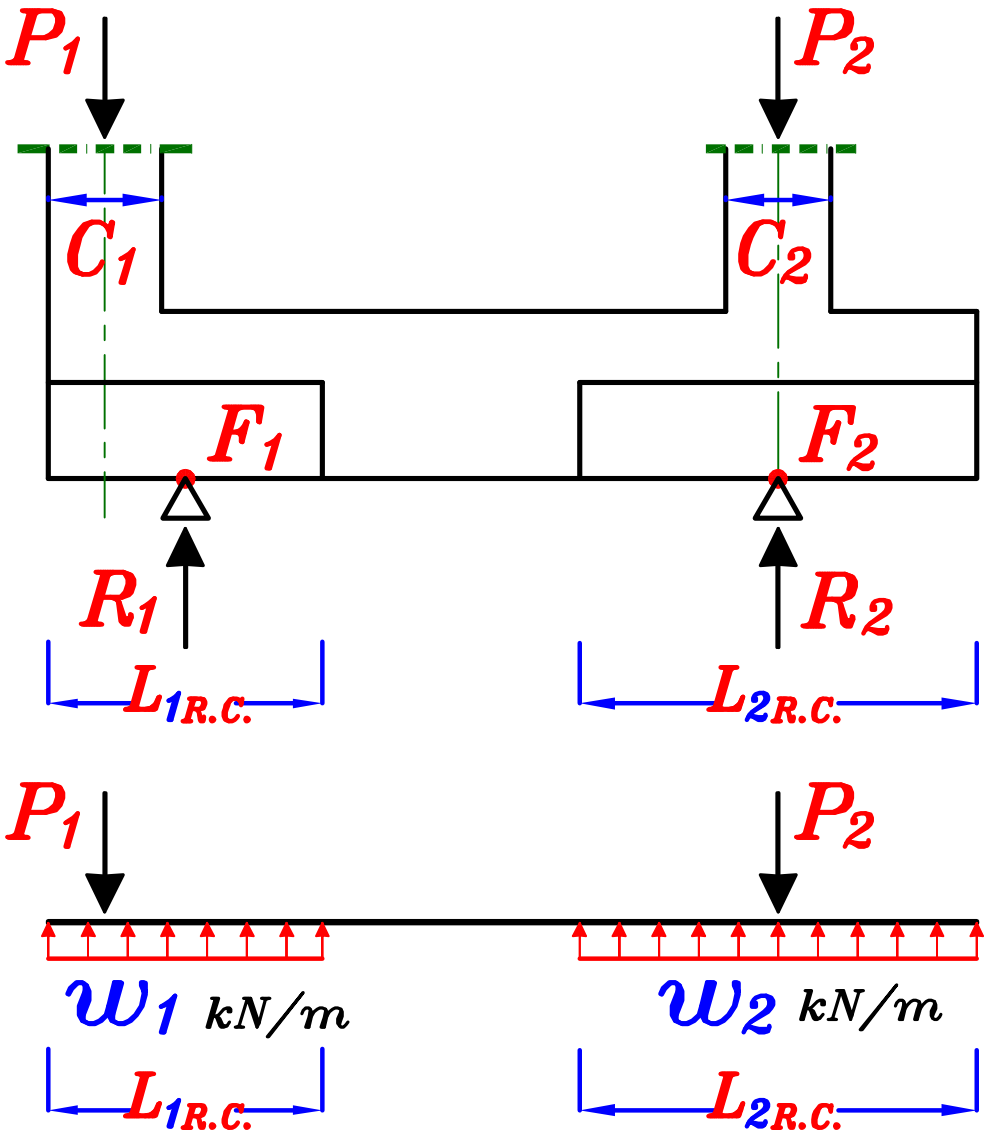

Stresses on Footings.

$$w_1 = \frac{R_1\ (U.L.)}{L_{1\,R.C.}} \quad (kN/m)$$

$$w_2 = \frac{R_2\ (U.L.)}{L_{2\,R.C.}} \quad (kN/m)$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Drawing B.M.D. & S.F.D. For the Beam.

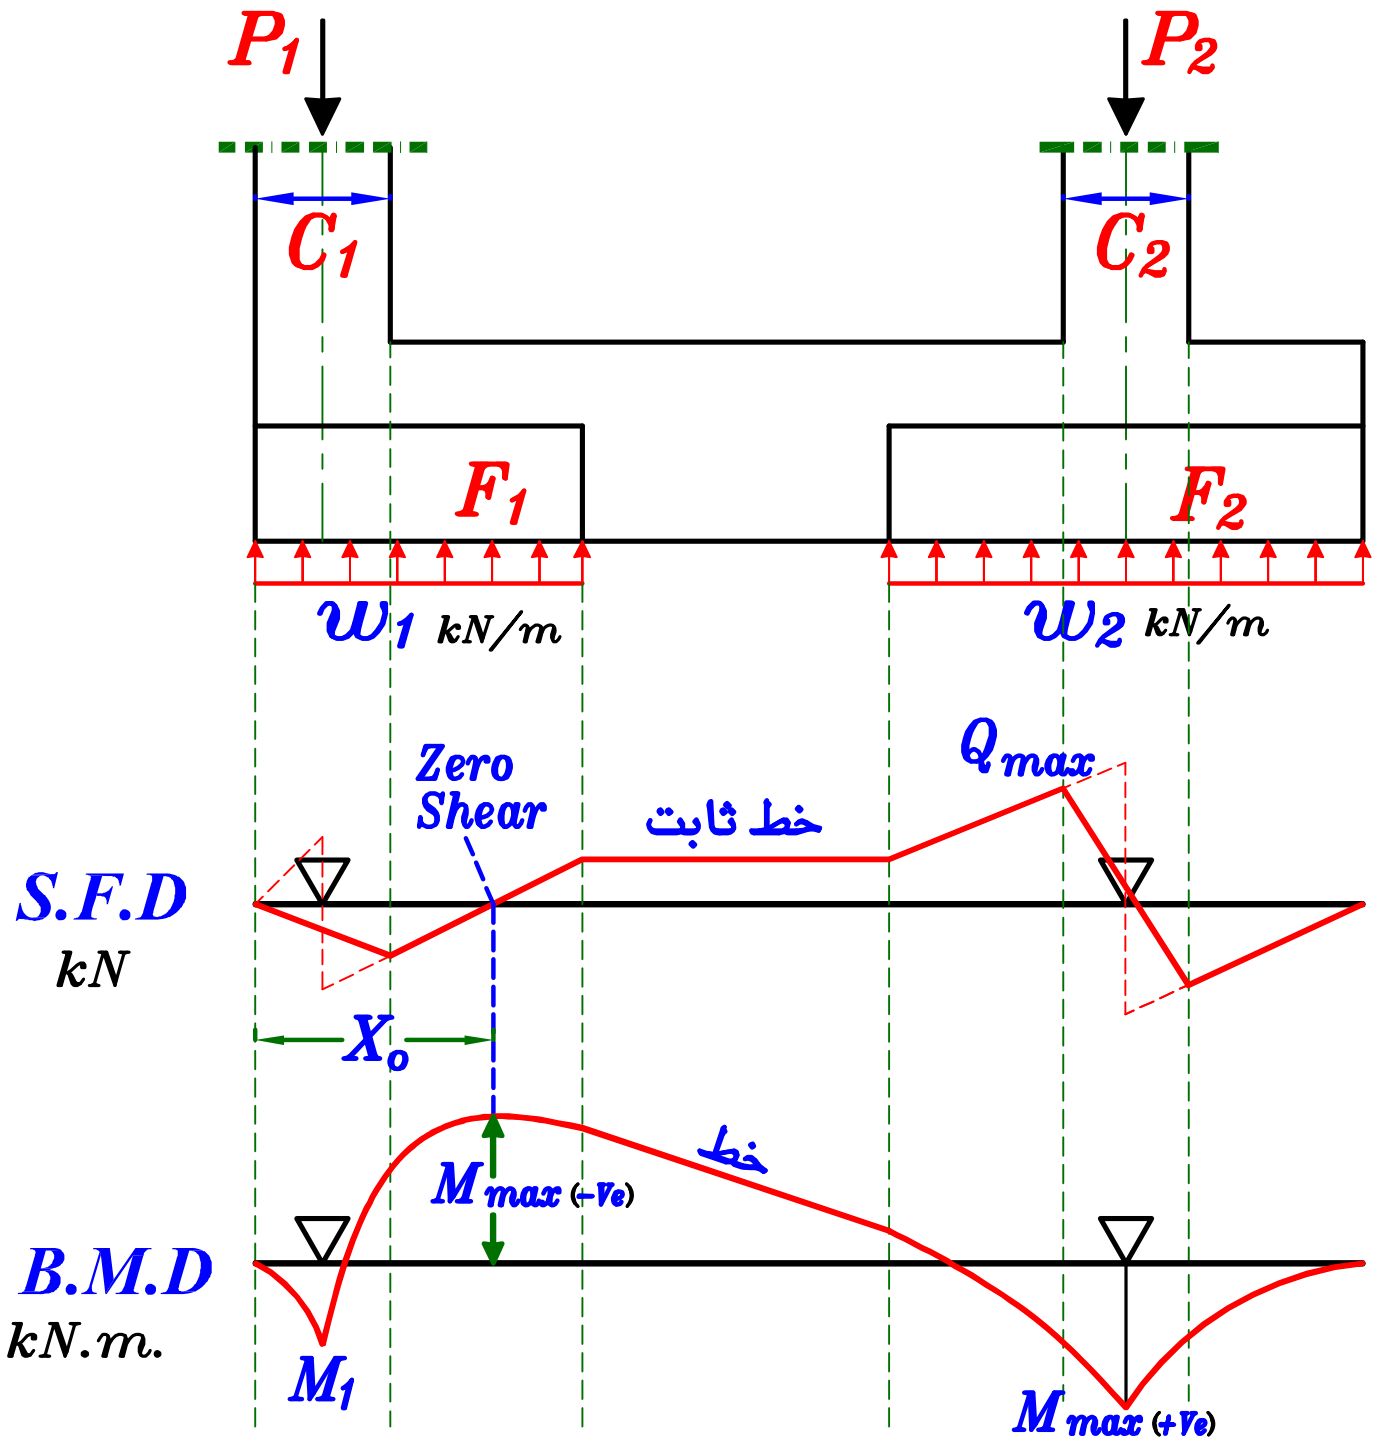

To Calculate the point of Zero Shear.

$$w_1 = P_1 \ (X_o) \longrightarrow X_o = \checkmark$$

To Calculate the max (-Ve) Moment.

$$M_{max\ (-Ve)} = P_1 \left(X_o - \frac{C_1}{2}\right) - w_1 \frac{(X_o)^2}{2}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

M_{max} the bigger From M_{max} (-Ve) & M_{max} (+Ve)

Choose $b = (400 \rightarrow 1000)$ mm

$b \not< C_1$ or C_2

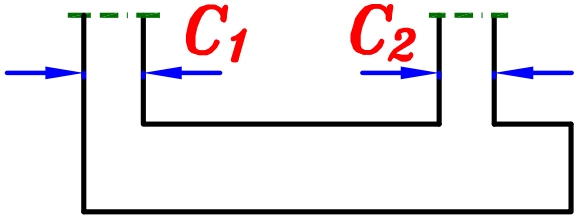

لا يقل عرض الكمره عن عرض العمود العمودى عليها

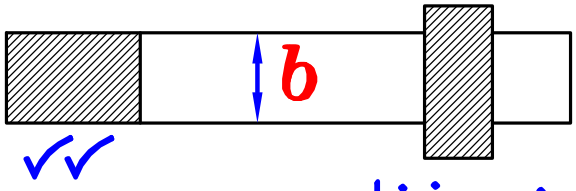

✓✓

غير مفضل

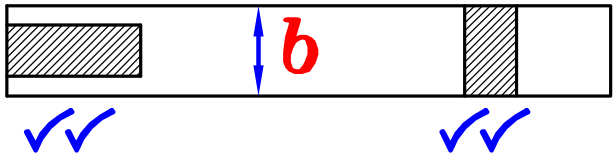

✓✓ ✓✓

Recommended $b \simeq \frac{d}{2}$

$$d\ (mm) = C_1 \sqrt{\frac{M_{max}\ (kN.m) * 10^6}{F_{cu}\ (N/mm^2) * b\ (mm)}}$$

Choose $C_1 = (3.5 \rightarrow 5.0)$

Get d = ✓✓ (mm)

Take $cover = 70$ mm

$t = d + cover\ (70\ mm)$ بالزياده تقرب لاقرب ٥٠ مم

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

4 – Check Shear For Strap Beam. as beams.

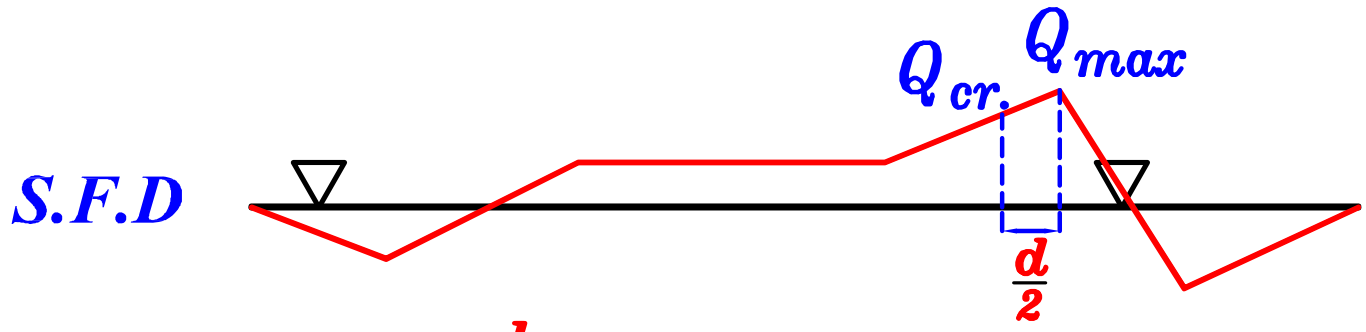

$Q_{cr.}$ على بعد $\frac{d}{2}$ من وش العمود

$$Q_{cr.} = Q_{max.} - w\left(\frac{d}{2}\right)$$

① Calculate Allowable Shear Stresses.

$$q_{cu} = 0.24 \sqrt{\frac{F_{cu}}{\delta_c}} \quad N\backslash mm^2$$

$$q_{max.} = 0.70 \sqrt{\frac{F_{cu}}{\delta_c}} \quad N\backslash mm^2$$

② Calculate Actual Shear Stress.

$$q_U = \frac{Q_{cr.}}{b\,d} \quad N\backslash mm^2$$

③ IF

IF q_U

$q_U \leqslant q_{cu}$	$q_{cu} < q_U \leqslant q_{Umax.}$	$q_U > q_{Umax.}$
Use min. Stirrups.	We need Stirrups	Increase Dim.
$5\phi 10\backslash m$	More Than $5\phi 10\backslash m$	b or d
4 branches		

© Copyright Eng. Yasser El-Leathy 2010 . All rights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

* $IF \quad q_{cu} < q_U < q_{U\,max.}$

We need Stirrups more than $5 \phi 8 \backslash m`$

$$q_{su} = q_u - \frac{q_{cu}}{2} = \frac{n\, A_s\, (F_y \backslash \gamma_s)}{b\ S}$$

Where : q_{su} = Shear Stress Taken by Stirrups only.

q_u = Actual Shear Stress.

$\frac{q_{cu}}{2}$ = Shear Stress Taken by Concrete only.

- n = No. of Branches.

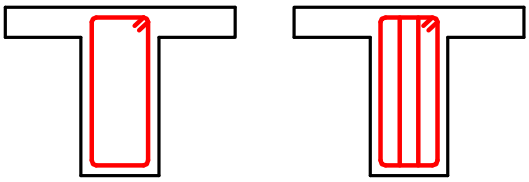

$n = 2$ $\qquad$ $n = 4$

ملحوظه

IF $b \geqslant 400$ mm OR $b > t$

Take $n = 4$

$x \leqslant 50$ mm

$x \geqslant 250$ mm

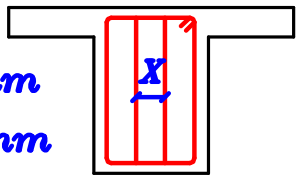

- A_s مساحه سطح السيخ الواحد من الكانه

IF using $\phi 8 \longrightarrow A_s = 50.3 \ mm^2$

IF using $\phi 10 \longrightarrow A_s = 78.5 \ mm^2$

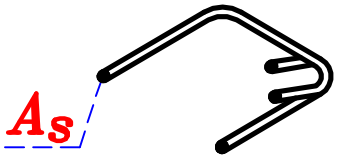

- $F_y = 240 \quad N\backslash mm^2$ Mild Steel

$F_y = 360 \quad N\backslash mm^2$ H.T.Steel

- S = Spacing between stirrups in the Long Direction.

المسافات بين الكانات فى الإتجاه الطولى

$S_{min} = 100$ mm

$S_{max.} = 200$ mm

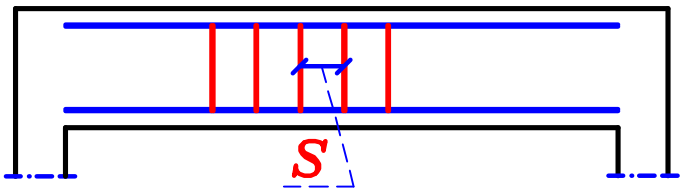

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

5 – Reinforcement of Strap Beam.

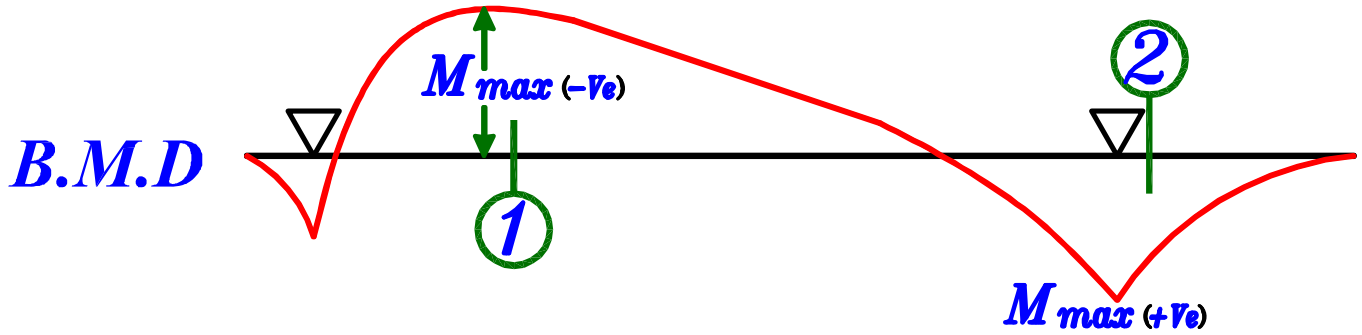

Sec. ①

$$d = C_1 \sqrt{\frac{M_{max\,(-Ve)}}{F_{cu} * b}} \longrightarrow C_1 \longrightarrow J$$

Get $$A_{s\,Top} = \frac{M_{max\,(-Ve)}}{J\ F_y\ d} \quad (mm^2)$$

Check

$$A_{s\,min} = \begin{cases} \dfrac{1.1}{F_y}\, b\, d \\ 1.3\, A_{s\,req.} \end{cases} \text{الأقل} \quad \Big\} \text{الأكبر}$$

$$\frac{0.15}{100}\, b\, d$$

Sec. ②

$$d = C_1 \sqrt{\frac{M_{max\,(+Ve)}}{F_{cu} * b}} \longrightarrow C_1 \longrightarrow J$$

Get $$A_{s\,bott} = \frac{M_{max\,(+Ve)}}{J\ F_y\ d} \quad (mm^2)$$

Check $A_{s\,min}$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

6 – Design of Footings. as a strip Footing.

Footing. F_1

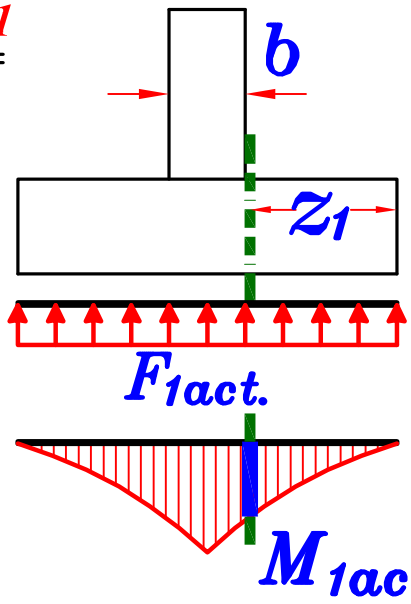

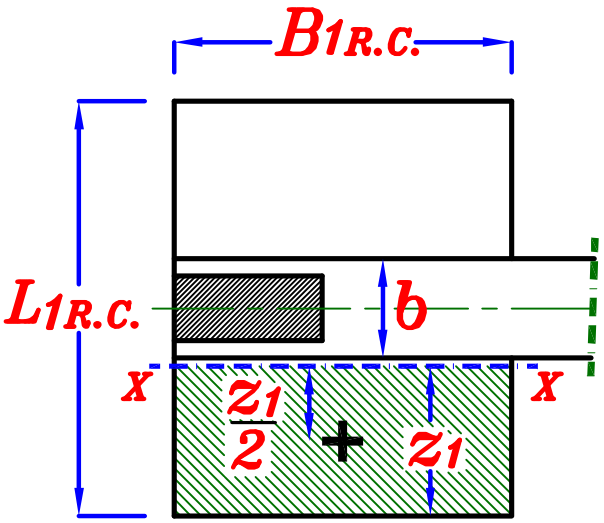

Footing. F_1

– *Actual Normal stress on R.C. Footing* (U.L.)

$$F_{1act.} = \frac{R_{1U.L.}}{B_{1R.C.} * L_{1R.C.}} \quad (kN/m^2)$$

– *Critical section of bending at R.C. Footing.* $z_1 = \frac{L_{1R.C.} - b}{2}$ (m)

– *moment = Force * Distance*

$$M_{1act.} = (F_{1act.} * z_1 * B_{1R.C.}) \frac{z_1}{2} \quad (kN.m)$$

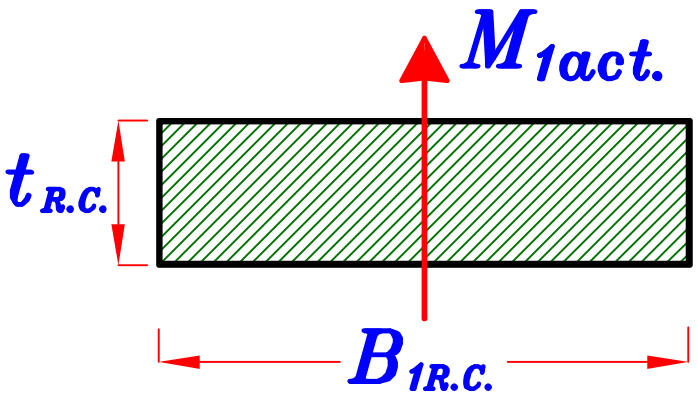

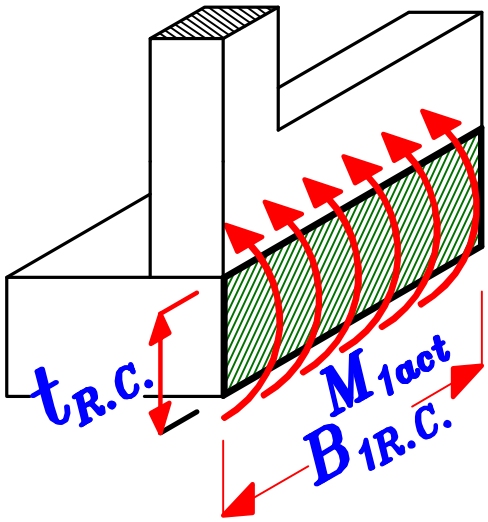

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$$d_1 = C_1 \sqrt{\frac{M_{1act.}}{F_{cu} * B_{1R.C.}}} \qquad Take\ C_1 = (3.5 \rightarrow 5.0)$$

Get $d_1 = \checkmark\checkmark$ (mm)

Take $cover = 70\ mm$

$$t_{1\ R.C.} = d_1 + cover\ (70\ mm)$$

تقرب لاقرب ٥٠ مم بالزياده

Check Shear.

* Calculate $l_1 = z_1 - d$ (m)

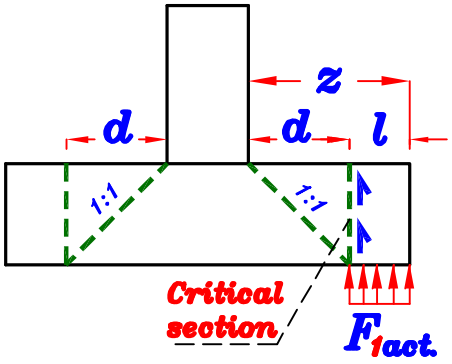

* Calculate Actual shear Force. (Q_u)

$$Q_{1u} = F_{act.} * l_1 * 1.0\,m \quad (kN)$$

* Calculate Actual shear stress. (q_u)

$$q_{u1} = \frac{Q_{1u}}{b * d_1} = \frac{Q_{1u}\,(kN) * 10^3}{1000 * d_1\,(mm)}$$

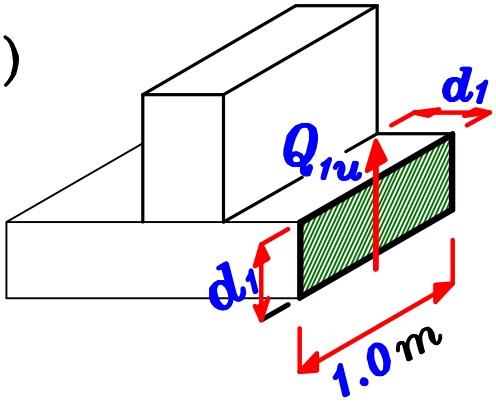

* Calculate Allowable shear stress. (q_{su})

$$q_{su} = 0.16 \sqrt{\frac{F_{cu}}{\gamma_c}}$$

* Compare between

Actual shear stress (q_u) & Allowable shear stress (q_{su})

* IF $q_{u1} \leqslant q_{su} \longrightarrow$ Safe shear stresses

No need to increase dimensions.

* IF $q_{u1} > q_{su} \longrightarrow$ UnSafe shear stresses

We have to increase dimensions.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Reinforcement of the Footing.

From C_1 $\xrightarrow{\text{Get}}$ J

Get $$A_{s1} = \frac{M_{1act.}}{J\ F_y\ d_1} \quad (mm^2)$$

Check $$A_{s\,min}\ (mm^2/m) = \left\{ \begin{array}{l} 1.5\,d\ (mm) \\ 5\ \phi\ 12/m' \end{array} \right\} \text{الأكبر}$$

IF $A_{s1} \geq A_{s\,min}$ $\longrightarrow$ o.k.

IF $A_{s1} < A_{s\,min}$ $\longrightarrow$ Take $A_{s1} = A_{s\,min}$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Footing. F_2

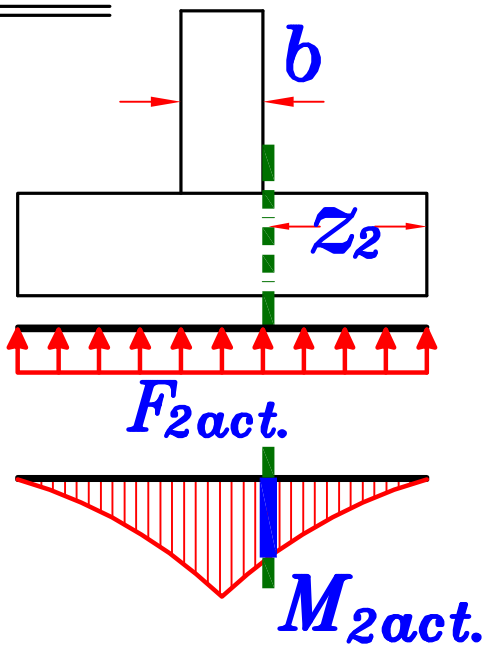

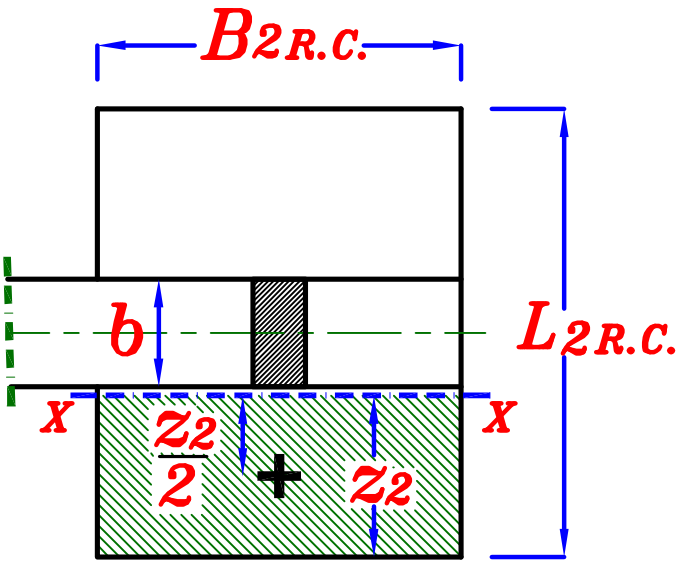

Footing. F_2

– *Actual Normal stress on R.C. Footing* (U.L.)

$$F_{2act.} = \frac{R_{2U.L.}}{B_{2R.C.} * L_{2R.C.}} \quad (kN/m^2)$$

– *Critical section of bending at R.C. Footing.* $z_2 = \frac{L_{2R.C.} - b}{2}$ (m)

– *moment = Force * Distance*

$$M_{2act.} = (F_{2act.} * z_2 * B_{2R.C.}) \frac{z_2}{2} \quad (kN.m)$$

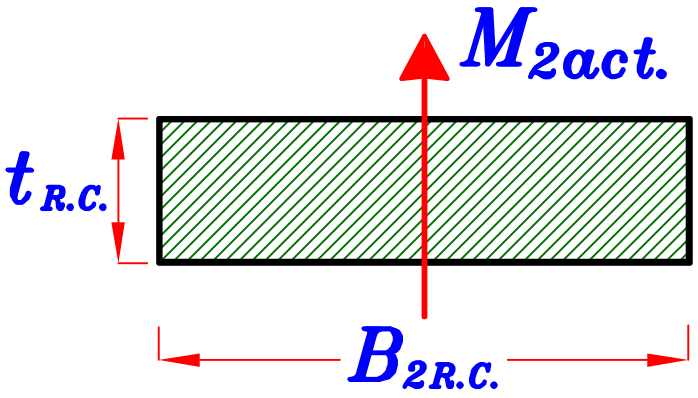

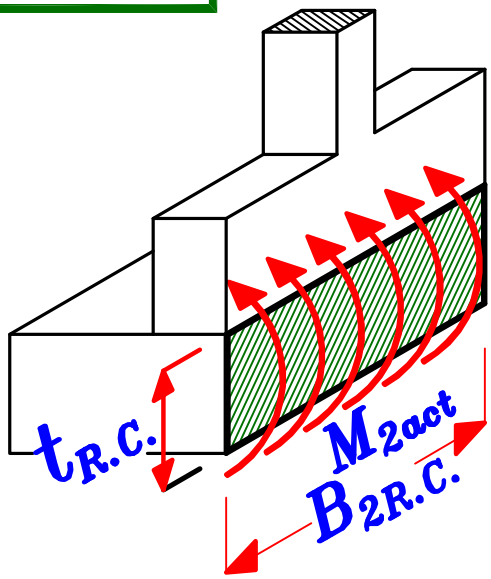

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$$d_2 = C_1 \sqrt{\frac{M_{2act.}}{F_{cu} * B_{1R.C.}}} \qquad Take\ C_1 = (3.5 \rightarrow 5.0)$$

Get $d_2 =$ ✓✓ (mm)

Take cover = 70 mm

$$t_{2\,R.C.} = d_2 + cover\ (70\ mm)$$

تقرب لاقرب ٥٠ مم بالزياده

Check Shear.

* Calculate $l_2 = z_2 - d$ (m)

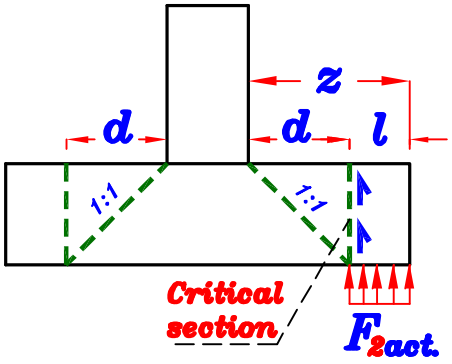

* Calculate Actual shear Force. (Q_u)

$$Q_{2u} = F_{act.} * l_2 * 1.0\ m \quad (kN)$$

* Calculate Actual shear stress. (q_u)

$$q_{2u} = \frac{Q_{2u}}{b * d_2} = \frac{Q_{2u}\,(kN) * 10^3}{1000 * d_2\,(mm)}$$

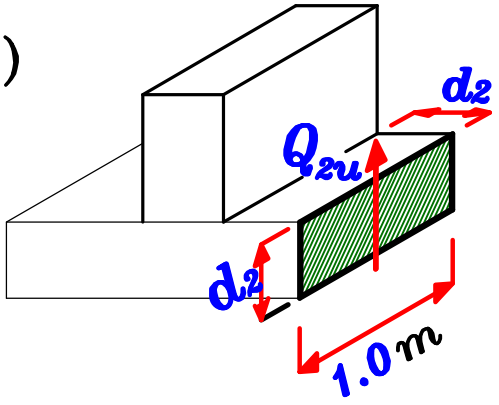

* Calculate Allowable shear stress. (q_{su})

$$q_{su} = 0.16 \sqrt{\frac{F_{cu}}{\gamma_c}}$$

* Compare between

Actual shear stress (q_u) & Allowable shear stress (q_{su})

* IF $q_{u2} \leqslant q_{su} \longrightarrow$ **Safe shear stresses**
  No need to increase dimensions.

* IF $q_{u2} > q_{su} \longrightarrow$ **UnSafe shear stresses**
  We have to increase dimensions.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Reinforcement of the Footing.

From C_1 Get $\longrightarrow$ J

Get $$A_{s2} = \frac{M_{2act.}}{J\ F_y\ d_2} \quad (mm^2)$$

Check $$A_{s\,min}\ (mm^2/m) = \left\{ \begin{array}{l} 1.5\,d\ (mm) \\ 5\,\phi\,12/m' \end{array} \right\}$$ الأكبر

IF $A_{s2} \geqslant A_{s\,min} \longrightarrow$ o.k.

IF $A_{s2} < A_{s\,min} \longrightarrow$ Take $A_{s1} = A_{s\,min}$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

7 – Details of Reinforcement.

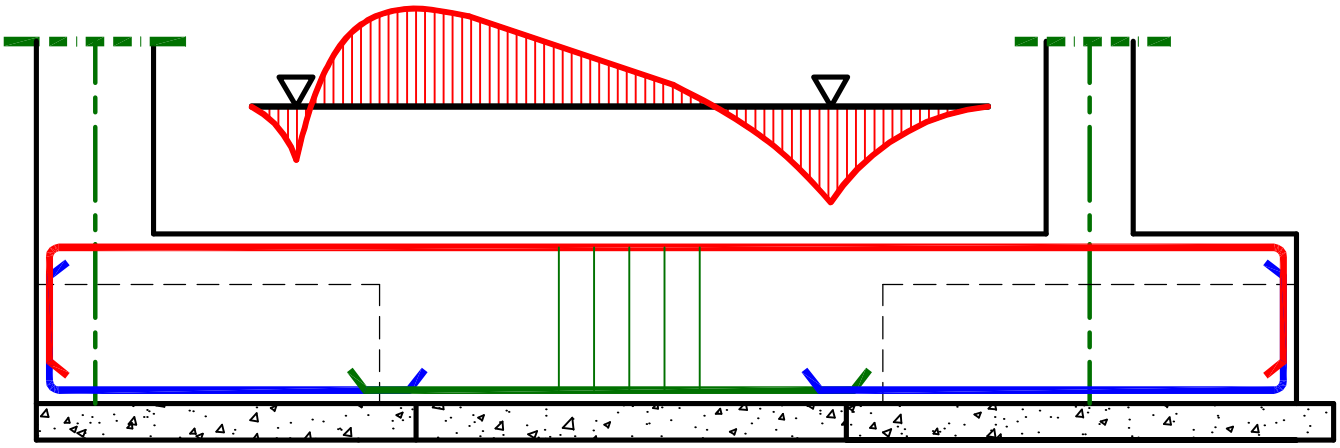

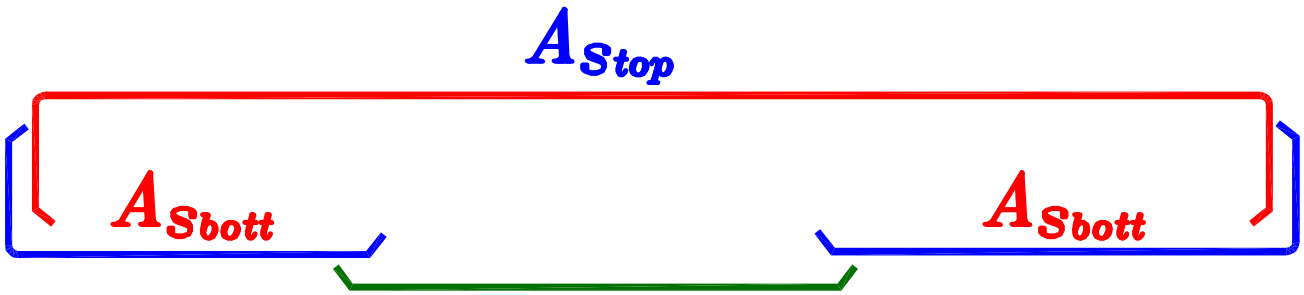

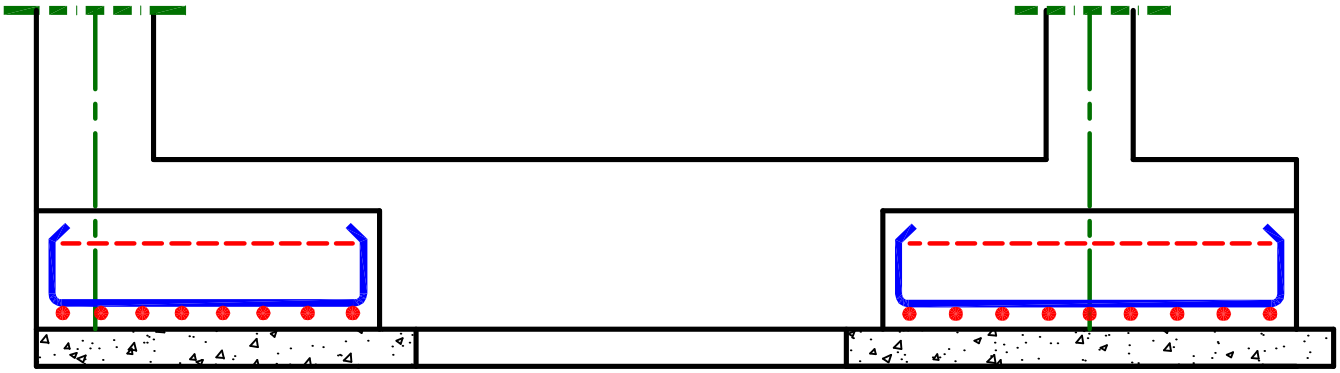

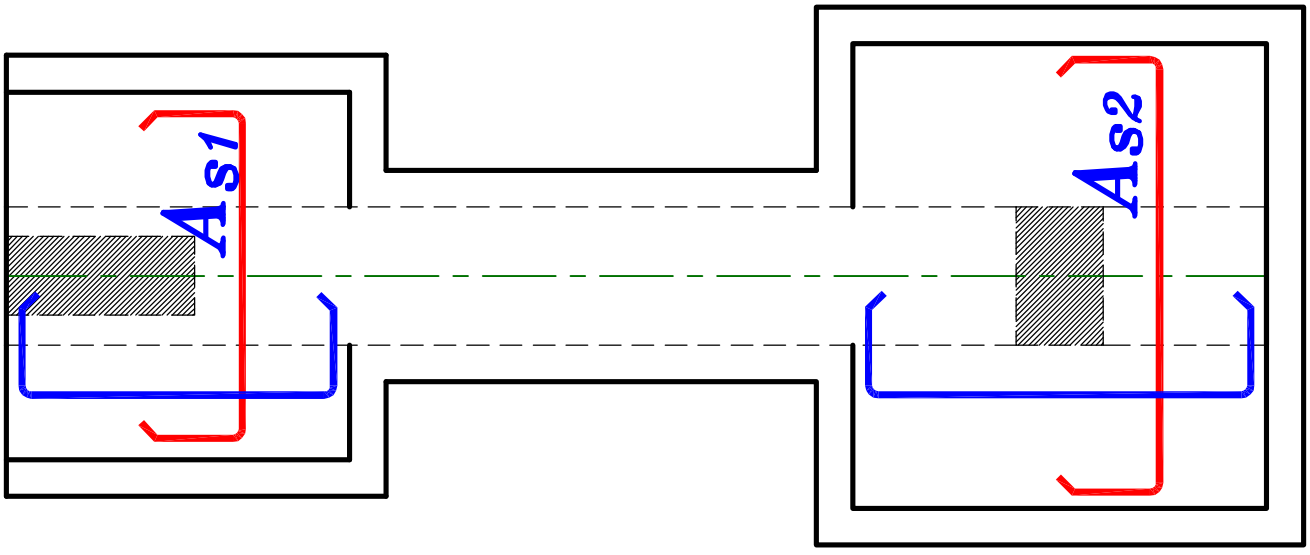

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Example.

It is required to design Footings to support a proterty line column C_1 $(45*50)$ cm. and carrying working load 1000 kN and interior column C_2 $(45*70)$ cm. and carrying working load 2200 kN the spacing between the C.L. of the two columns is 7.0 m as shown

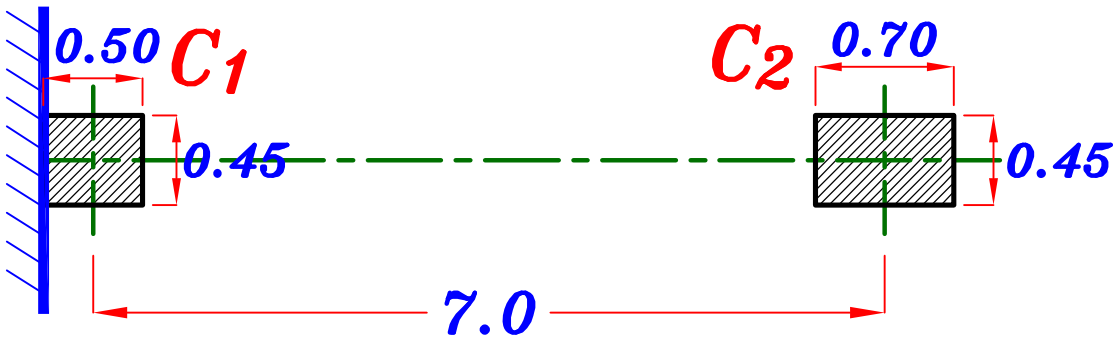

and the allowable net bearing capacity in the Footing site is 200 kN/m^2. (F_{cu} = 25 N/mm^2, F_y = 360 N/mm^2).
and draw details of RFT. to scale 1:50

Solution.

Data given:

Column C_1 dimensions $(450*500)$ mm

P_1 (working) = 1000 kN P_1 (U.L.) = $1000*1.5$ = 1500 kN

Column C_2 dimensions $(450*700)$ mm

P_2 (working) = 2200 kN P_2 (U.L.) = $2200*1.5$ = 3300 kN

R (working) = P_1+P_2 = 3200 kN

R (U.L.) = $1.5*3200$ = 4800 kN

Bearing capacity of the soil = q_{all} = 200 kN/m^2

F_{cu} = 25 N/mm^2 F_y = 360 N/mm^2

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

For property line use
Strap Beam or Combined Footing.

Start with Strap Beam.

1– Calculate the Footing area. (Width & Length of R.C. Footings.)

Take $e = 0.1 + 0.2\,(S) = 0.1 + 0.2\,(7.0) = 1.50\ m$

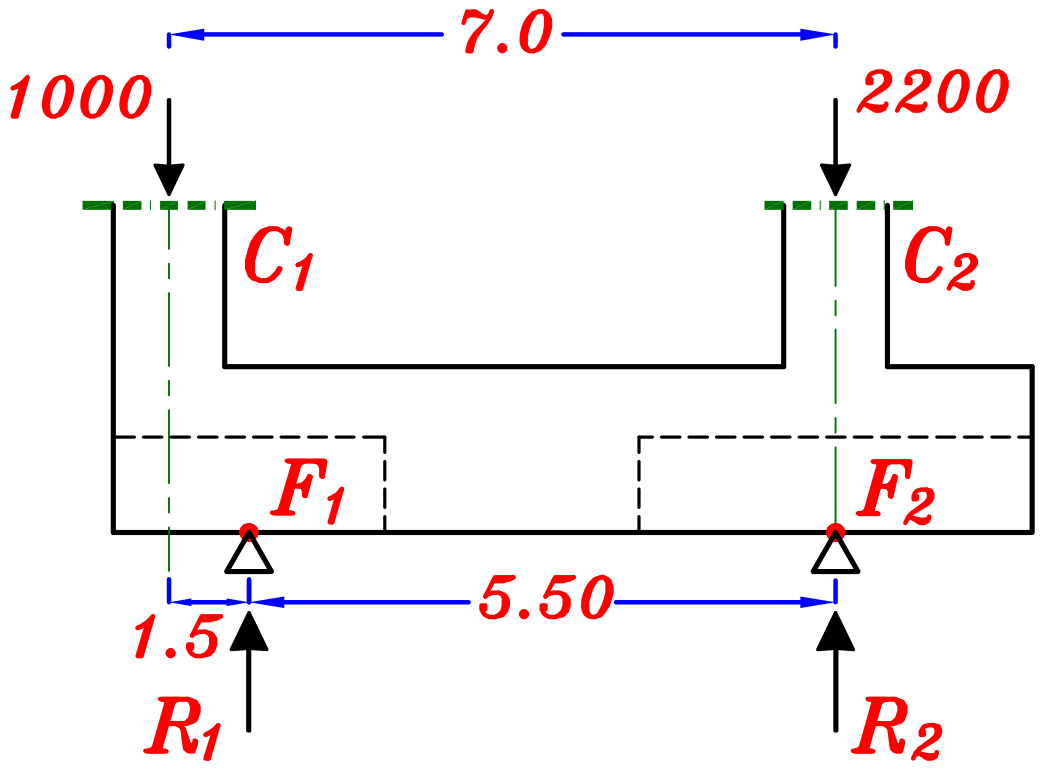

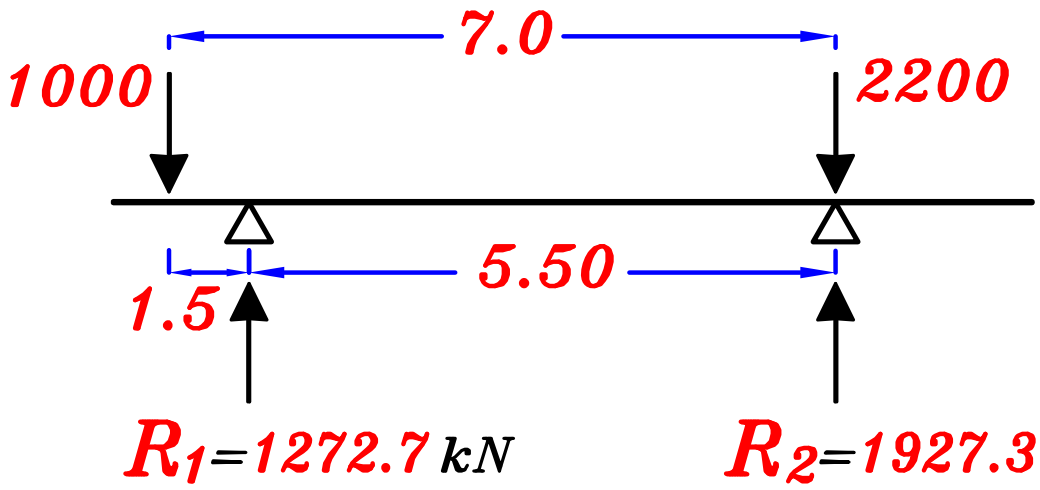

© Copyright Eng. Yasser El-Leathy 2010 . All rights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Footing F_1

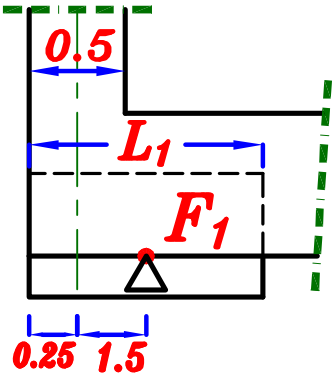

Choose $t_{P.C.} = 30\ cm > 20\ cm$

$$L_{1\,P.C.} = 2\left(e + \frac{c_1}{2}\right) = 2\,(1.5 + 0.25) = 3.50\ m$$

get $B_{1\,P.C.}$ From $A_{P.C.} = \dfrac{R_1}{q_{all}} = A_{P.C.} = B_{1P.C.} * L_{1\,P.C.}$

$$A_{P.C.} = \frac{1272.7}{200} = B_{1P.C.} * 3.50 \longrightarrow B_{1P.C.} = 1.82\ m$$

$B_{1P.C.} = 1.90\ m$ $\quad$ $L_{1P.C.} = 3.50\ m$

$B_{1R.C.} = 1.30\ m$ $\quad$ $L_{1R.C.} = 3.50\ m$

Footing F_2

$$L_{2P.C.} - B_{2P.C.} = b - a = 0.70 - 0.45 = 0.25\ m$$

$$L_{2P.C.} = B_{2P.C.} + 0.25\ m \quad \text{-----} (1)$$

$$A_{2P.C.} = \frac{R_2}{q_{all}} = \frac{1927.3\ (kN)}{200\ (kN/m^2)} = 9.63\ m^2$$

$$A_{2P.C.} = B_{2P.C.} * L_{2P.C.} = 9.63\ m^2 \quad \text{-----} (2)$$

$B_{2P.C.} = 3.0\ m$ $\quad$ $L_{2P.C.} = 3.25\ m$

$B_{2R.C.} = 2.40\ m$ $\quad$ $L_{2R.C.} = 2.65\ m$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

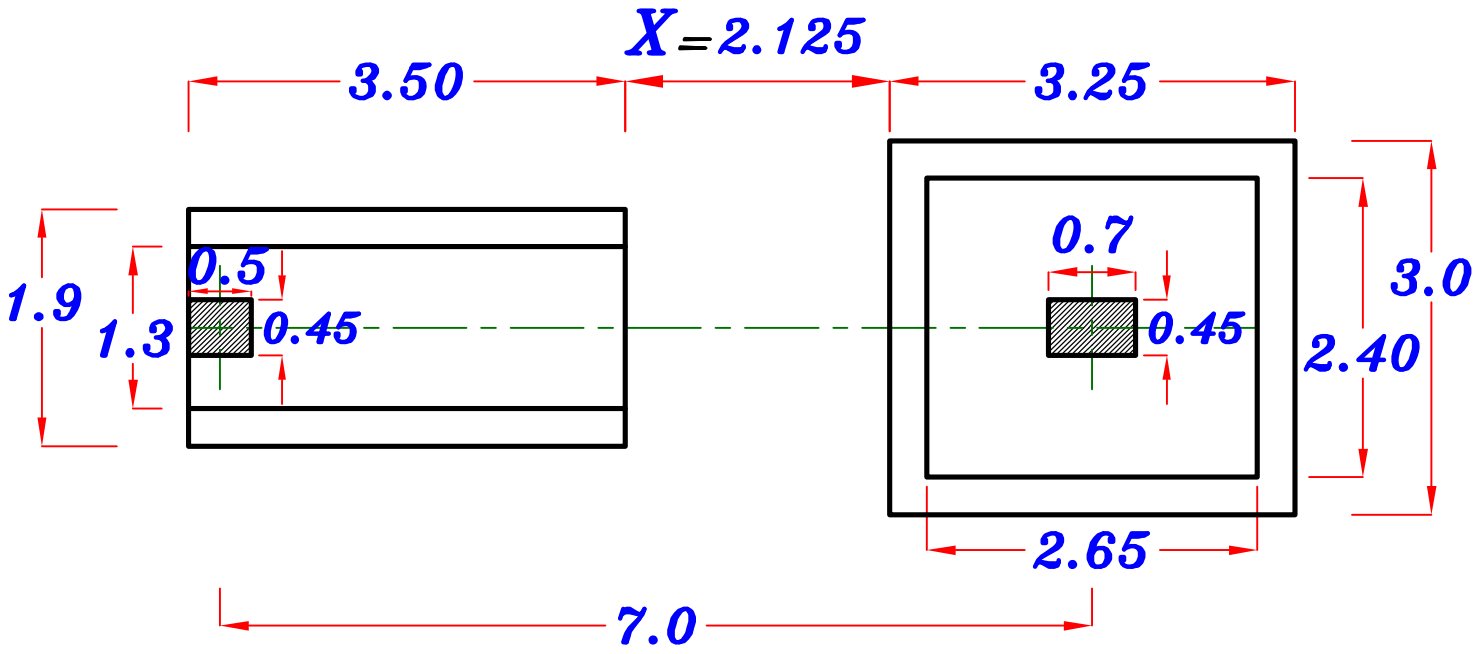

$$X > \frac{L_1}{2} \text{ and } \frac{L_2}{2} \quad \therefore \text{ use Strap Beam.}$$

3 – Dimensionsof the Strap Beam. (Width & depth)

$$w_1 = \frac{R_1 \text{ (U.L.)}}{L_{1\,R.C.}}$$

$$w_1 = \frac{1.5 * 1272.7}{3.50} = 545.44 \text{ (kN/m)}$$

$$w_2 = \frac{R_2 \text{ (U.L.)}}{L_{2\,R.C.}}$$

$$w_2 = \frac{1.5 * 1927.3}{2.65} = 1090.9 \text{ (kN/m)}$$

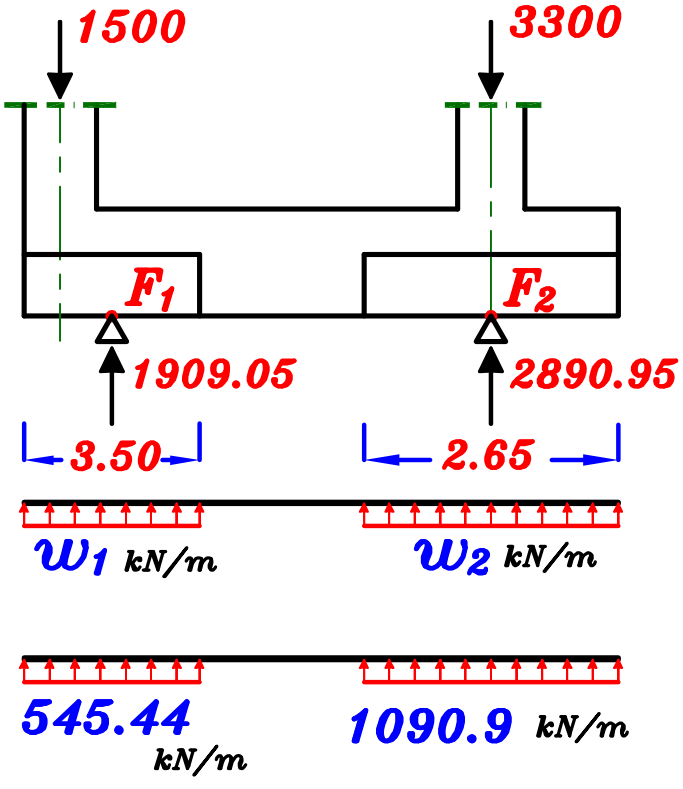

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Drawing B.M.D. & S.F.D. For the Beam.

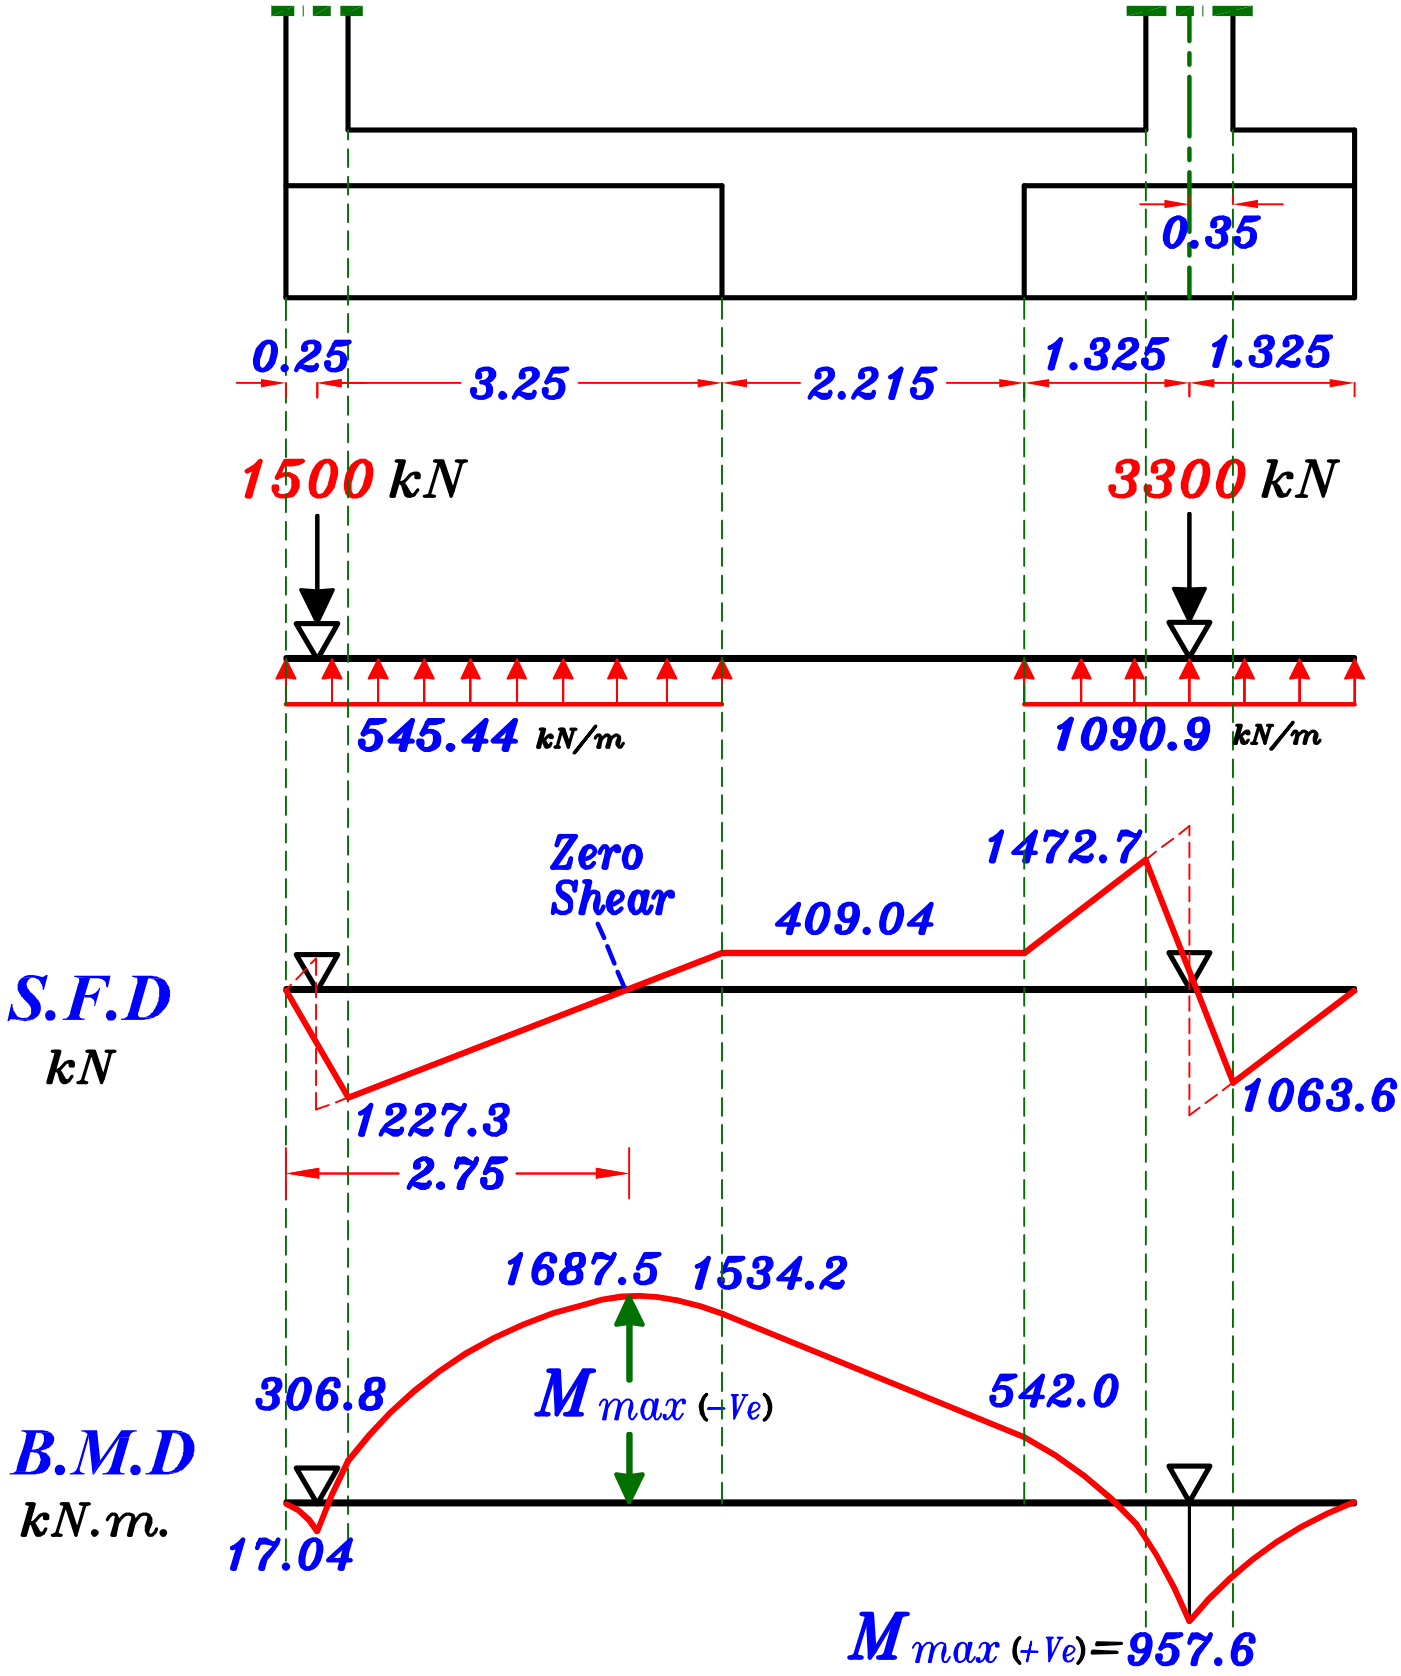

$$\text{Point of Zero Shear } (X_o) = \frac{1500}{545.44} = 2.75 \text{ m}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Take $b \nless C_1$ or C_2 Take $\boxed{b = 0.7\ m}$

$\because\ d = C_1 \sqrt{\frac{M_{max}}{F_{cu} * b}}$ $\boxed{\text{Choose } C_1 = 4.5}$

$\therefore\ d = 4.5 \sqrt{\frac{1687.5 * 10^6}{25 * 700}} = 1397\ mm$

$t_{R.C.} = d + 70\ mm = 1397 + 70 = 1467\ mm$

$\boxed{t_{R.C.} = 1500\ mm}$ $\boxed{d = 1430\ mm}$

---

4 – Check Shear For Strap Beam. as beams.

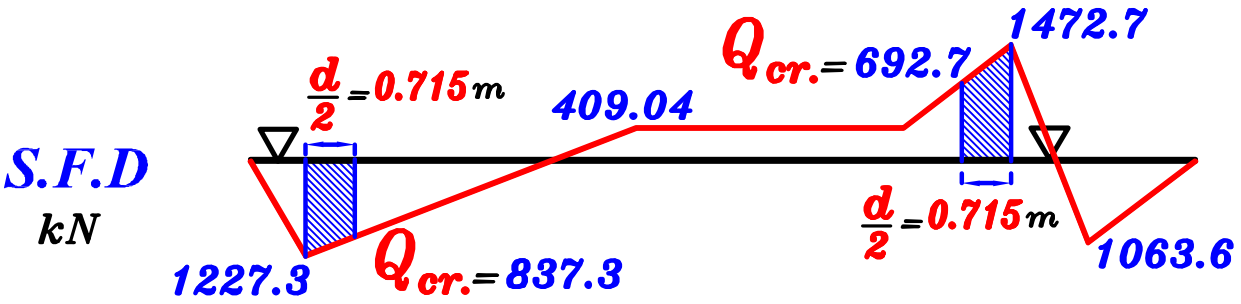

$Q_{cr.} = Q_{max.} - w\left(\frac{d}{2}\right) = 1472.7 - 1090.9\left(\frac{1.43}{2}\right) = 692.7\ kN$

$Q_{cr.} = Q_{max.} - w\left(\frac{d}{2}\right) = 1227.3 - 545.44\left(\frac{1.43}{2}\right) = 837.3\ kN$

– **Actual Shear Stress.**

$q_{act.} = \frac{Q_{cr.}}{b * d} = \frac{837.3 * 10^3}{700 * 1430} = 0.836\ kN/m^2$

– **Allowable shear stress.**

– $q_{cu} = 0.24 \sqrt{\frac{F_{cu}}{\delta_c}} = 0.24 \sqrt{\frac{25}{1.5}} = 0.98\ N\backslash mm^2$

– $q_{max.} = 0.7 \sqrt{\frac{F_{cu}}{\delta_c}} = 0.7 \sqrt{\frac{25}{1.5}} = 2.85\ N\backslash mm^2$

$\therefore\ q_{act.} < q_{cu.} \longrightarrow$ use min. stirrups

Use Stirrups $\boxed{5\phi 10\backslash m}$ 6 branches

© Copyright Eng. Yasser El-Leathy 2010 . All rights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

5 – Reinforcement of Strap Beam.

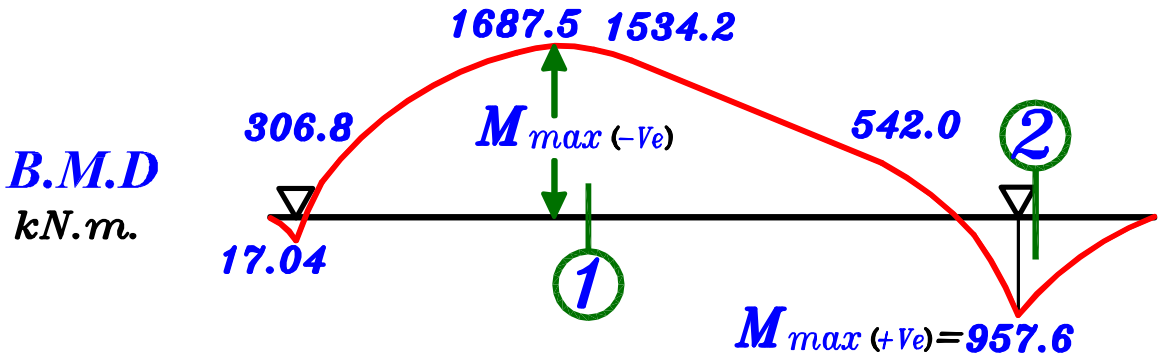

Sec. ① $M_{max\ (-Ve)} = 1687.5$ kN.m.

$$1430 = C_1 \sqrt{\frac{1687.5 * 10^6}{25 * 700}} \longrightarrow C_1 = 4.60 \longrightarrow J = 0.818$$

$$A_S = \frac{M}{J\ F_y\ d} = \frac{1687.5 * 10^6}{0.818 * 360 * 1430} = 4007.3\ mm^2$$

Check $A_{s_{min.}} = \frac{1.1}{F_y} b\ d = \frac{1.1}{360} (700)\ (1430) = 3058.6\ mm^2$

$\therefore A_S > A_{s_{min.}}$ $\therefore A_S = 4007.3\ mm^2$ **11 ϕ 22**

Sec. ② $M_{max\ (+Ve)} = 957.6$ kN.m.

$$1430 = C_1 \sqrt{\frac{957.6 * 10^6}{25 * 700}} \longrightarrow C_1 = 6.11 \longrightarrow J = 0.826$$

$$A_S = \frac{M}{J\ F_y\ d} = \frac{957.6 * 10^6}{0.826 * 360 * 1430} = 2252\ mm^2$$

Check $A_{s_{min.}} = \frac{1.1}{F_y} b\ d = \frac{1.1}{360} (700)\ (1430) = 3058.6\ mm^2$

$\therefore A_S < A_{s_{min.}}$ $\therefore$ Take $A_S = A_{s_{min.}}$

$A_{s_{min.}} = \frac{1.1}{F_y} b\ d = \frac{1.1}{360} (700)\ (1430) = 3058.6$

$1.3\ A_{s\ req.} = (1.3)\ (2252) = 2927.6$ } 2927.6

st. 360/520 $\frac{0.15}{100} b\ d = \frac{0.15}{100} (700)\ (1430) = 1501.5$ } $2927.6\ mm^2$

8 ϕ 22

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

6 – Design of Footings. as a strip Footing.

Footing. F_1

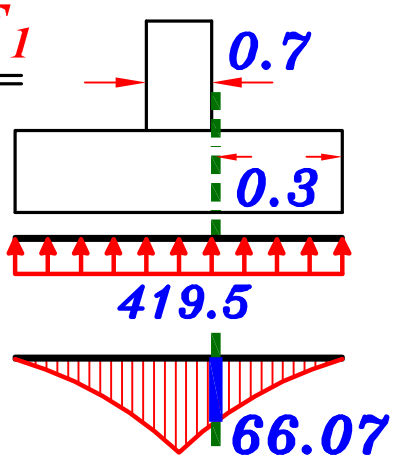

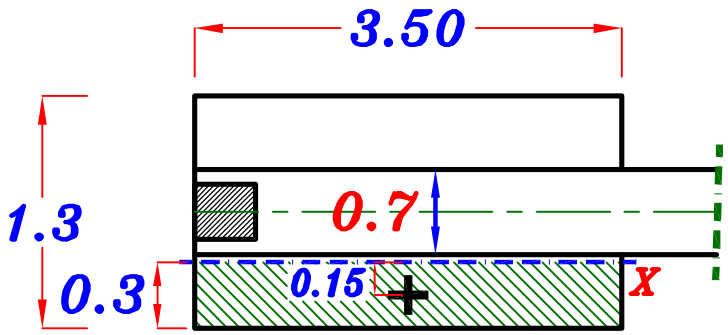

Footing. F_1

– *Actual Normal stress on R.C. Footing* (U.L.)

$$F_{1act.} = \frac{R_{1U.L.}}{B_{1R.C.} * L_{1R.C.}} = \frac{1909.05}{3.5 * 1.3} = 419.5 \ kN/m^2$$

– *moment = Force * Distance*

$$M_{1act.} = 419.5 * 0.3 * 3.5 * 0.15 = 66.07 \ kN/m$$

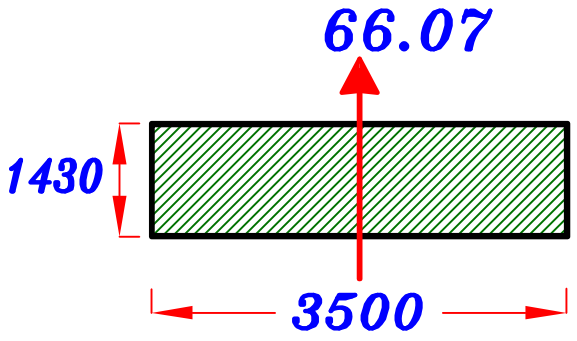

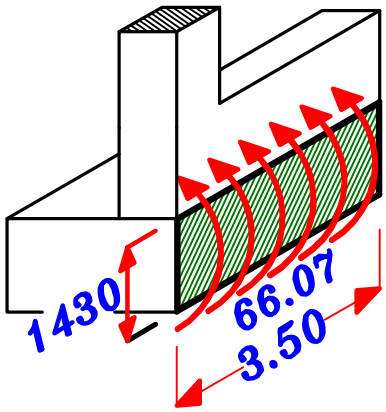

$$\because d = C_1 \sqrt{\frac{M_{act.}}{F_{cu} * b}}$$

Choose $C_1 = 5.0$

$$\therefore d = 5.0 \sqrt{\frac{66.07 * 10^6}{25 * 3500}} = 137.4 \ mm < 330 \ mm$$

$$t_{R.C.} = d + 70 \ mm = 330 + 70 = 400 \ mm$$

$t_{R.C.} = 400 \ mm$ $\quad$ $d = 330 \ mm$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Check Shear.

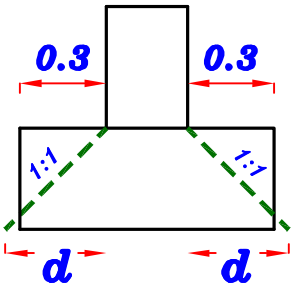

No shear on the Footing.

Reinforcement of the Footing.

$$J = 0.826$$

$$A_S = \frac{M_{1act.}}{J\ F_y\ d} = \frac{66.07 * 10^6}{0.826 * 360 * 330} = 673.3\ mm^2$$

$$A_S\ (mm^2/m) = \frac{A_S}{B_{R.C.}} = \frac{673.3}{3.50} = 192.3\ mm^2/m`$$

Check $A_{S\,min}$

$$A_{S\,min} = \left\{ \begin{array}{l} 1.5\,d = 1.5 * 330 = 495 \\ 5\,\phi\,12/m` = 565 \end{array} \right\} 565\,mm^2$$

$$\therefore\ A_S < A_{S\,min} \longrightarrow$$

$$A_S = 565\ mm^2$$ $5\,\phi\,12/m`$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Footing. F_2

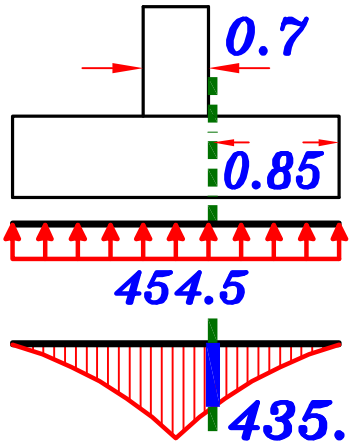

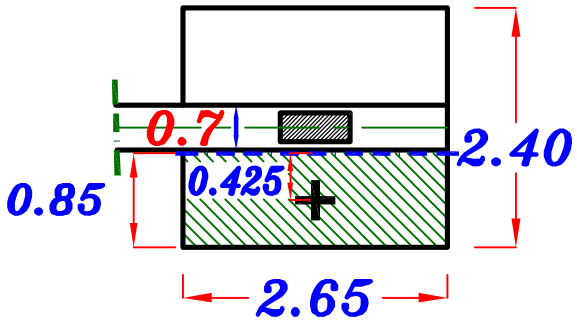

Footing. F_2

- Actual Normal stress on R.C. Footing (U.L.)

$$F_{2act.} = \frac{R_{2U.L.}}{B_{2R.C.} * L_{2R.C.}} = \frac{2890.95}{2.65 * 2.4} = 454.5 \ kN/m^2$$

- moment = Force * Distance

$$M_{2act.} = 454.5 * 0.85 * 2.65 * 0.425 = 435.1 \ kN/m$$

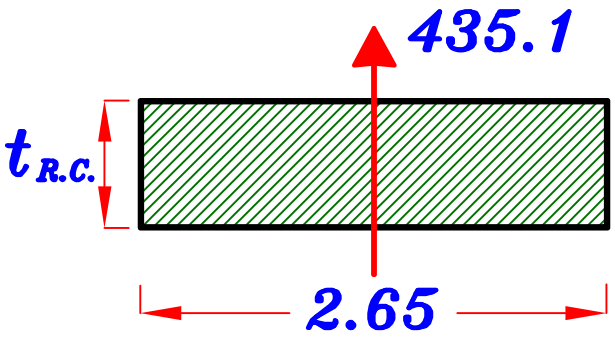

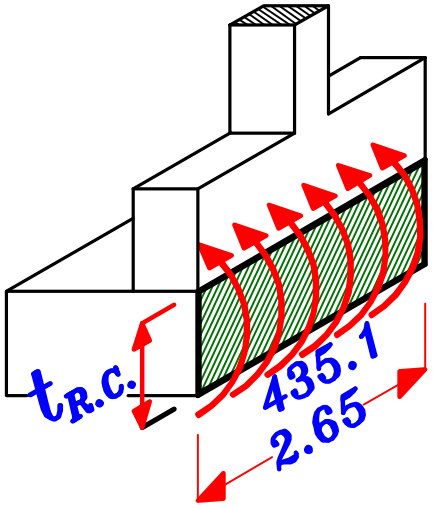

$$\because d = C_1 \sqrt{\frac{M_{act.}}{F_{cu} * b}}$$

Choose $C_1 = 5.0$

$$\therefore d = 5.0 \sqrt{\frac{435.1 * 10^6}{25 * 2650}} = 405.2 \ mm$$

$$t_{R.C.} = d + 70 \ mm = 405.2 + 70 = 475.2 \ mm$$

$t_{R.C.} = 500 \ mm$

$d = 430 \ mm$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

3 – Check Shear.

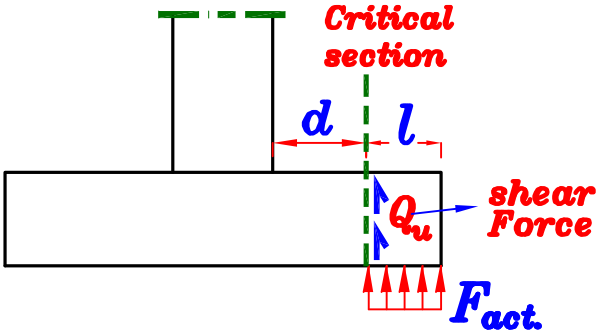

* Critical section For Shear.

$$l = z - d$$

$$l = 0.85 - 0.43 = 0.42\ m$$

* Actual shear Force. (Q_u)

$$Q_u = F_{act.} * l * 1.0\ m = 454.5 * 0.42 * 1.0 = 190.9\ kN$$

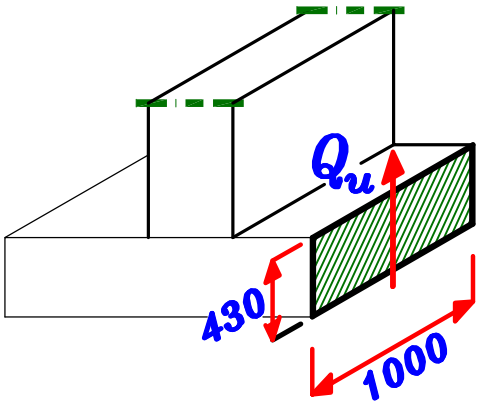

* Actual shear stress. (q_u)

$$q_u = \frac{Q_u}{b * d} = \frac{190.9 * 10^3}{1000 * 430} = 0.44\ N/mm^2$$

* Allowable shear stress. (q_{su})

$$q_{su} = 0.16\sqrt{\frac{F_{cu}}{\gamma_c}} = 0.16\sqrt{\frac{25}{1.5}} = 0.653\ N/mm^2$$

$q_u < q_{su}$ ⟶ Safe shear stresses

No need to increase dimensions.

Reinforcement of the Footing.

$$A_S = \frac{M_{2act.}}{J\ F_y\ d} = \frac{435.1 * 10^6}{0.826 * 360 * 430} = 3402.8\ mm^2$$

$$A_S\ (mm^2/m) = \frac{A_S}{B_{R.C.}} = \frac{3402.8}{2.65} = 1284\ mm^2/m`$$

$7\ \phi\ 16/m`$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

7 – Details of Reinforcement.

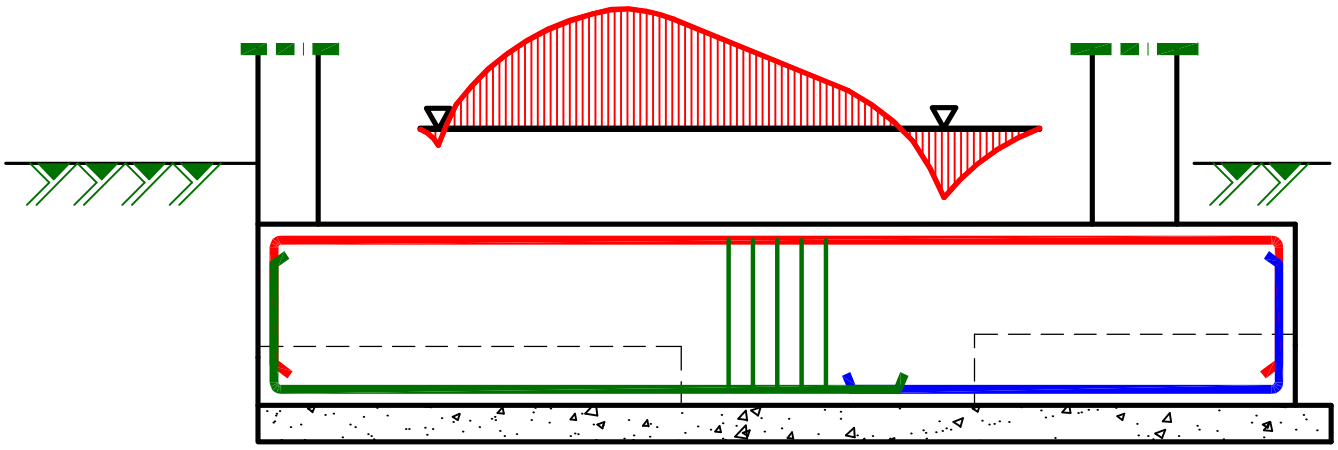

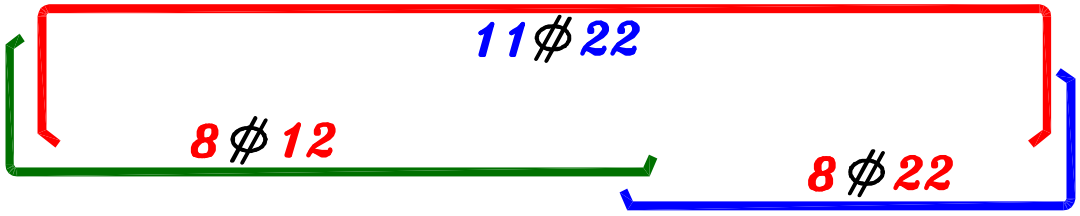

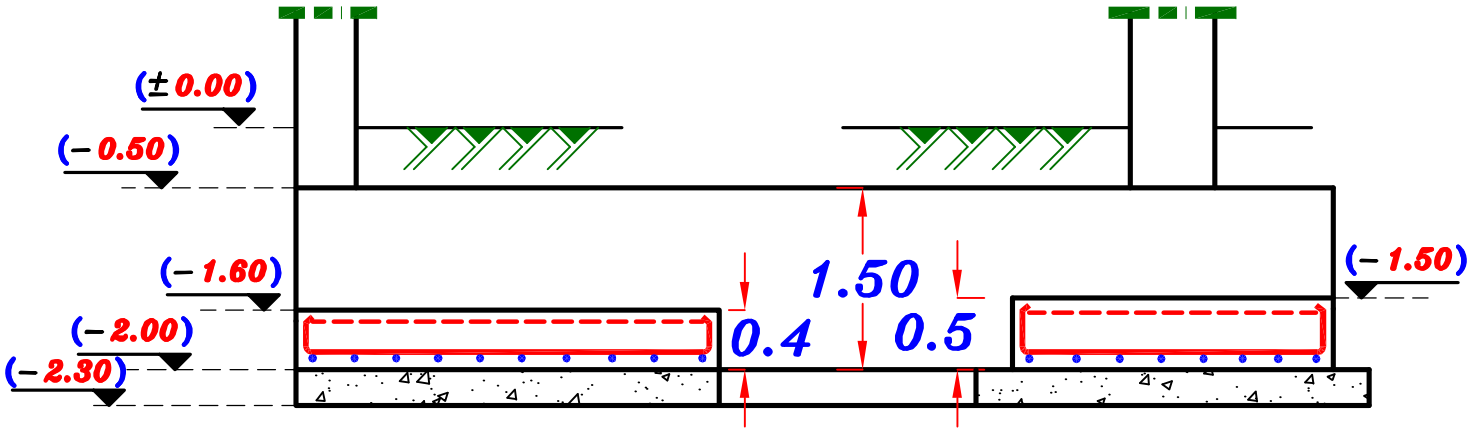

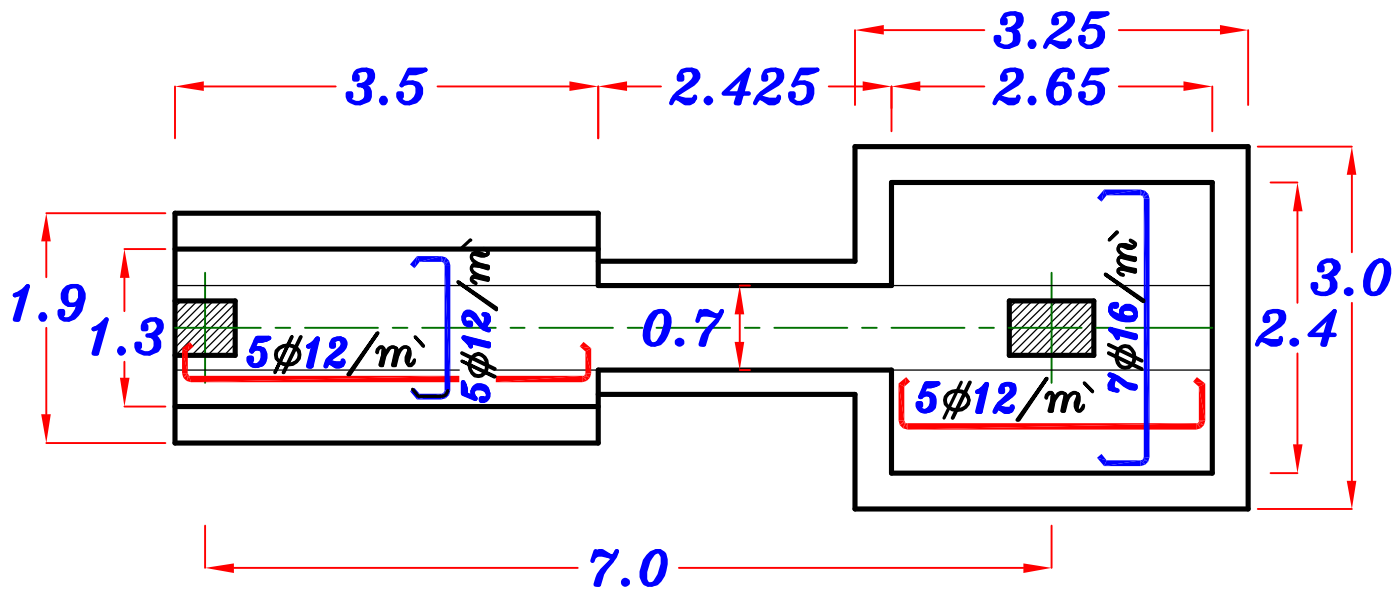

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

اذا لم ينفع حل الـ Strap Beam

عندما تكون $IF\ X < \frac{L_1}{2}\ \&\ \frac{L_2}{2}$

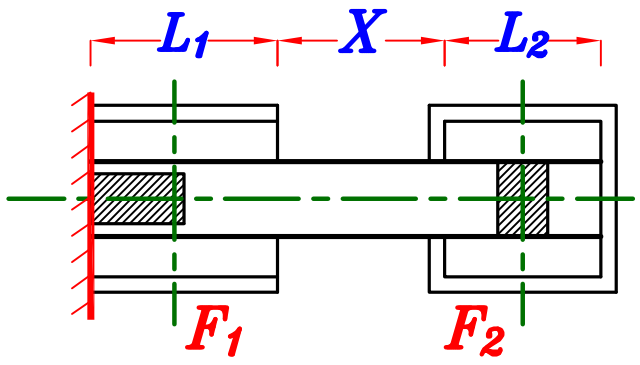

يتم عمل قاعده مشتركه و يكون شكلها كالاتى :

a- IF $P_1 < P_2$ use **Rectangular** combined Footing.

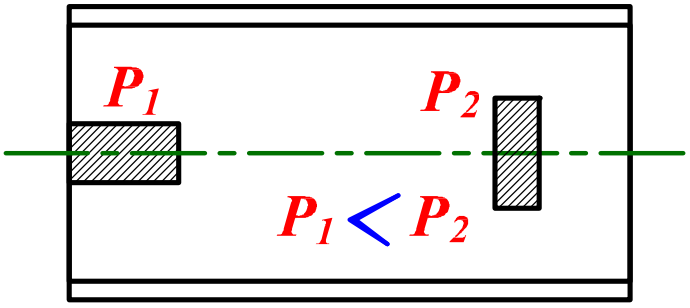

b- IF $P_1 > P_2$ use **Trapezoidal** combined Footing.

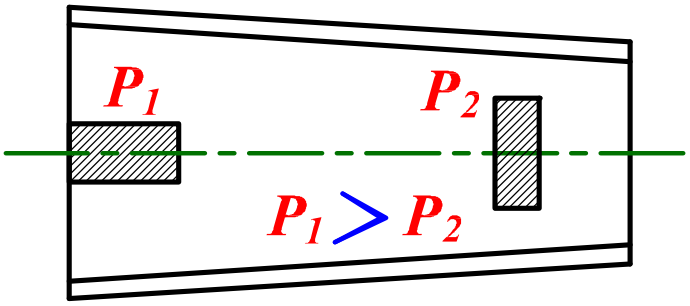

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

قاعده مشتركه مستطيله بجوار حد الجار .

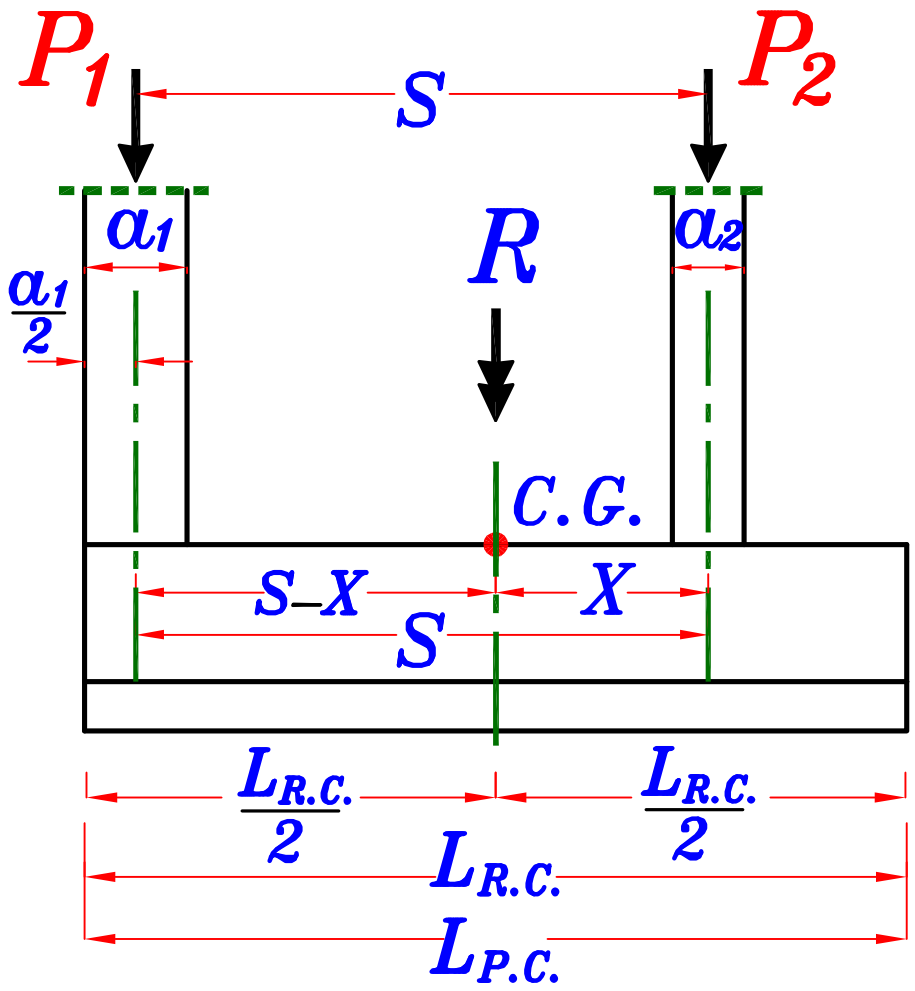

$$R = P_1 + P_2$$

R يتم حساب قيمه محصله الاحمال

X يتم تحديد مكان محصله الاحمال

$$R * X = P_1 * S \longrightarrow X = \frac{P_1}{R} * S$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

1– Calculate the Footing area. (Width & Length of R.C. Footing.)

$$\frac{L_{R.C.}}{2} = (S-X) + \frac{a_1}{2}$$

$$\rightarrow \boxed{L_{R.C.} = \checkmark}$$

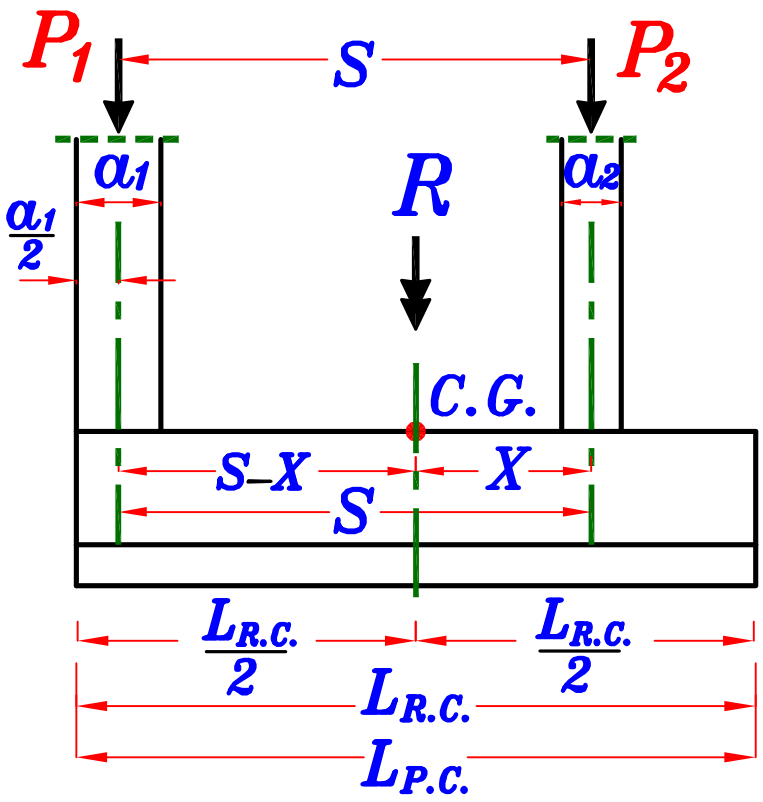

$$\therefore \boxed{L_{P.C.} = L_{R.C.}}$$

و ذلك لانه غير مسموح ببروز الـ P.C. عن الـ R.C. من جهه الجار و بالتالى غير مسموح بالبروز من الجهه الاخرى حتى يظل $C.G._{R.C.}$ at $C.G._{P.C.}$ at $C.G._{R}$

Calculate the width of the Footing. B

IF $t_{P.C.} \geq 20\ cm$ get $B_{P.C.}$ From

$$A_{P.C.} = \frac{R_w}{q_{all}} = \checkmark\ m^2 = B_{P.C.} * L_{P.C.} \rightarrow \boxed{B_{P.C.} = \checkmark}$$

$$\boxed{B_{R.C.} = B_{P.C.} - 2\ t_{P.C.}}$$

IF $t_{P.C.} < 20\ cm$ get $B_{R.C.}$ From

$$A_{R.C.} = \frac{R_w}{q_{all}} = \checkmark\ m^2 = B_{R.C.} * L_{R.C.} \rightarrow \boxed{B_{R.C.} = \checkmark}$$

$$\boxed{B_{P.C.} = B_{R.C.} + 2\ t_{P.C.}}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

2– Design the critical sections For moment. (Depth of R.C. Footing.)

$P_{1U.L.}=1.5*P_{1w}$, $P_{2U.L.}=1.5*P_{2w}$, $R_{U.L.}=1.5*R_{w}$

– Actual Normal stress on R.C. Footing (U.L.)

$$F_{act.}=\frac{R_{U.L.}}{B_{R.C.}*L_{R.C.}} \quad (kN/m^2)$$

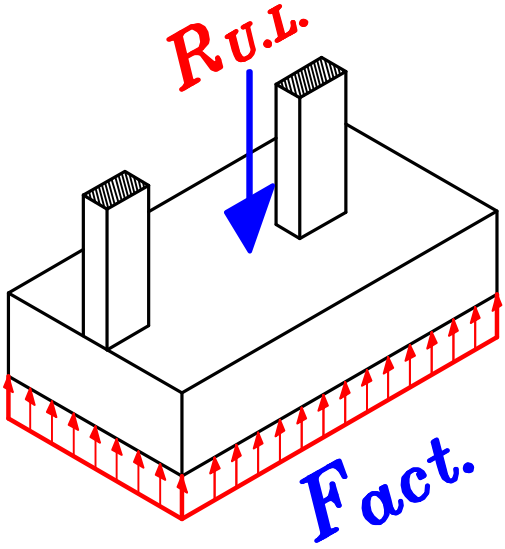

– Actual Uniform Load on R.C. Footing (U.L.) as a beam.

$B_{R.C.}$ نعتبر أن القاعده عباره عن كمره بعرض

$$w_{U.L.}=\frac{R_{U.L.}}{L_{R.C.}} \quad (kN/m`)$$

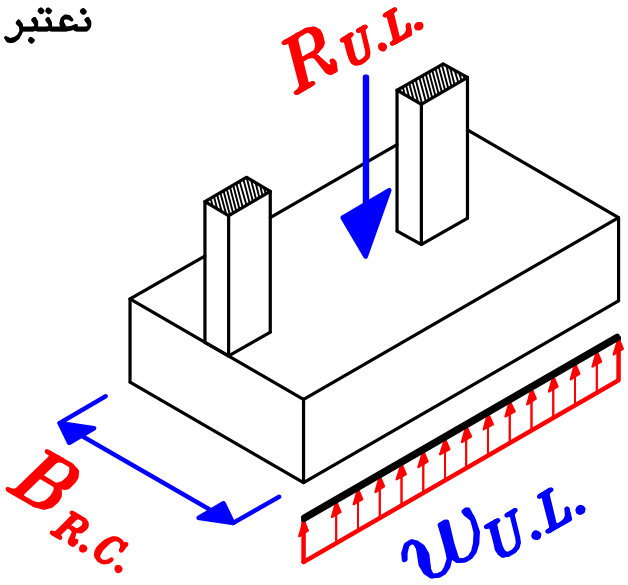

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Longitudinal direction.

نعتبر أن القاعده عباره عن كمره بعرض $B_{R.C.}$

يتم رسم *B.M.D.* , *S.F.D.* للقاعده كلها كأنها كمره بعرض $B_{R.C.}$

و يتم حساب قيم *B.M.* , *S.F.* على وش الاعمده .

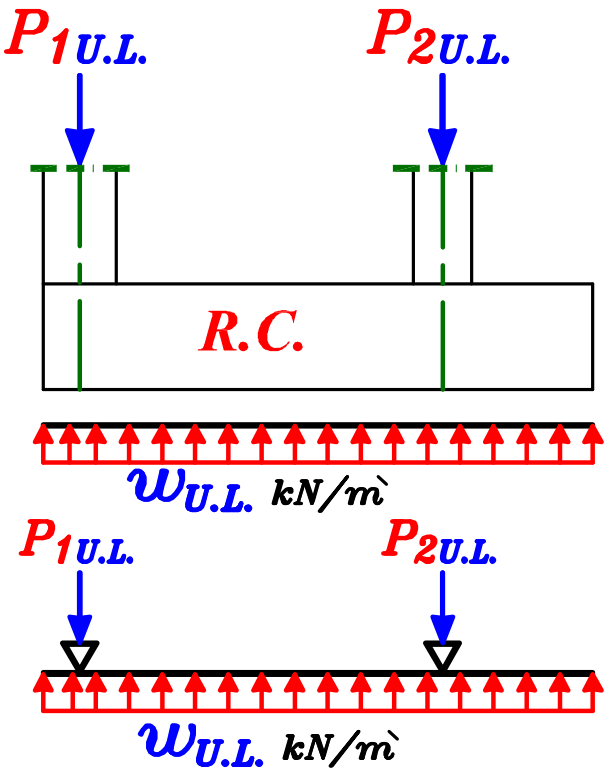

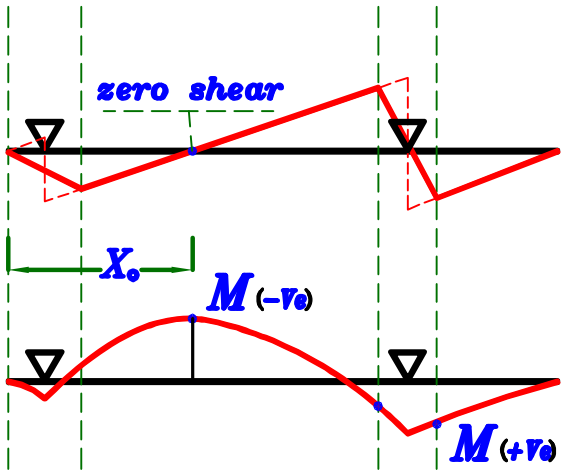

لتحديد أكبر *moment* فى منتصف القاعده $M_{(-ve)}$

يتم تحديد مكان نقطه *zero shear* أى حساب المسافه X_o

$$P_{1\,U.L.} = w_{U.L.} * X_o \longrightarrow X_o = \checkmark \longrightarrow M_{(-ve)} = \checkmark$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$M_{max.}$ is the bigger moment of $M_{(+Ve)}$ & $M_{(-Ve)}$

$$d_{(mm)} = C_1 \sqrt{\frac{M_{max\,(kN.m)} * 10^6}{F_{cu\,(N/mm^2)} * B_{R.C.\,(mm)}}}$$

Choose $C_1 = (3.5 \rightarrow 5.0)$ Get $d = \checkmark\checkmark$ (mm)

$$t_{R.C.} = d + cover\ (70\ mm)$$

Check depth in Transverse direction. Short direction.

As a Hidden Beam.

نعتبر القاعده أسفل كل عمود كأنها كمره مدفونه (Hidden Beam)

أبعادها أسفل العمود $L * B_{R.C.}$

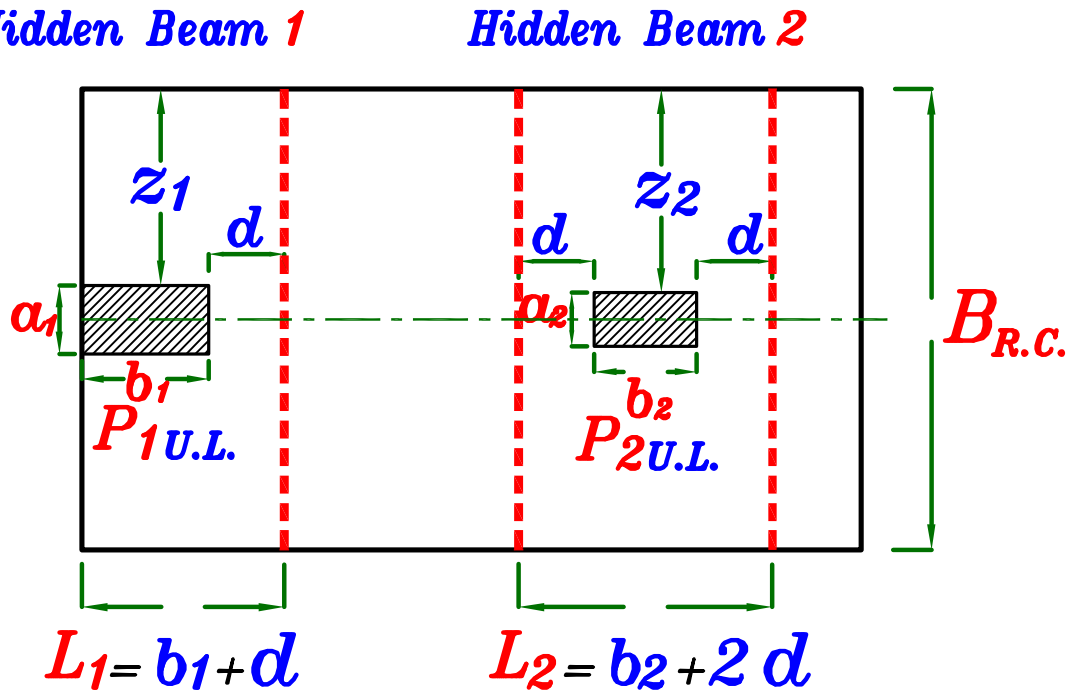

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Hidden Beam 1

$$F_{1act.} = \frac{P_{1\,U.L.}}{B_{R.C.} * L_1} \quad (kN/m^2)$$

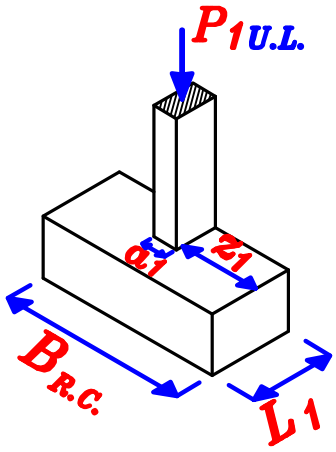

$$z_1 = \frac{B_{R.C.} - a_1}{2} \quad (m)$$

$$M_{1act.} = (F_{1act.} * z_1 * 1.0\,m)\ \frac{z_1}{2}$$

$(kN.m/1.0\,m)$

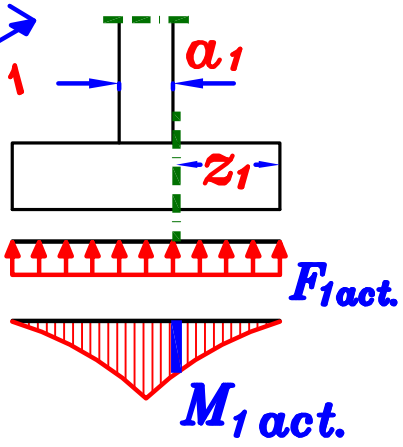

Hidden Beam 2

$$F_{2act.} = \frac{P_{2U.L.}}{B_{R.C.} * L_2} \quad (kN/m^2)$$

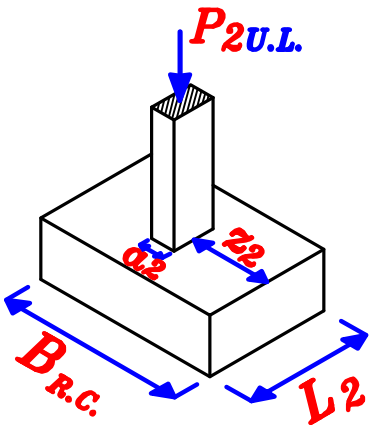

$$z_2 = \frac{B_{R.C.} - a_2}{2} \quad (m)$$

$$M_{2act.} = (F_{2act.} * z_2 * 1.0\,m)\ \frac{z_2}{2}$$

$(kN.m/1.0\,m)$

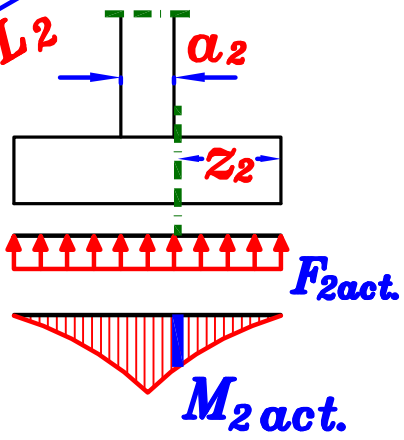

Choose M_{bigger} The bigger value of $M_{1act.}$ & $M_{2act.}$

$$d = C_1 \sqrt{\frac{M_{bigger} * 10^6}{F_{cu} * 1000}} \longrightarrow \text{Get} \longrightarrow C_1$$

Then Check on $C_1 \not< 3.0$

IF $C_1 < 3.0 \longrightarrow$ Increase d

and Recheck the transverse direction.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

3 – Check Shear. at long direction

Critical section For Shear.

$Q_{max.}$ على بعد d من وش العمود اللى عنده

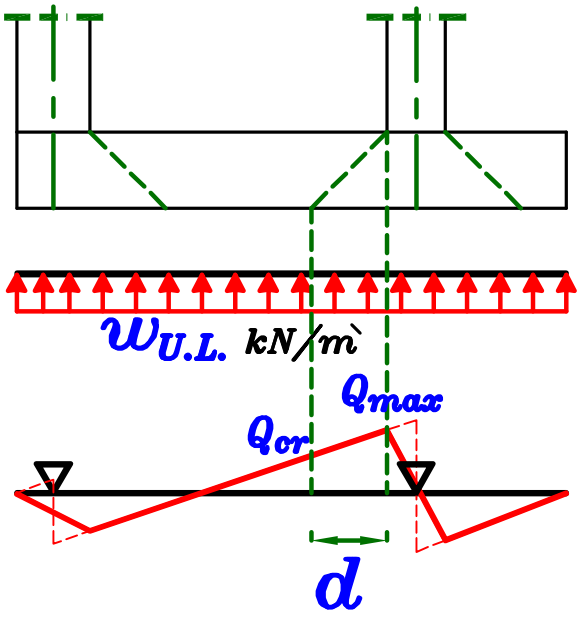

$$Q_{cr.} = Q_{max.} - w_{U.L.} * d$$

* Calculate Actual shear stress. (q_u)

$$q_u = \frac{Q_{cr.}\,(kN) * 10^3}{B\,(mm) * d\,(mm)} \quad (N/mm^2)$$

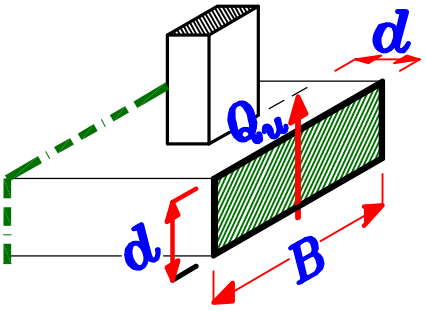

* Calculate Allowable shear stress. (q_{su})

$$q_{su} = 0.16\sqrt{\frac{F_{cu}}{\delta_c}} \quad (N/mm^2)$$

* Compare between

Actual shear stress (q_u) & Allowable shear stress (q_{su})

* IF $q_u \leqslant q_{su}$ ⟶ Safe shear stresses
No need to increase dimensions.

* IF $q_u > q_{su}$ ⟶ UnSafe shear stresses
We have to increase dimensions.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

4 – Check Punching Shear. القص الثاقب .

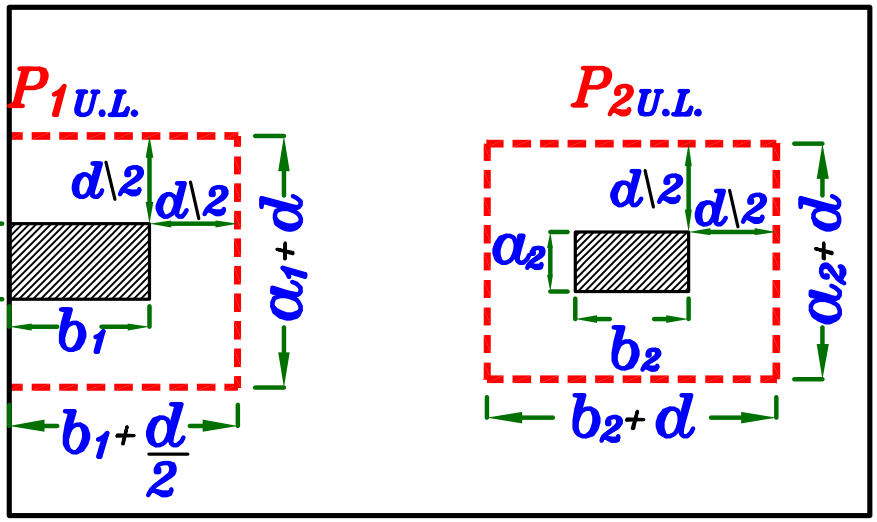

Column 1

* Calculate Punching Force. (Q_{1p})

$$Q_{1p} = P_{1\,U.L.} - (F_{act.})\left[(a_1+d)\left(b_1+\frac{d}{2}\right)\right] \quad (kN)$$

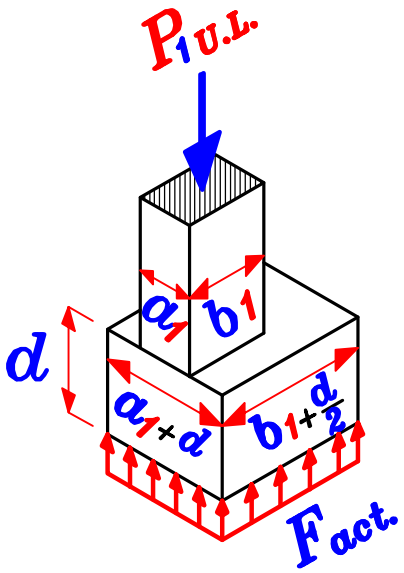

* Calculate Punching shear area. (A_{1p})

المحيط العمق

$$A_{1p} = \left[(a_1+d)+2\left(b_1+\frac{d}{2}\right)\right] * d \quad (mm^2)$$

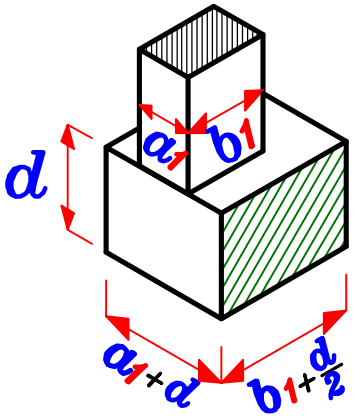

* Calculate Actual Punching shear stress. q_{1pu}

$$q_{1pu} = \frac{Q_{1p}\ (kN) * 10^3}{\left[(a_1+d)+2\left(b_1+\frac{d}{2}\right)\right] * d\ (mm^2)} \quad (N/mm^2)$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Column 2

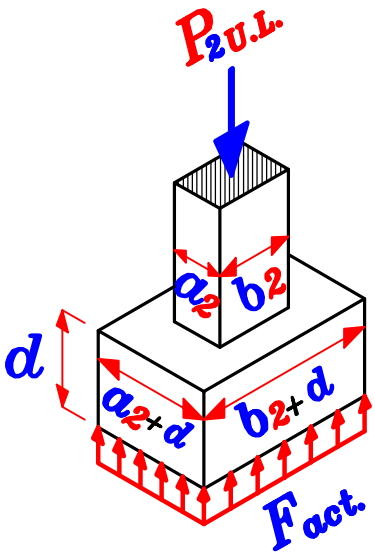

* Calculate Punching Force. (Q_{2p})

$$Q_{2p} = P_{2\,U.L.} - (F_{act.})\left[(a_2+d)(b_2+d)\right] \quad (kN)$$

* Calculate Punching shear area. (A_{2p})

المحيط العمق

$$A_{2p} = \left[2(a_2+d)+2(b_2+d)\right] * d \quad (mm^2)$$

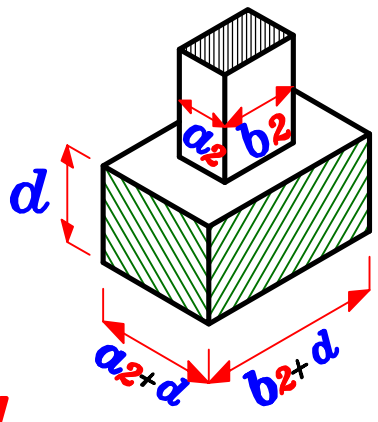

* Calculate Actual Punching shear stress. q_{2pu}

$$q_{2pu} = \frac{Q_{2p}\ (kN) * 10^3}{\left[2(a_2+d)+2(b_2+d)\right] * d\ (mm^2)} \quad (N/mm^2)$$

Choose q_{pumax} the bigger value of q_{1pu} & q_{2pu}

---

* Calculate allowable Punching shear stress. q_{pcu}

$$q_{pcu} = 0.316\left(0.5+\frac{a}{b}\right)\sqrt{\frac{F_{cu}}{\delta_c}} \quad (N/mm^2)$$

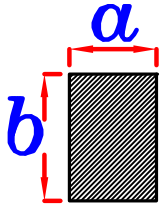

IF $\left(0.5+\frac{a}{b}\right) \leqslant 1.0$ Take $\longrightarrow$ $q_{pcu} = 0.316\sqrt{\frac{F_{cu}}{\delta_c}}$ (N/mm^2)

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

* Compare between

Actual punching shear stress (q_{pumax}) & Allowable punching shear stress (q_{pcu})

* IF $q_{pumax} \leqslant q_{pcu}$ ⟶ Safe punching shear.
No need to increase dimensions.

* IF $q_{pumax} > q_{pcu}$ ⟶ UnSafe punching shear.
We have to increase dimensions.

5- Reinforcement of the Footing.

Longitudinal direction.

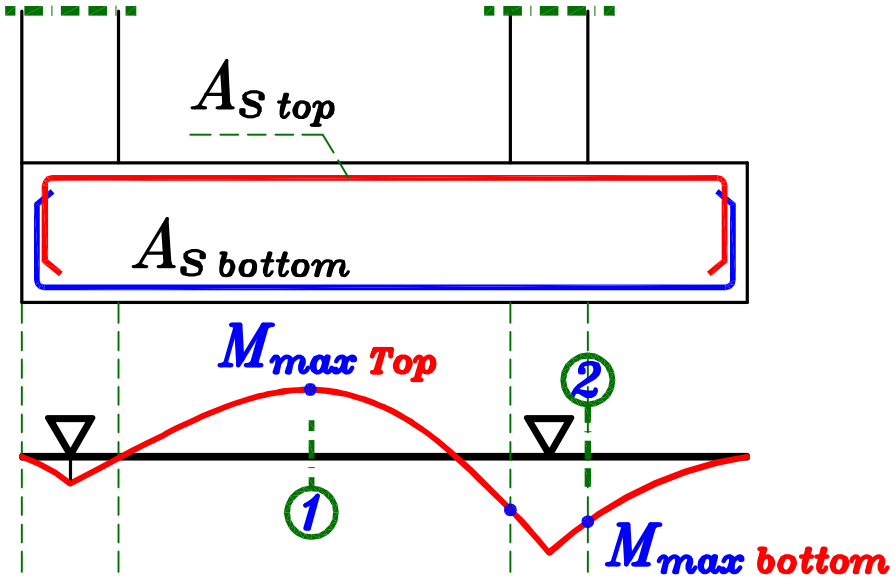

B.M.D

Sec. (1)

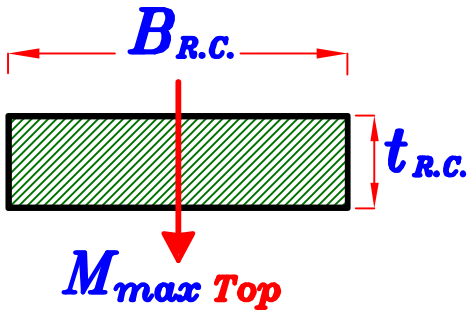

From $d = C_1 \sqrt{\frac{M_{max\ Top}}{F_{cu} * B_{R.C.}}}$ ⟶ Get C_1 ⟶ J

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Get $$A_{s\,top} = \frac{M_{max\ Top}}{J\ F_y\ d} \quad (mm^2)$$

Check $A_{s\,min}$

$$A_{s\,min}\ (mm^2/m) = \left\{ \begin{array}{l} 1.5\,d\ (mm) \\ 5\,\phi\,12/m' \end{array} \right\} \text{الأكبر}$$

IF $A_{s\,top} \geq A_{s\,min} \longrightarrow$ o.k.

IF $A_{s\,top} < A_{s\,min} \longrightarrow$ Take $A_s = A_{s\,min}$

Sec. (2)

From $d = C_1 \sqrt{\frac{M_{max\ bottom}}{F_{cu} * B_{R.C.}}}$

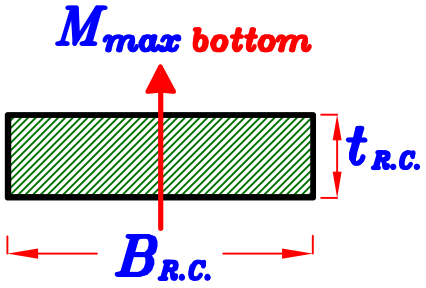

Get $\longrightarrow C_1 \longrightarrow J$

Get $$A_{s\,bottom} = \frac{M_{max\ bottom}}{J\ F_y\ d} \quad (mm^2)$$

Check $A_{s\,min}$

$$A_{s\,min}\ (mm^2/m) = \left\{ \begin{array}{l} 1.5\,d\ (mm) \\ 5\,\phi\,12/m' \end{array} \right\} \text{الأكبر}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Transverse direction. Short direction.

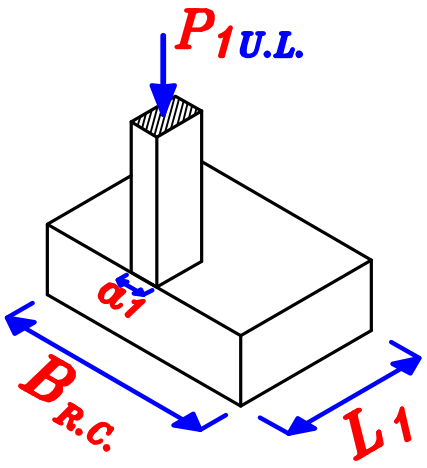

Hidden Beam 1

From $d = C_1 \sqrt{\dfrac{M_{1act.}}{F_{cu} * 1000}}$

Get $\longrightarrow C_1 \longrightarrow J$

Get $\boxed{A_{s1} = \dfrac{M_{1act.}}{J\, F_y\, d}}$ $(mm^2/m`)$

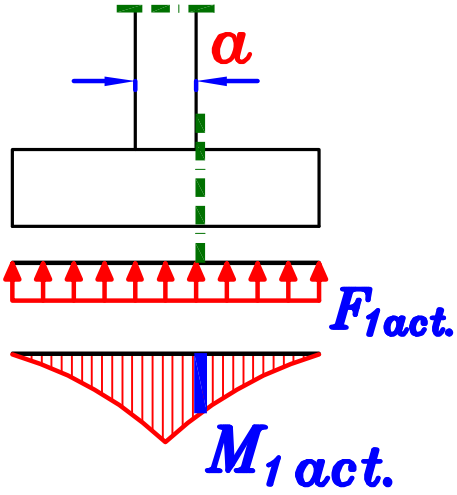

Check $A_{s\,min}$

Hidden Beam 2

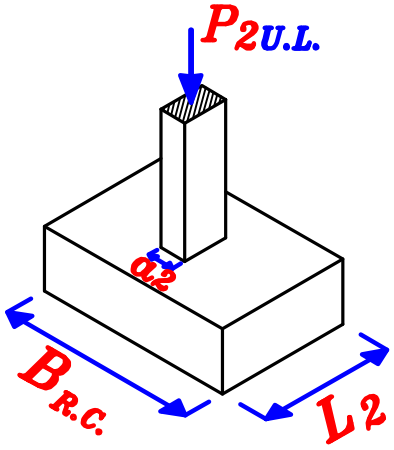

From $d = C_1 \sqrt{\dfrac{M_{2act.}}{F_{cu} * 1000}}$

Get $\longrightarrow C_1 \longrightarrow J$

Get $\boxed{A_{s2} = \dfrac{M_{2act.}}{J\, F_y\, d}}$ $(mm^2/m`)$

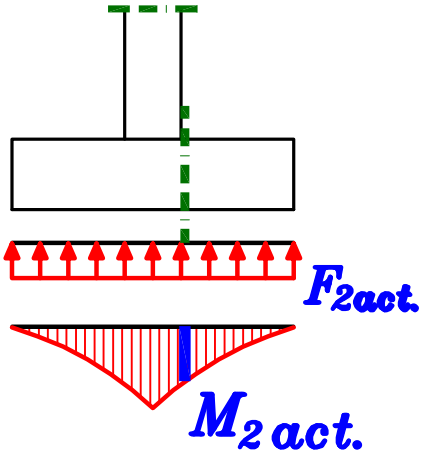

Check $A_{s\,min}$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

6– Details of Reinforcement.

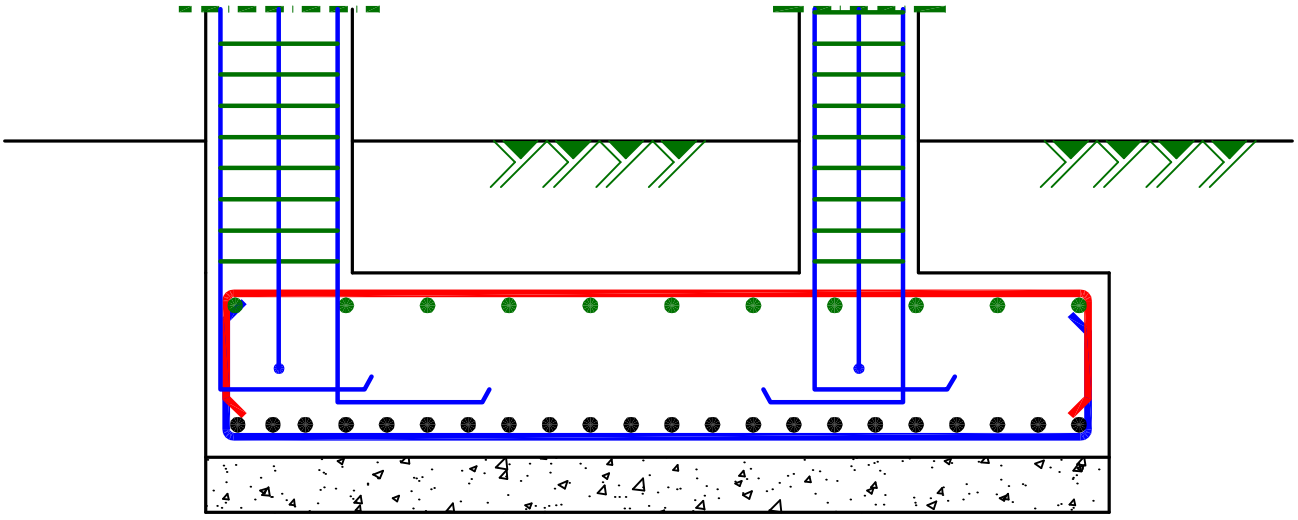

Sec X–X

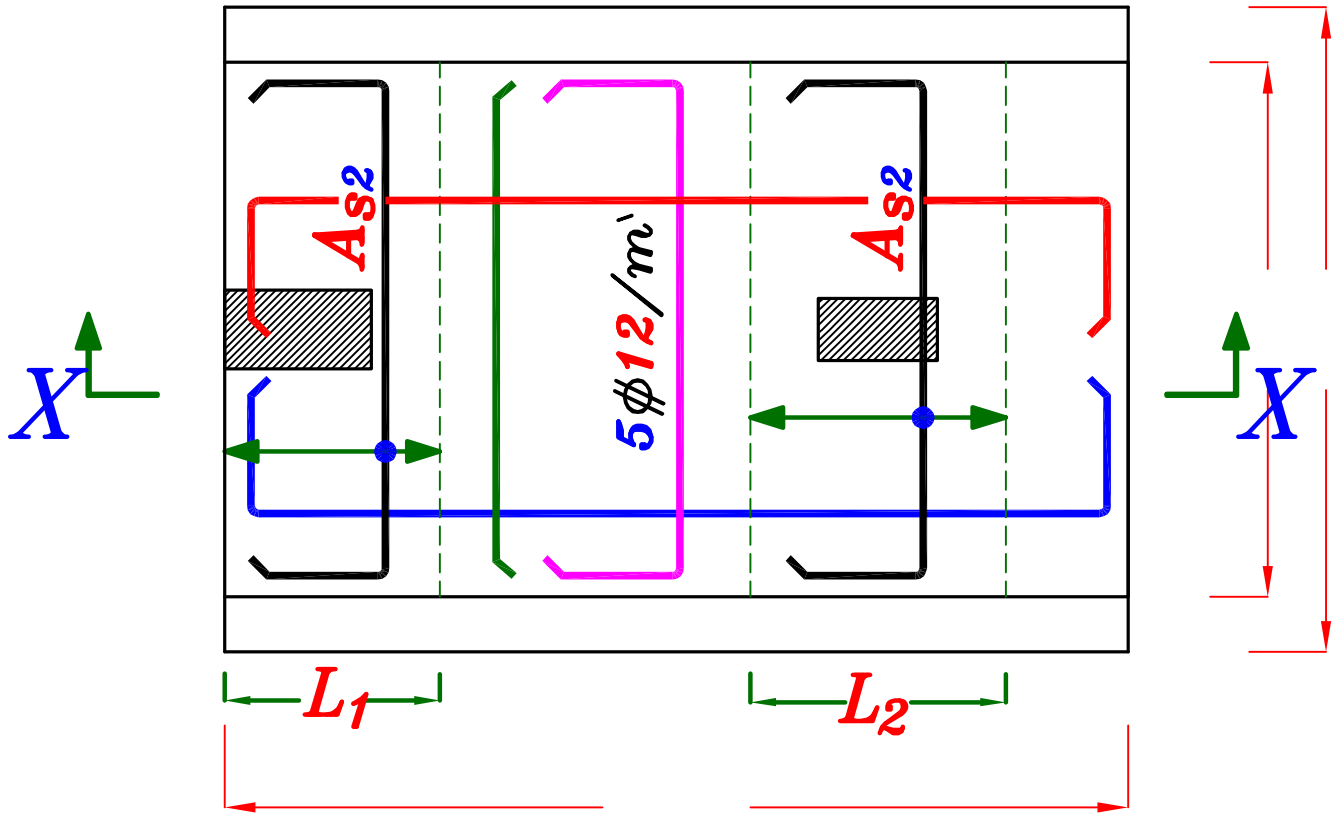

Plan

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Example.

It is required to design Footings to support a proterty line column C_1 $(45*50)$ cm. and carrying working load 1000 kN and interior column C_2 $(45*70)$ cm. and carrying working load 2200 kN the spacing between the C.L. of the two columns is 4.5 m as shown

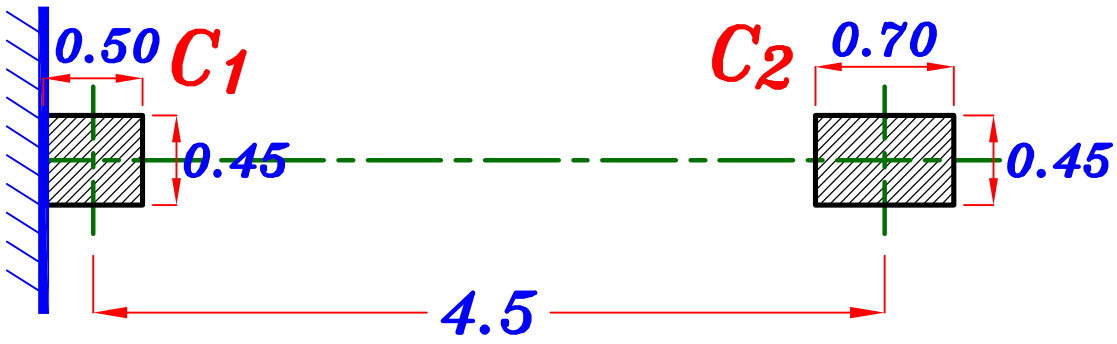

and the allowable net bearing capacity in the Footing site is 200 kN/m^2. (F_{cu} = 25 N/mm^2, F_y = 360 N/mm^2).
and draw details of RFT. to scale 1:50

Solution.

Data given:

Column C_1 dimensions $(450*500)$ mm

P_1 (working) = 1000 kN P_1 (U.L.) = $1000*1.5$ = 1500 kN

Column C_2 dimensions $(450*700)$ mm

P_2 (working) = 2200 kN P_2 (U.L.) = $2200*1.5$ = 3300 kN

R (working) = P_1+P_2 = 3200 kN

R (U.L.) = $1.5*3200$ = 4800 kN

Bearing capacity of the soil = q_{all} = 200 kN/m^2

F_{cu} = 25 N/mm^2 F_y = 360 N/mm^2

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

For property line use
Strap Beam or Combined Footing.

Start with Strap Beam.

1– Calculate the Footing area. (Width & Length of R.C. Footings.)

Take $e = 0.1 + 0.2\,(S) = 0.1 + 0.2\,(4.5) = 1.0\ m$

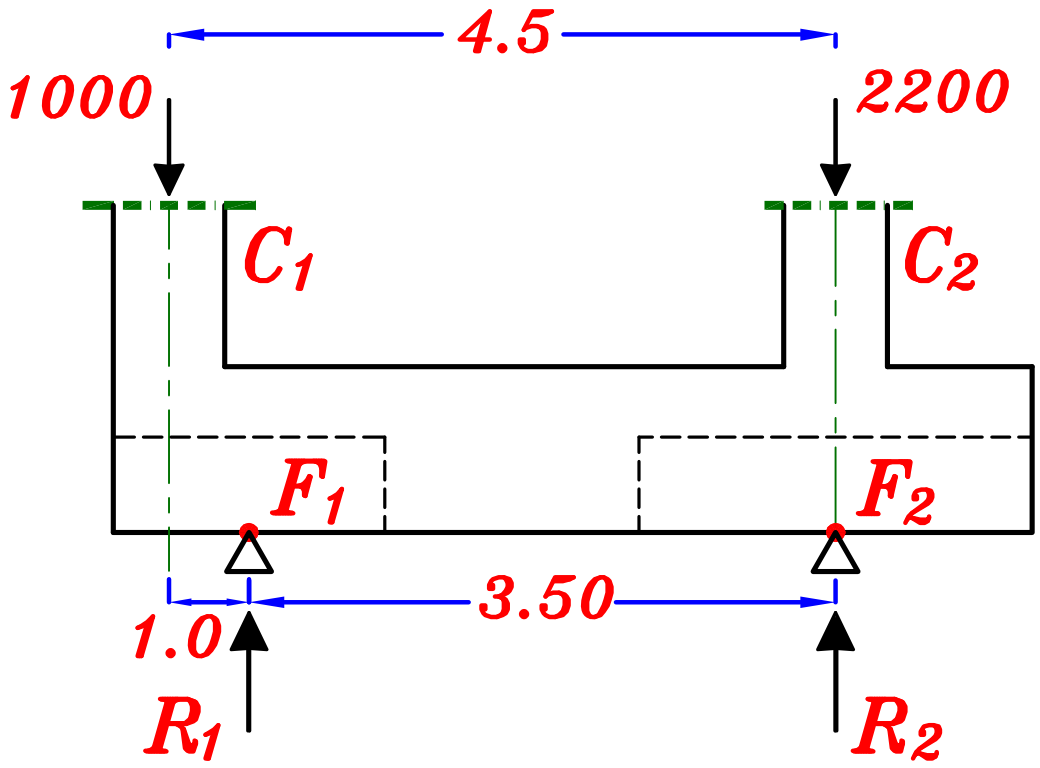

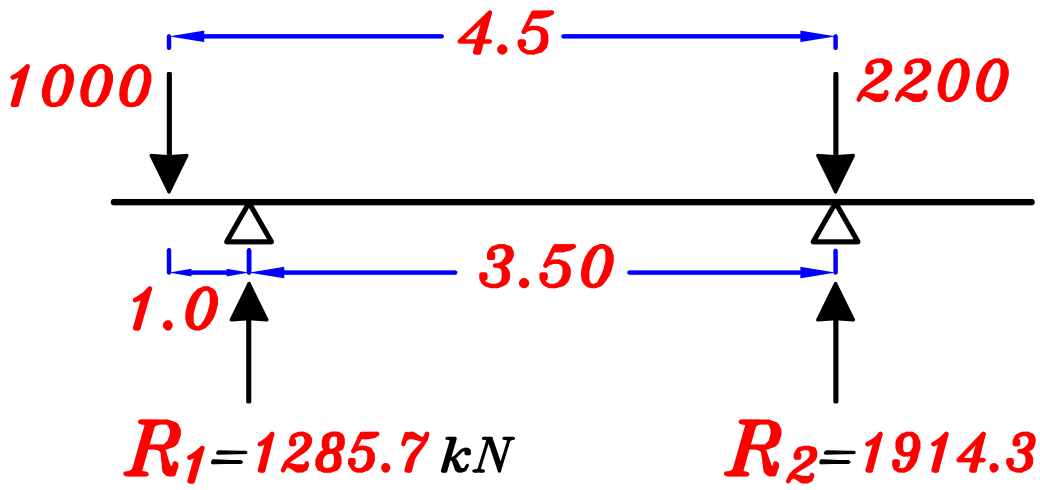

© Copyright Eng. Yasser El-Leathy 2010 . All rights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Footing F_1

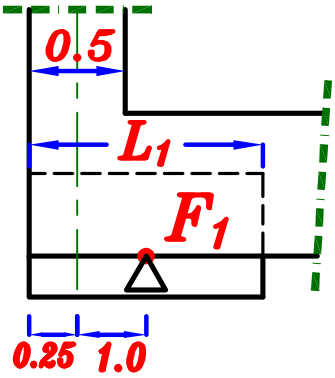

Choose $t_{P.C.} = 30\ cm > 20\ cm$

$$L_{1\,P.C.} = 2\left(e + \frac{c_1}{2}\right) = 2\,(1.0 + 0.25) = 2.50\ m$$

get $B_{1\,P.C.}$ From $A_{P.C.} = \dfrac{R_1}{q_{all}} = A_{P.C.} = B_{1P.C.} * L_{1\,P.C.}$

$$A_{P.C.} = \frac{1285.7}{200} = B_{1P.C.} * 2.50 \longrightarrow B_{1P.C.} = 2.57\ m$$

$B_{1P.C.} = 2.60\ m$ $\quad$ $L_{1P.C.} = 2.50\ m$

$B_{1R.C.} = 2.0\ m$ $\quad$ $L_{1R.C.} = 2.50\ m$

Footing F_2

$$L_{2P.C.} - B_{2P.C.} = b - a = 0.70 - 0.45 = 0.25\ m$$

$$L_{2P.C.} = B_{2P.C.} + 0.25\ m \quad \text{-----} (1)$$

$$A_{2P.C.} = \frac{R_2}{q_{all}} = \frac{1914.3\ (kN)}{200\ (kN/m^2)} = 9.57\ m^2$$

$$A_{2P.C.} = B_{2P.C.} * L_{2P.C.} = 9.57\ m^2 \quad \text{-----} (2)$$

$B_{2P.C.} = 3.0\ m$ $\quad$ $L_{2P.C.} = 3.25\ m$

$B_{2R.C.} = 2.40\ m$ $\quad$ $L_{2R.C.} = 2.65\ m$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

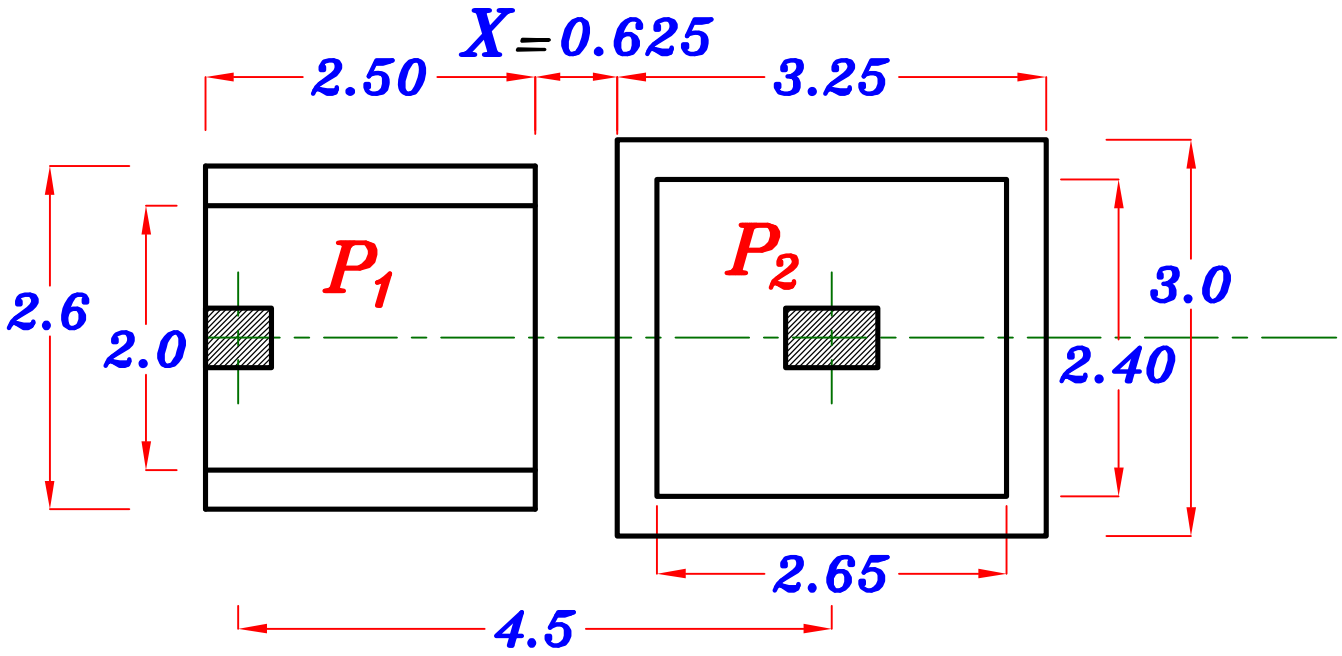

$X = 0.625\ m \quad \therefore \quad \boxed{X < \frac{L_1}{2} \text{ or } \frac{L_2}{2}}$

$\because \quad \boxed{P_1 < P_2}$

$\therefore$ *use Rectangular Combined Footing*

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

1– Calculate the Footing area. (Width & Length of R.C. Footing.)

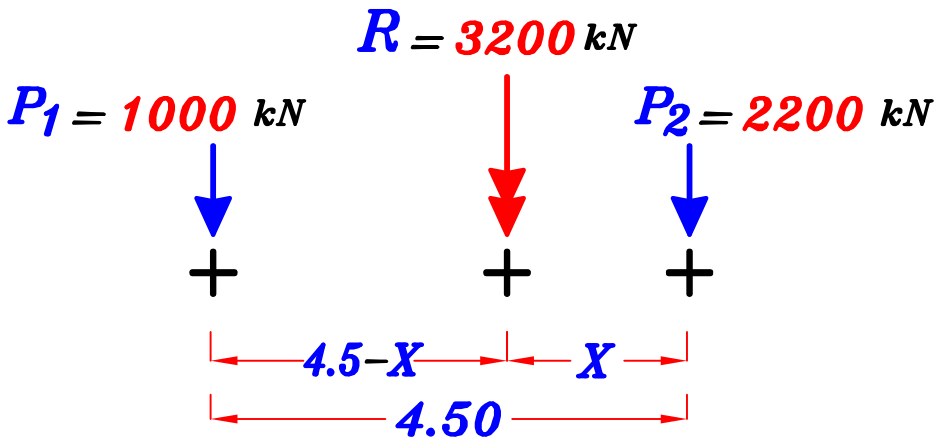

$$X = \frac{P_1}{R} * S = \frac{1000}{3200} * 4.5 = 1.40 \ m$$

$$R = P_1 + P_2 = 1000 + 2200 = 3200 \ kN$$

$$L_{R.C.} = 2(3.1 + 0.25)$$

$$= 6.70 \ m$$

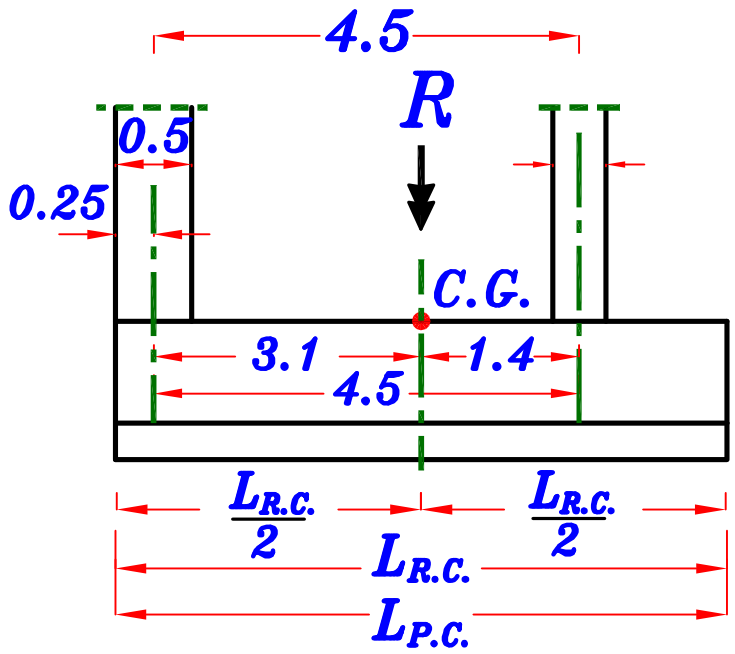

$$\boxed{L_{R.C.} = 6.70 \ m}$$

$$\boxed{L_{P.C.} = 6.70 \ m}$$

Calculate the width of the Footing. B

$$A_{P.C.} = \frac{R_w}{q_{all}} = \frac{3200}{200} = 16.0 \ m^2 = B_{P.C.} * L_{P.C.} = B_{P.C.} * 6.70$$

$$B_{P.C.} = 2.39 \ m$$

$$\boxed{B_{P.C.} = 2.40 \ m}$$

$$\boxed{B_{R.C.} = 1.80 \ m}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

2– Design the critical sections For moment. (Depth of R.C. Footing.)

$P_{1U.L.} = 1.5 * 1000 = 1500\ kN$

$P_{2U.L.} = 1.5 * 2200 = 3300\ kN$

$R_{U.L.} = 1.5 * 3200 = 4800\ kN$

– Actual Normal stress on R.C. Footing (U.L.)

$$F_{act.} = \frac{R_{U.L.}}{B_{R.C.} * L_{R.C.}}$$

$$F_{act.} = \frac{4800}{1.8 * 6.7} = 398.0\ kN/m^2$$

$$\boxed{F_{act.} = 398.0}\ kN/m^2$$

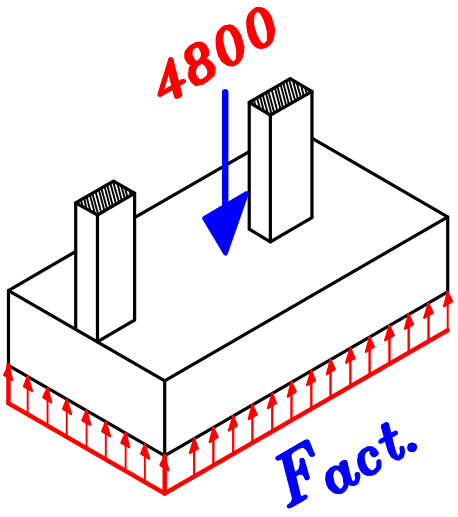

– Actual Uniform Load on R.C. Footing (U.L.) as a beam.

$$w_{U.L.} = \frac{R_{U.L.}}{L_{R.C.}}\ (kN/m`)$$

$$w_{U.L.} = \frac{4800}{6.7} = 716.4\ kN/m`$$

$$\boxed{w_{U.L.} = 716.4}\ kN/m`$$

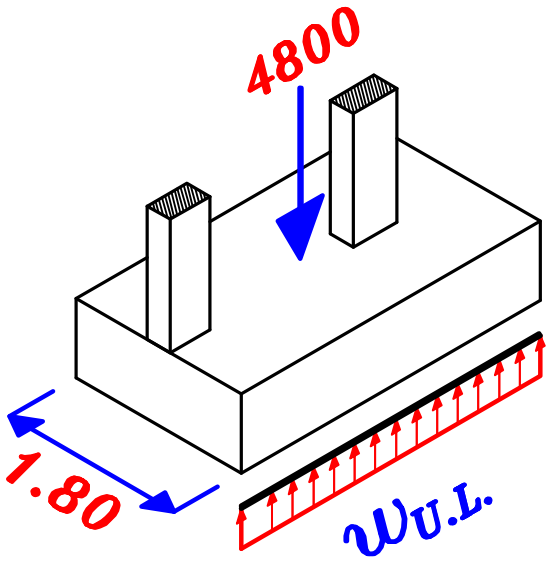

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Longitudinal direction.

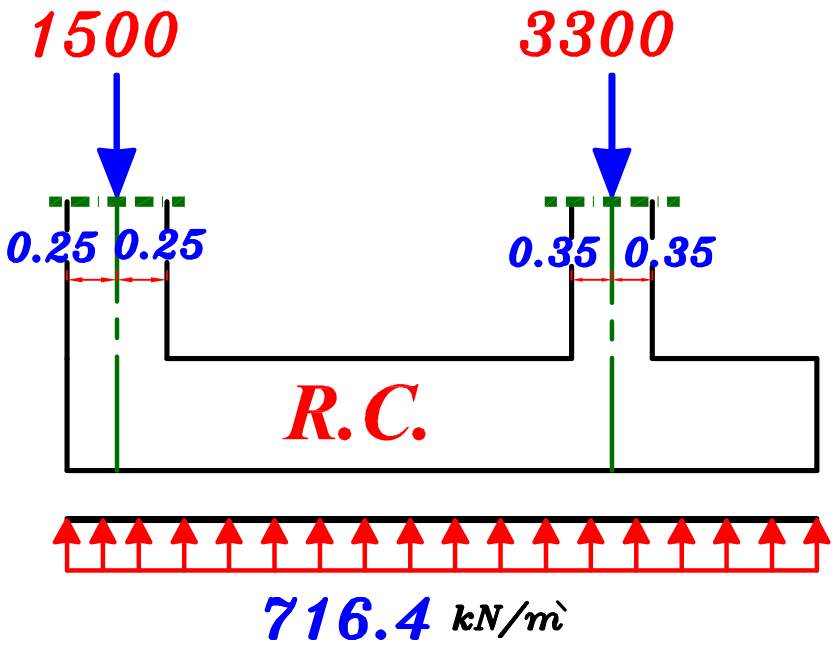

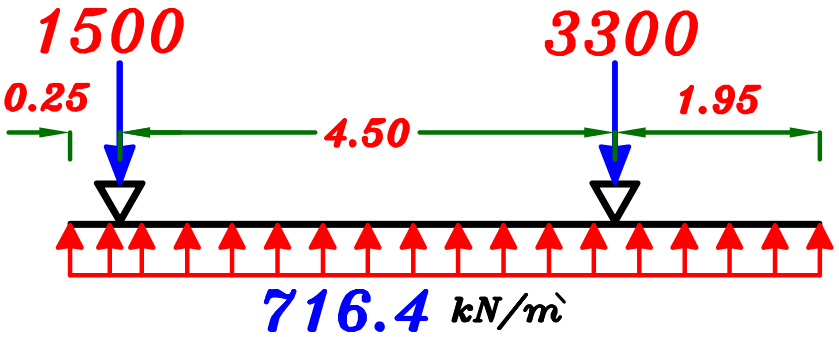

S.F.D

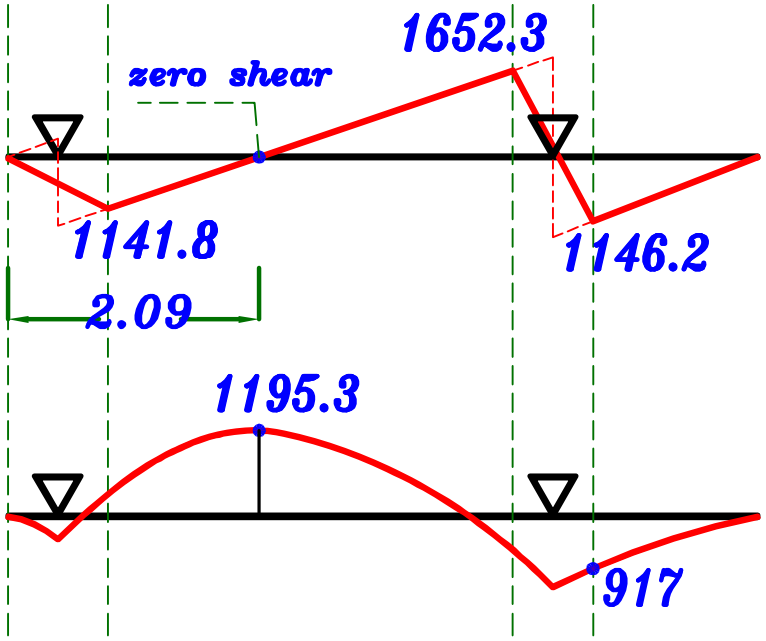

B.M.D

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$$\because\ d = C_1 \sqrt{\frac{M_{act.}}{F_{cu} * b}}$$

Choose $C_1 = 5.0$

$$\therefore\ d = 5.0 \sqrt{\frac{1195.3 * 10^6}{25 * 1800}} = 814.9\ mm$$

$$t_{R.C.} = d + 70\ mm = 814.9 + 70 = 884.9\ mm$$

$t_{R.C.} = 900\ mm$

$d = 830\ mm$

Check depth in Transverse direction.

As a Hidden Beam.

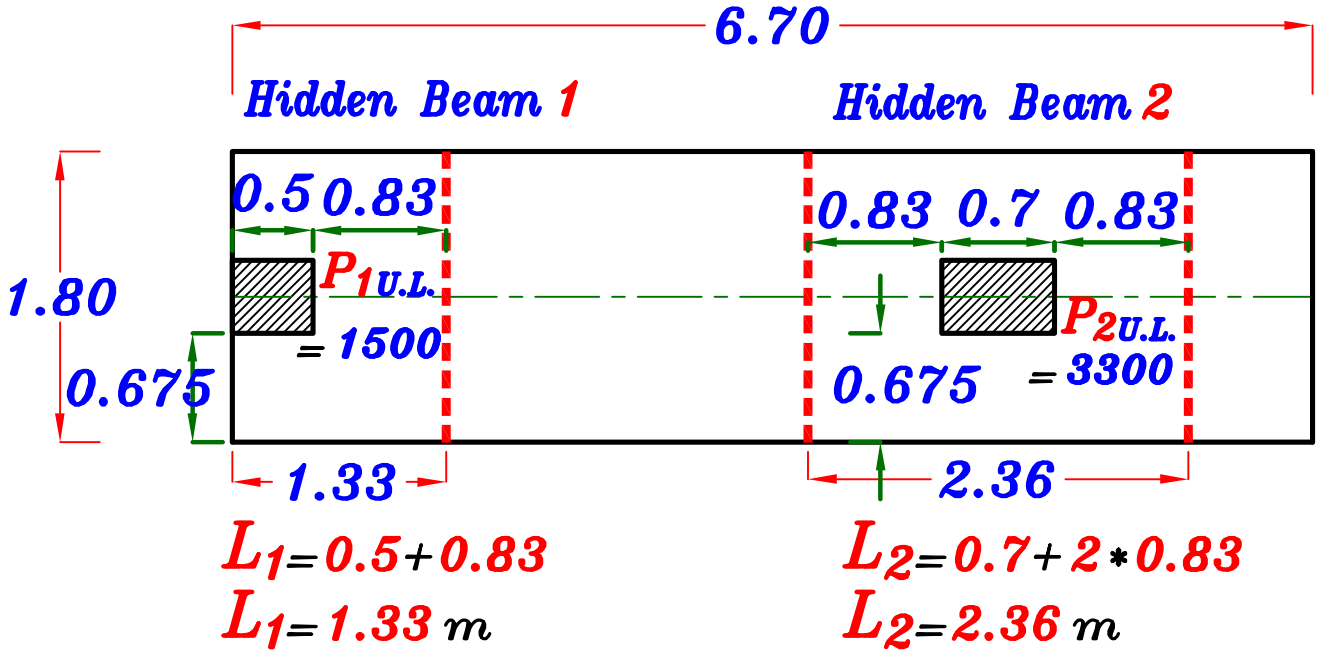

$L_1 = 0.5 + 0.83$

$L_1 = 1.33\ m$

$L_2 = 0.7 + 2 * 0.83$

$L_2 = 2.36\ m$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Hidden Beam 1

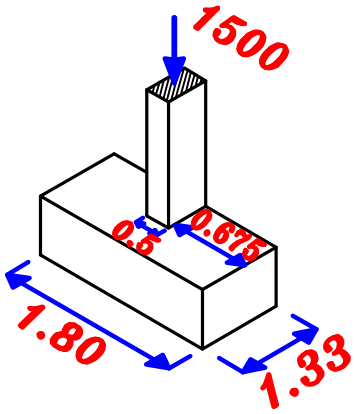

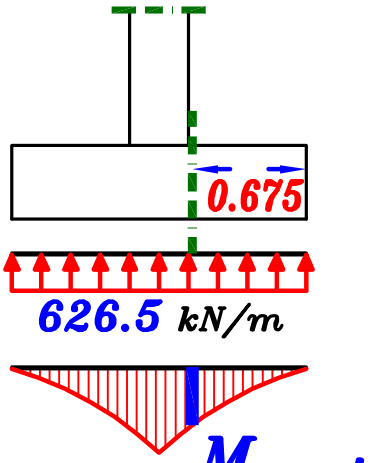

$$F_{1act.} = \frac{P_{1U.L.}}{B_{R.C.} * L_1} = \frac{1500}{1.8 * 1.33} = 626.5 \ kN/m$$

$$M_{1act.} = (626.5 * 0.675 * 1.0\,m)\ \frac{0.675}{2}$$

$$\boxed{M_{1act.} = 142.7 \ kN.m/m}$$

Hidden Beam 2

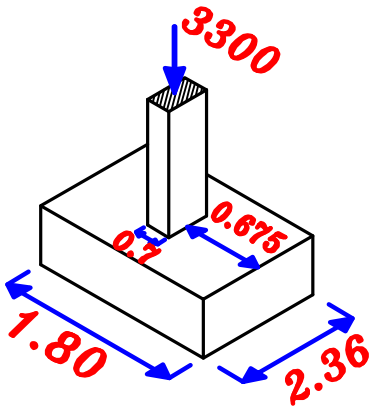

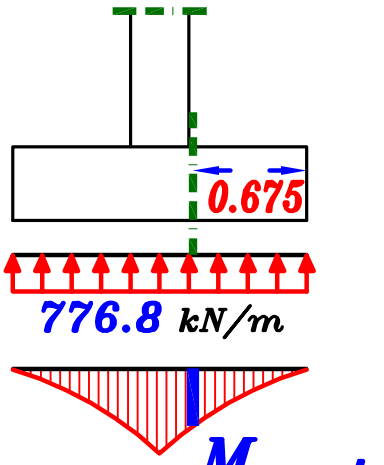

$$F_{2act.} = \frac{P_{2U.L.}}{B_{R.C.} * L_2} = \frac{3300}{1.8 * 2.36} = 776.8 \ kN/m$$

$$M_{2act.} = (776.8 * 0.675 * 1.0\,m)\ \frac{0.675}{2}$$

$$\boxed{M_{2act.} = 176.9 \ kN.m/m}$$

M_{bigger} From $M_{1act.}$ & $M_{2act.}$

$$\boxed{M_{bigger} = 176.9 \ kN.m/m}$$

$$830 = C_1 \sqrt{\frac{176.9 * 10^6}{25 * 1000}} \longrightarrow C_1 = 9.86 > 3.0 \ \therefore ok.$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

3 – Check Shear. at long direction

Critical section For Shear.

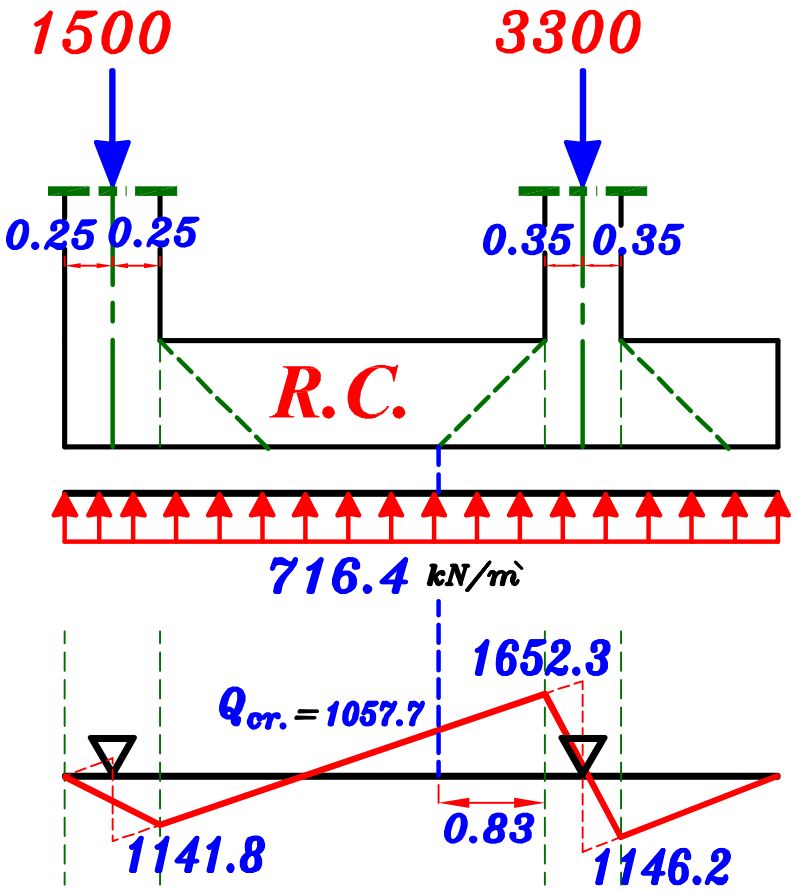

S.F.D

$$Q_{cr.} = Q_{max.} - w_{U.L.} * d = 1652.3 - 716.4 * 0.83 = 1057.7 \ kN$$

* Calculate Actual shear stress. (q_u)

$$q_u = \frac{Q_{cr.}}{B * d} = \frac{1057.7 * 10^3}{1800 * 830} = 0.707 \ kN/m^2$$

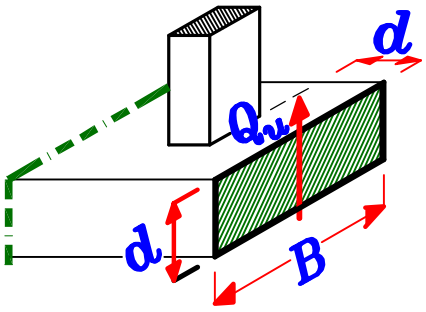

* Allowable shear stress. (q_{su})

$$q_{su} = 0.16\sqrt{\frac{F_{cu}}{\gamma_c}} = 0.16\sqrt{\frac{25}{1.5}} = 0.653 \ N/mm^2$$

$q_u > q_{su}$ ⟶ UnSafe shear stresses

We have to increase Depth

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Increase the depth of the Footing.

Check Shear ثم يتم عمل ١٠ سم القاعده depth يتم زياده

Take $t_{R.C.} = 1000\ mm$ $d = 930\ mm$

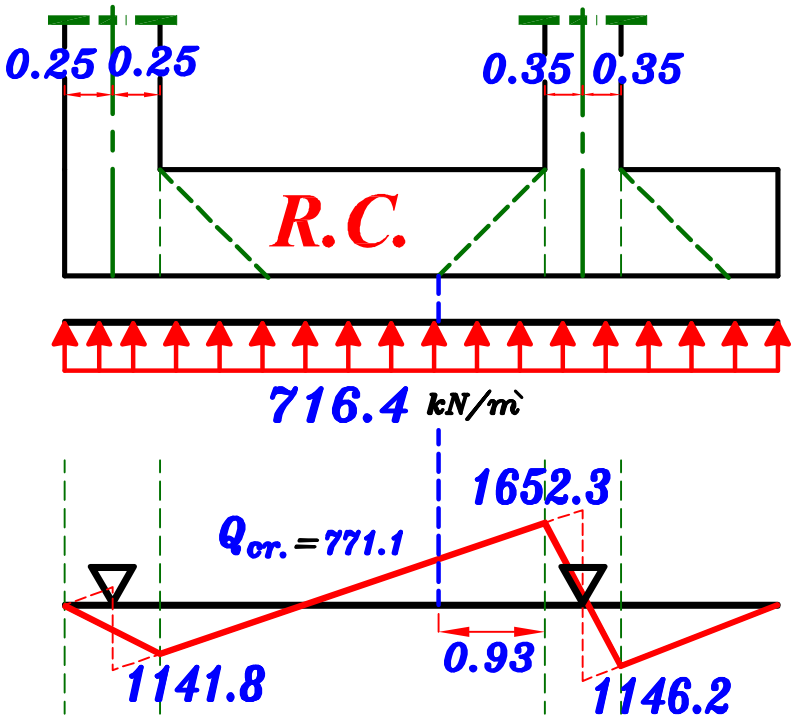

S.F.D

$$Q_{cr.} = Q_{max.} - w_{U.L.} * d = 1652.3 - 716.4 * 0.93 = 986.05\ kN$$

* Calculate Actual shear stress. (q_u)

$$q_u = \frac{Q_{cr.}}{1000 * d} = \frac{986.05 * 10^3}{1800 * 930} = 0.59\ kN/m^2$$

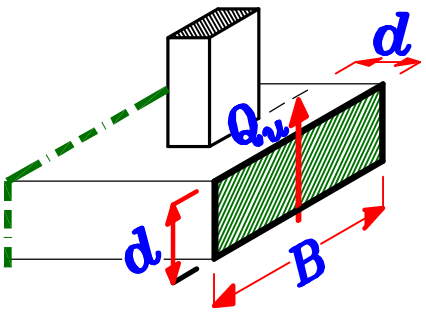

* Allowable shear stress. (q_{su})

$$q_{su} = 0.16\sqrt{\frac{F_{cu}}{\gamma_c}} = 0.16\sqrt{\frac{25}{1.5}} = 0.653\ N/mm^2$$

$q_u < q_{su}$ ⟶ Safe shear stresses

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

4 – Check Punching Shear. القص الثاقب .

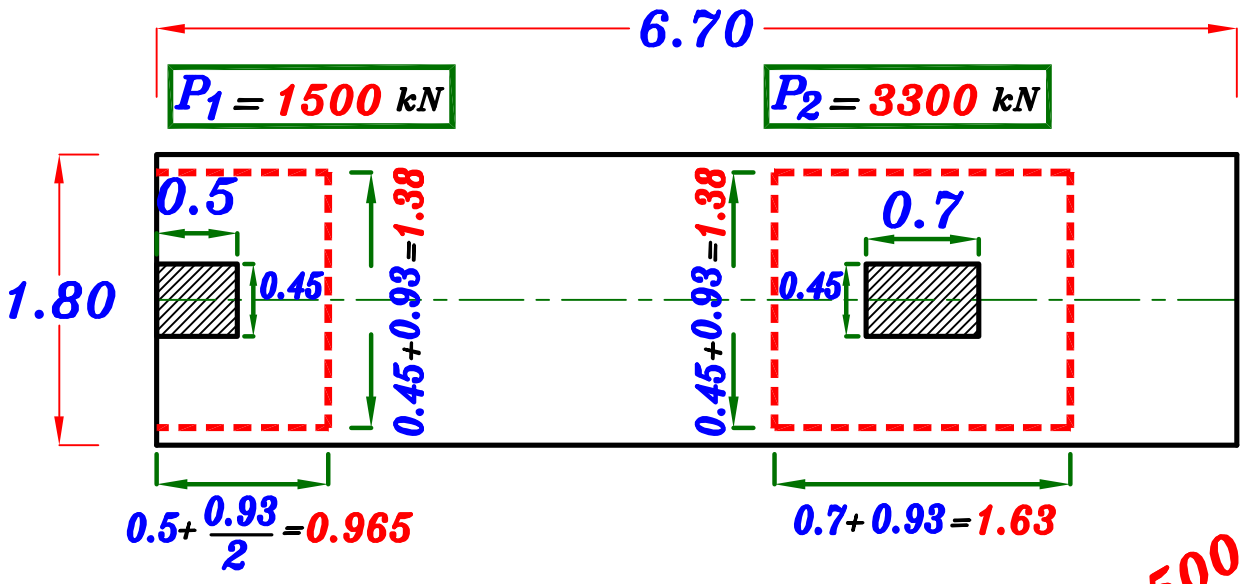

Column 1

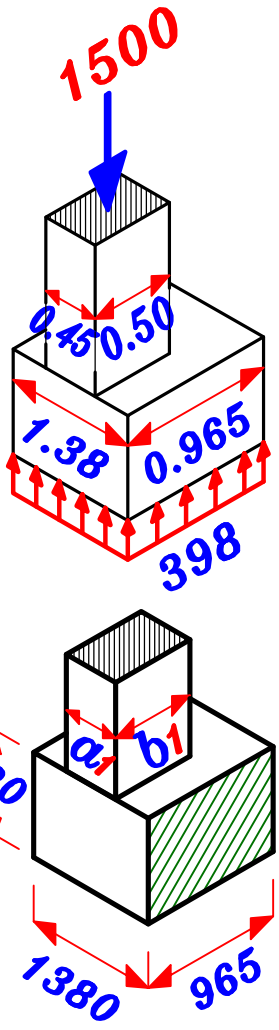

* Calculate Punching Force. (Q_{1p})

$$Q_{1p} = 1500 - 398\ (0.965 * 1.38) = 967\ kN$$

$$A_{1p} = \left[2\,(965) + (1380)\right] * 930$$

$$= 3078300\ mm^2$$

* Calculate Actual Punching shear stress. q_{1pu}

$$q_{1pu} = \frac{967.0 * 10^3}{3078300} = 0.314\ N/mm^2$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Column 2

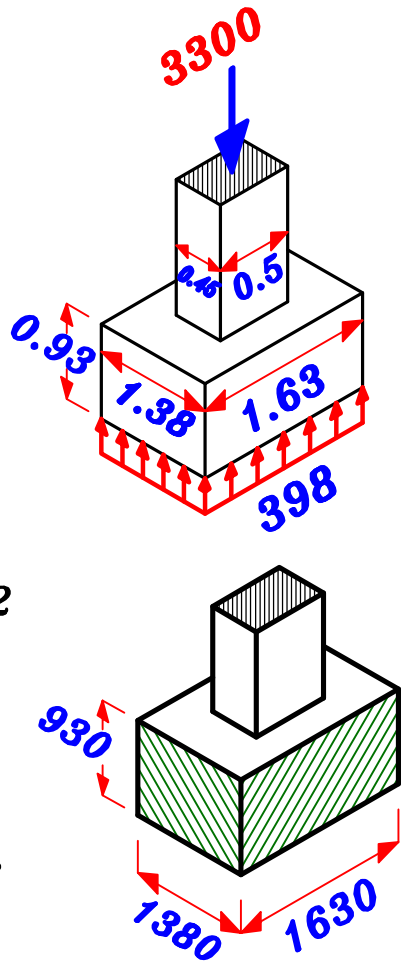

* Calculate Punching Force. (Q_{2p})

$$Q_{2p} = 3300 - 398\ (1.63 * 1.38)$$

$$= 2404.7\ kN$$

$$A_{2p} = [2(1380) + 2(1630)] * 930$$

$$= 5598600\ mm^2$$

* Calculate Actual Punching shear stress. q_{1pu}

$$q_{2pu} = \frac{2404.7 * 10^3}{5598600} = 0.423\ N/mm^2$$

q_{pumax} the bigger q_{1pu} & $q_{2pu} = 0.429\ N/mm^2$

* Calculate allowable Punching shear stress. q_{pcu}

$$q_{pcu} = 0.316\ (0.5 + \frac{a}{b})\ \sqrt{\frac{F_{cu}}{\delta_c}} =$$

$$q_{pcu} = 0.316\ (0.5 + \frac{0.45}{0.70})\ \sqrt{\frac{25}{1.5}} = 1.47\ N/mm^2$$

$q_{pu} \leqslant q_{pcu} \longrightarrow$ Safe punching shear.
No need to increase dimensions.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

5- Reinforcement of the Footing.

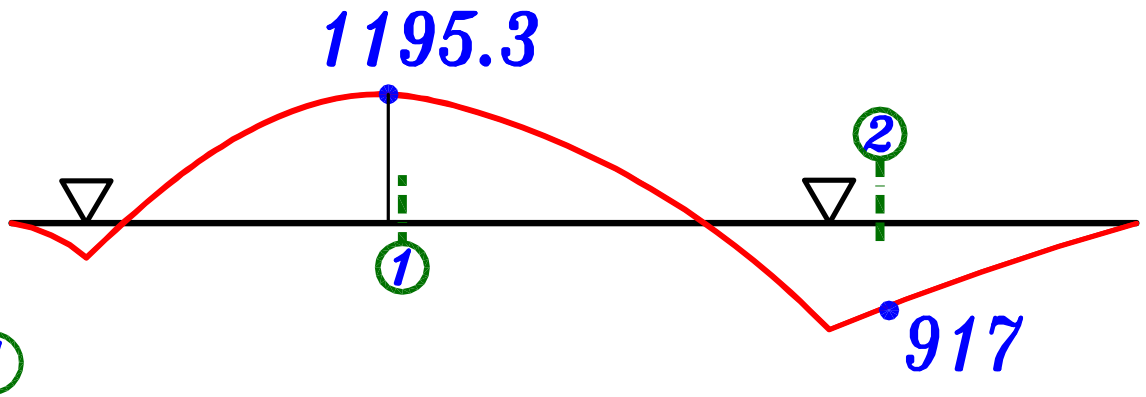

Sec. (1)

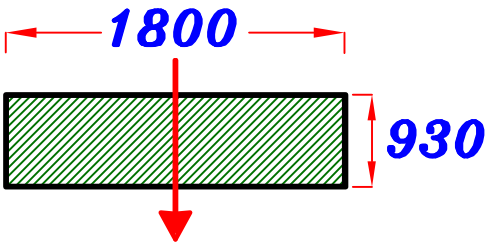

$$930 = C_1 \sqrt{\frac{1195.3 * 10^6}{25 * 1800}}$$

$$\longrightarrow C_1 = 5.70 \longrightarrow J = 0.826$$

$$A_S = \frac{M_{act.}}{J\, F_y\, d} = \frac{1195.3 * 10^6}{0.826 * 360 * 930} = 4322.2 \ mm^2$$

$$A_S \ (mm^2/m) = \frac{A_S}{B_{R.C.}} = \frac{4322.2}{1.80} = 2401.2 \ mm^2/m`$$

Check $A_{S\,min}$

$$A_{S\,min} = \left\{ \begin{array}{l} 1.5\,d = 1.5 * 930 = 1395 \\ 5\,\phi\,12/m` = 565 \end{array} \right\} \ 1395 \ mm^2$$

$$\therefore \ A_S > A_{S\,min} \longrightarrow \text{Take} \ A_S = 2401.2 \ mm^2$$

$$\boxed{7\,\phi\,22/m`}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

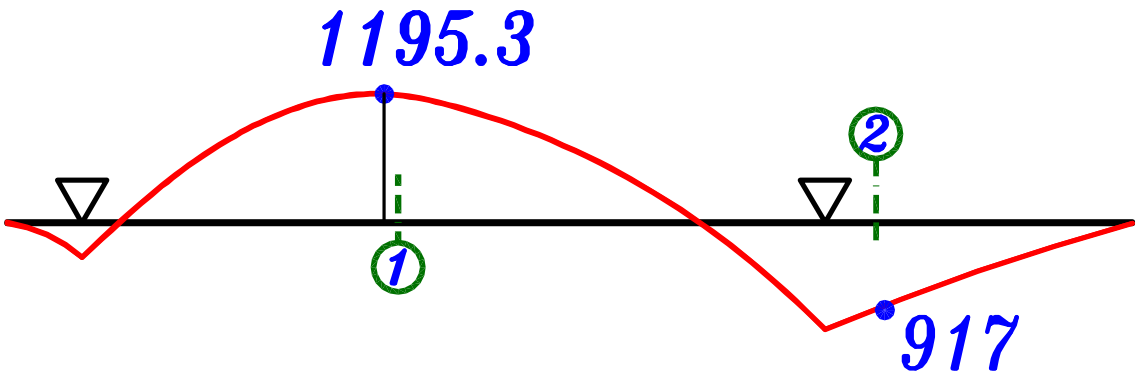

Sec. ③

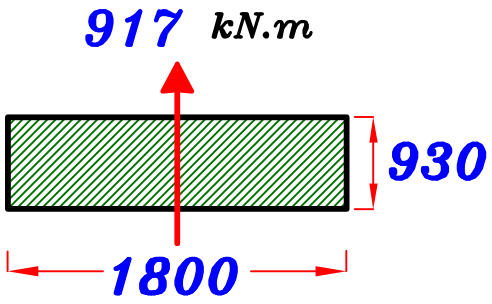

$$930 = C_1 \sqrt{\frac{917 * 10^6}{25 * 1800}}$$

$$\longrightarrow C_1 = 6.51 \longrightarrow J = 0.826$$

$$A_S = \frac{M_{act.}}{J\, F_y\, d} = \frac{917 * 10^6}{0.826 * 360 * 930} = 3315.9 \ mm^2$$

$$A_S \ (mm^2/m) = \frac{A_S}{B_{R.C.}} = \frac{3315.9}{1.80} = 1842.1 \ mm^2/m`$$

Check $A_{S\,min}$

$$A_{S\,min} = \left\{ \begin{array}{l} 1.5\,d = 1.5 * 930 = 1395 \\ 5\,\phi\,12/m` = 565 \end{array} \right\} 1395 \ mm^2$$

$$\therefore A_S > A_{S\,min} \longrightarrow \text{Take } A_S = 1842.1 \ mm^2$$

$$\boxed{5\,\phi\,22/m`}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Transverse direction. Short direction.

Hidden Beam 1

$$M_{1act.} = 142.7 \ kN.m/m$$

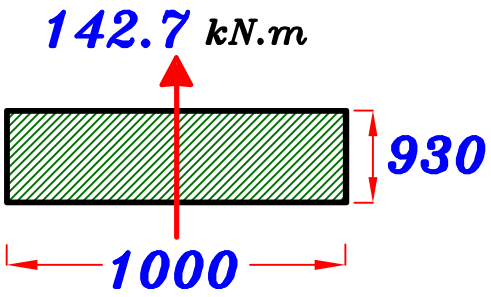

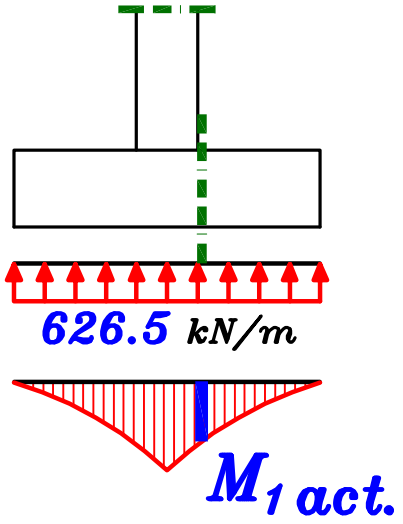

$$930 = C_1 \sqrt{\frac{142.7 * 10^6}{25 * 1000}} \longrightarrow C_1 = 12.3 \longrightarrow J = 0.826$$

$$A_s = \frac{M_{act.}}{J F_y d} = \frac{142.7 * 10^6}{0.826 * 360 * 930} = 516.0 \ mm^2/m`$$

Check $A_{s\,min}$

$$A_{s\,min} = \left\{ \begin{array}{l} 1.5\,d = 1.5 * 930 = 1395 \\ 5\,\phi\,12/m` = 565 \end{array} \right\} 1395 \ mm^2$$

$$\therefore A_s < A_{s\,min} \longrightarrow Take \ A_s = 1395 \ mm^2$$

$$\boxed{6\,\phi\,18/m`}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Hidden Beam 2

$$M_{2act.} = 176.9 \ kN.m/m$$

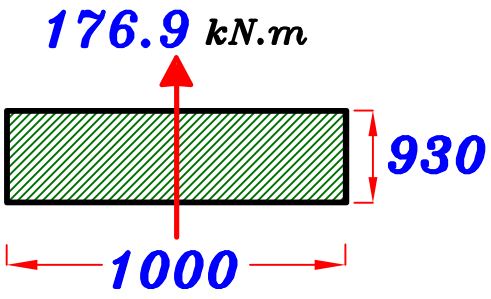

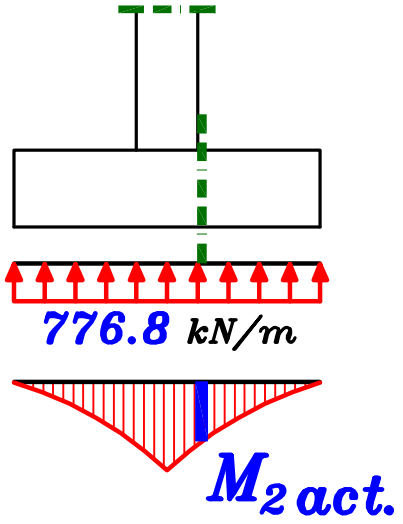

$$930 = C_1 \sqrt{\frac{176.9 * 10^6}{25 * 1000}} \longrightarrow C_1 = 11.0 \longrightarrow J = 0.826$$

$$A_s = \frac{M_{act.}}{J F_y d} = \frac{176.9 * 10^6}{0.826 * 360 * 930} = 639.6 \ mm^2/m`$$

Check $A_{s\,min}$

$$A_{s\,min} = \left\{ \begin{array}{l} 1.5\,d = 1.5 * 930 = 1395 \\ 5\,\phi\,12/m` = 565 \end{array} \right\} \ 1395 \ mm^2$$

$$\therefore A_s < A_{s\,min} \longrightarrow \text{Take } A_s = 1845 \ mm^2$$

$$\boxed{6\,\phi\,18/m`}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

6- Details of Reinforcement.

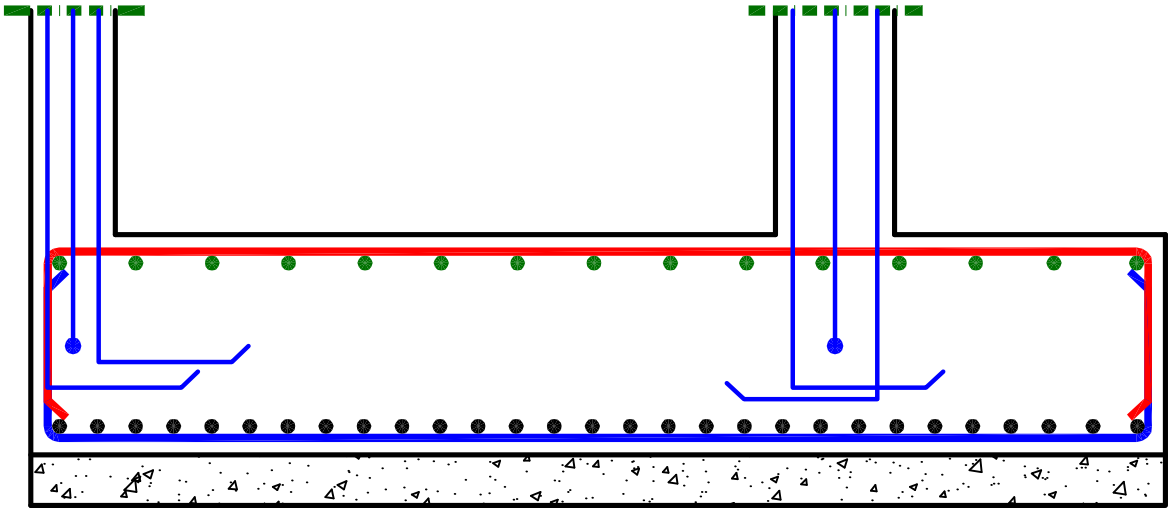

Sec X-X

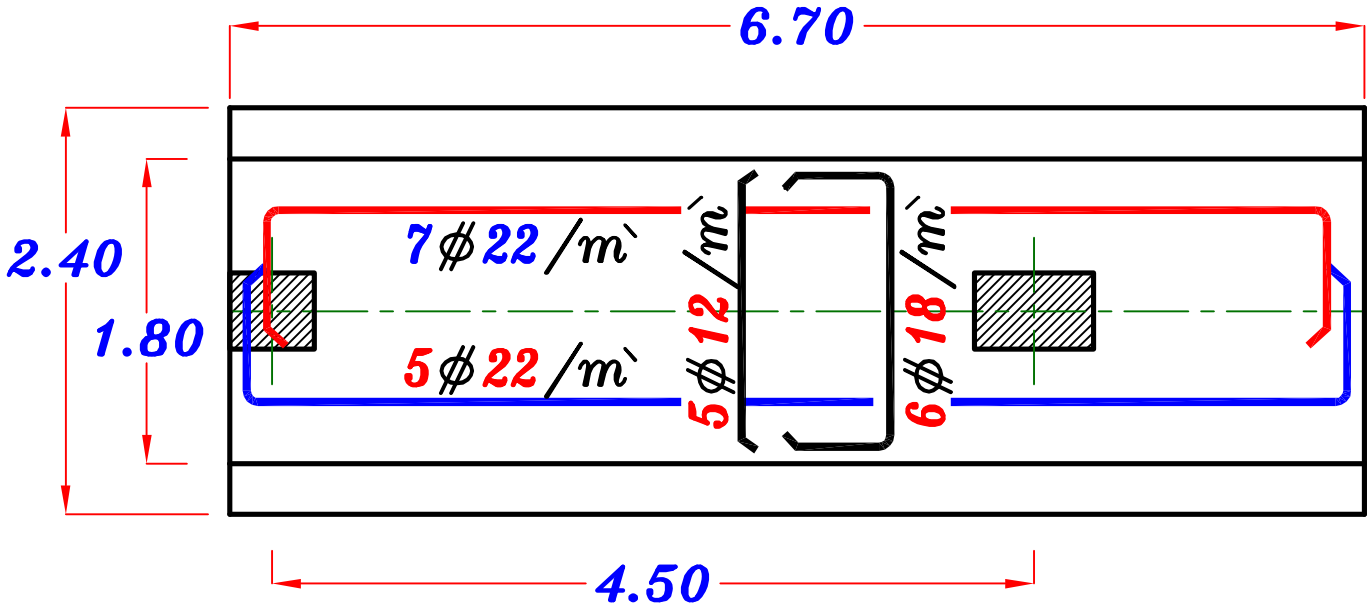

Plan

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

b Trapezoidal Combined Footing.

$P_1 > P_2$ حاله نادره .

اذا لم ينفع حل الـ Strap Beam

عندما تكون $IF\ X < \frac{L_1}{2}\ \&\ \frac{L_2}{2}$

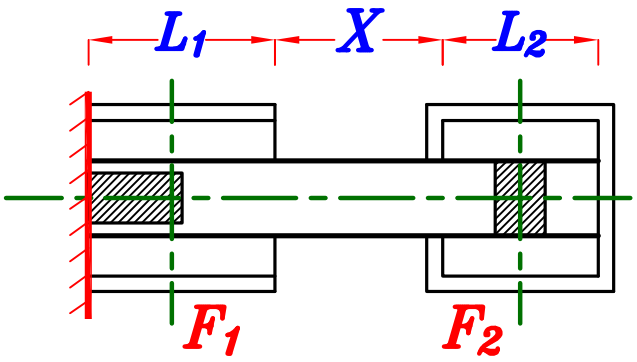

IF $P_1 > P_2$ *use* ***Trapezoidal*** *combined Footing.*

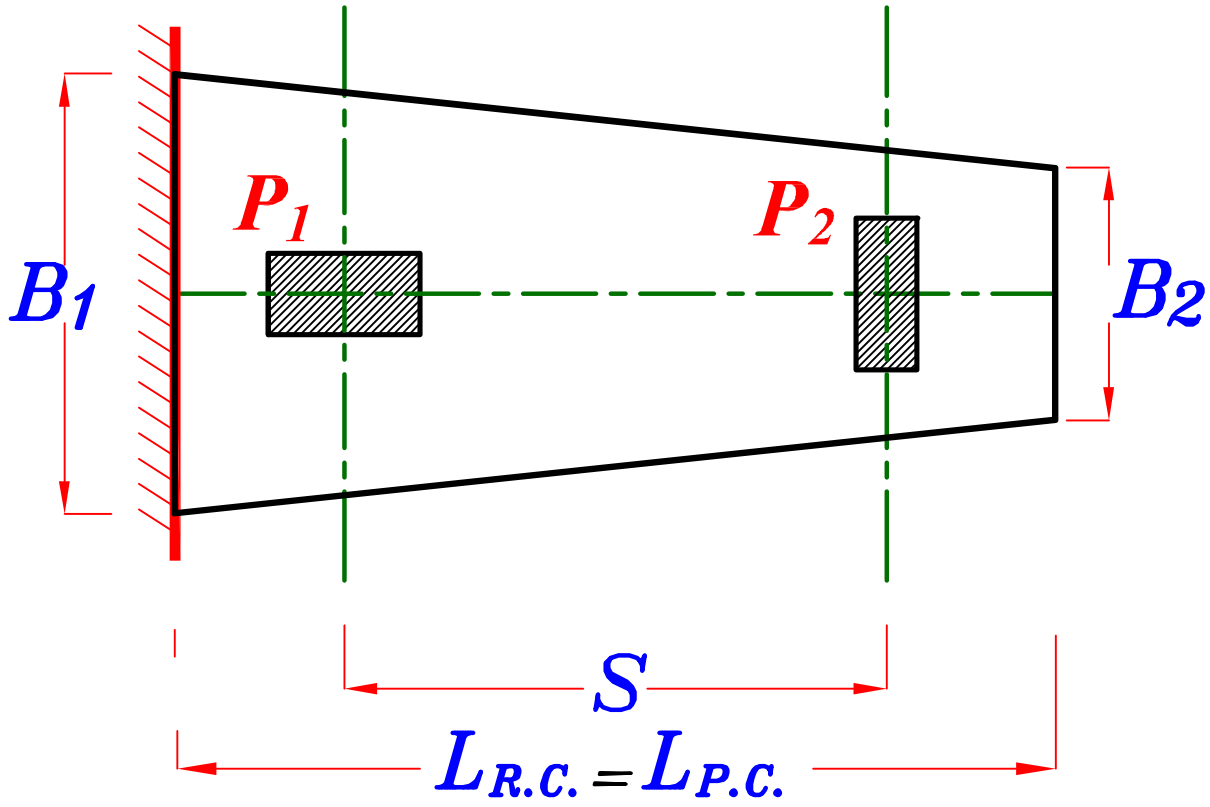

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

1– Calculate the Footing area. (Width & Length of R.C. Footing.)

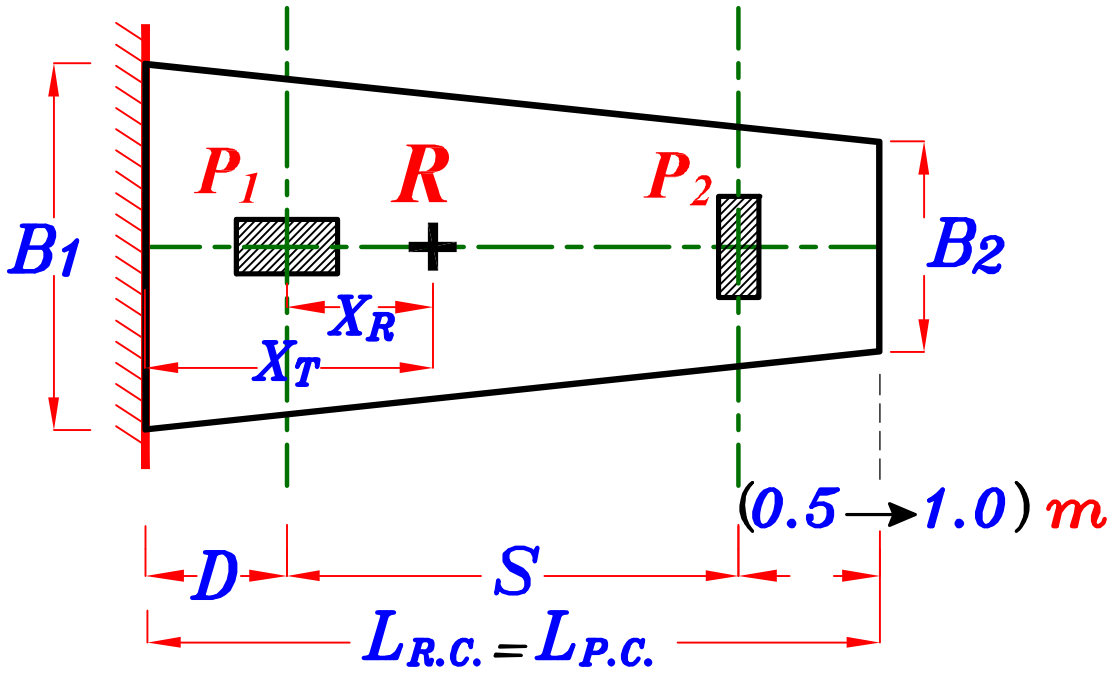

$$L_{R.C.} = L_{P.C.} = D + S + (0.5 \rightarrow 1.0)m$$ يتم تحديد طول القاعده

حيث D هى المسافه من منتصف عمود الجار الى حد الجار .

و S هى المسافه بين منتصف العمودين .

$$R = P_1 + P_2$$ يتم حساب قيمه محصله الاحمال R

يتم تحديد بعد محصله الاحمال X_R عن منتصف عمود الجار .

$$R * X_R = P_2 * S \longrightarrow X_R = \frac{P_2}{R} * S$$

$$X_T = X_R + D$$ يتم تحديد بعد محصله الاحمال X_T عن حد الجار .

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Calculate the width of the Footing. B

IF $t_{P.C.} \geqslant 20\ cm$

$$A_{P.C.} = \frac{R_w}{q_{all}} = \checkmark\ m^2 = L_{P.C.}\left(\frac{B_{1P.C.}+B_{2P.C.}}{2}\right) \quad \text{------} (1)$$

$$X_T = \frac{L_{P.C.}}{3}\left(\frac{B_{1P.C.}+2\,B_{2P.C.}}{B_{1P.C.}+B_{2P.C.}}\right) \quad \text{------} (2)$$

مكان محصله شبه المنحرف

From (1) , (2) $\longrightarrow$ $B_{1P.C.} = \checkmark$ & $B_{2P.C.} = \checkmark$

$$B_{1R.C.} = B_{1P.C.} - 2\,t_{P.C.} \qquad B_{2R.C.} = B_{2P.C.} - 2\,t_{P.C.}$$

IF $t_{P.C.} < 20\ cm$

$$A_{R.C.} = \frac{R_w}{q_{all}} = \checkmark\ m^2 = L_{R.C.}\left(\frac{B_{1R.C.}+B_{2R.C.}}{2}\right) \quad \text{------} (1)$$

$$X_T = \frac{L_{R.C.}}{3}\left(\frac{B_{1R.C.}+2\,B_{2R.C.}}{B_{1R.C.}+B_{2R.C.}}\right) \quad \text{------} (2)$$

From (1) , (2) $\longrightarrow$ $B_{1R.C.} = \checkmark$ & $B_{2R.C.} = \checkmark$

$$B_{1P.C.} = B_{1R.C.} + 2\,t_{P.C.} \qquad B_{2P.C.} = B_{2R.C.} + 2\,t_{P.C.}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Calculate the average width of the Footing.

نعتبر أن القاعده الشبه منحرف عباره عن مستطيل أبعاده ($B_{av.R.C.} * L_{R.C.}$)

$$B_{av.R.C.} = \frac{B_{1R.C.} + B_{2R.C.}}{2}$$

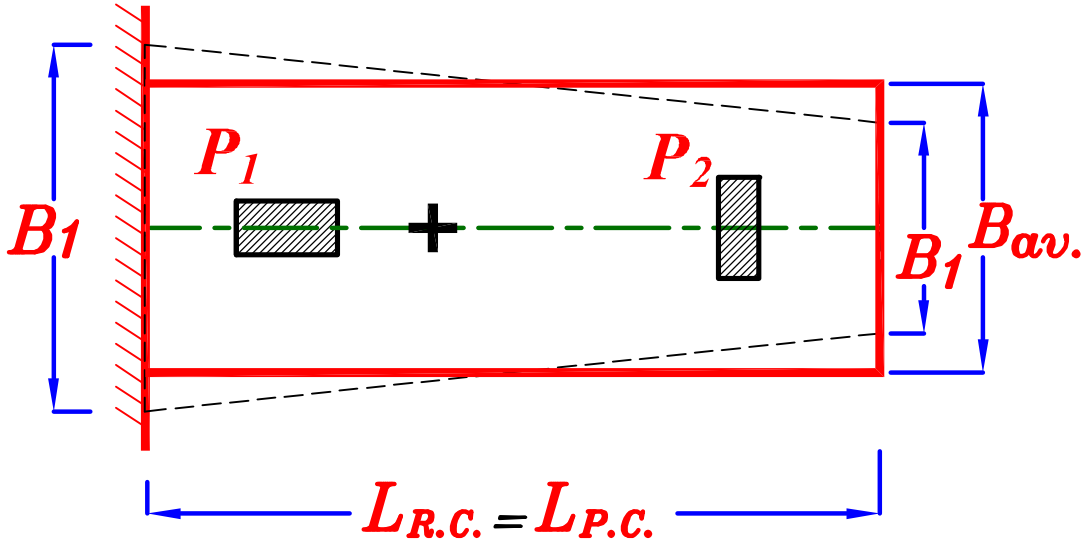

– Actual Normal stress on R.C. Footing (U.L.)

$$F_{act.} = \frac{R_{U.L.}}{B_{av.\,R.C.} * L_{R.C.}} \quad (kN/m^2)$$

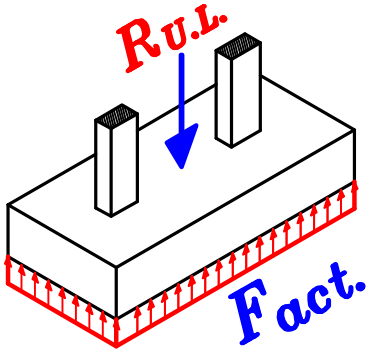

– Actual Uniform Load on R.C. Footing (U.L.) as a beam.

نعتبر أن القاعده عباره عن كمره بعرض $B_{R.C.}$

$$w_{U.L.} = \frac{R_{U.L.}}{L_{R.C.}} \quad (kN/m`)$$

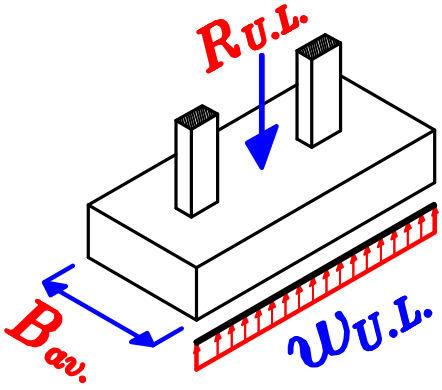

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Longitudinal direction.

نعتبر أن القاعده عباره عن كمره بعرض $B_{R.C.}$

يتم رسم ***B.M.D. , S.F.D.*** للقاعده كلها كأنها كمره بعرض $B_{R.C.}$

و يتم حساب قيم ***B.M. , S.F.*** على وش الاعمده .

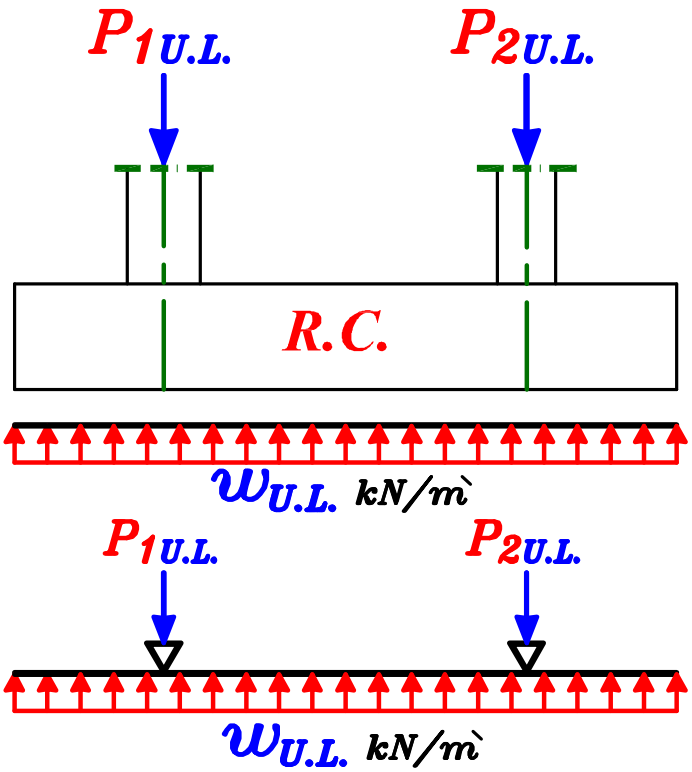

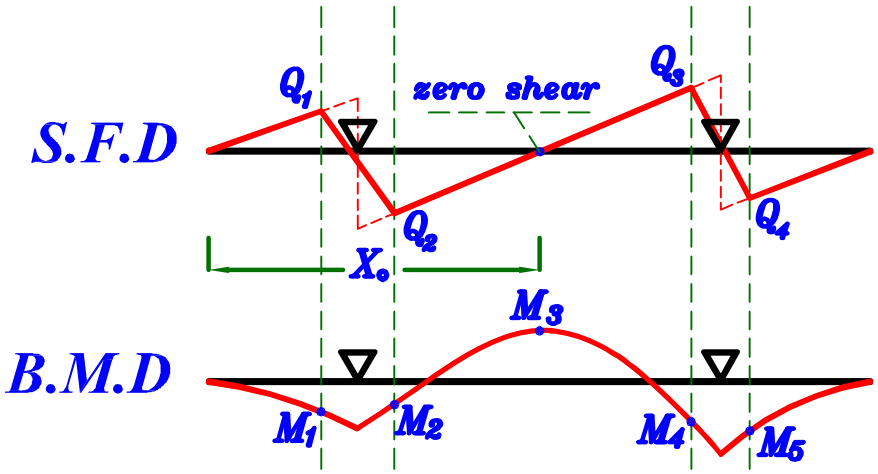

لتحديد أكبر ***moment*** فى منتصف القاعده M_3

يتم تحديد مكان نقطه ***zero shear*** أى حساب المسافه X_o

$$P_{1\,U.L.} = w_{U.L.} * X_o \longrightarrow X_o = \checkmark \longrightarrow M_3 = \checkmark$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

$M_{max.}$ is the bigger moment of $M_1, M_2, M_3, M_4 \& M_5$

$$d\ (mm) = C_1 \sqrt{\frac{M_{max}\ (kN.m) * 10^6}{F_{cu}\ (N/mm^2) * B_{av.R.C.}\ (mm)}}$$

Choose $C_1 = (3.5 \rightarrow 5.0)$ Get $d = \checkmark\checkmark$ (mm)

$$t_{R.C.} = d + \text{cover}\ (70\ mm)$$

Check depth in Transverse direction. Short direction.

As a Hidden Beam.

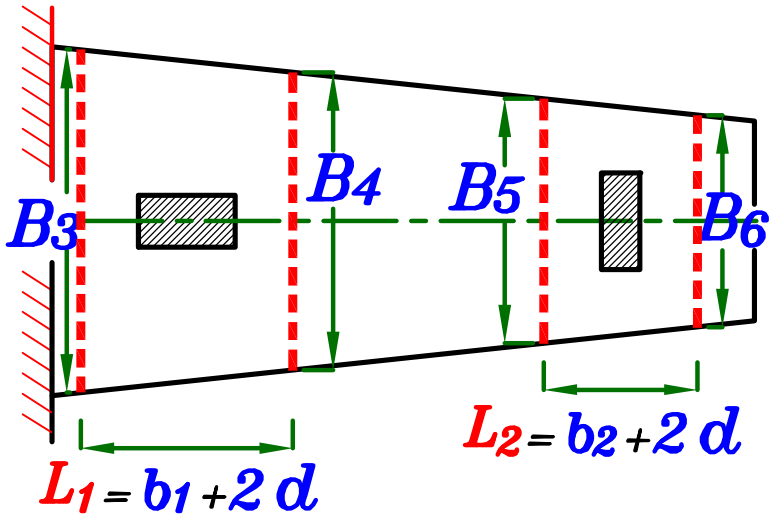

$$B_{1av.} = \frac{B_3 + B_4}{2}$$

$$B_{2av.} = \frac{B_5 + B_6}{2}$$

Hidden Beam 1

Hidden Beam 2

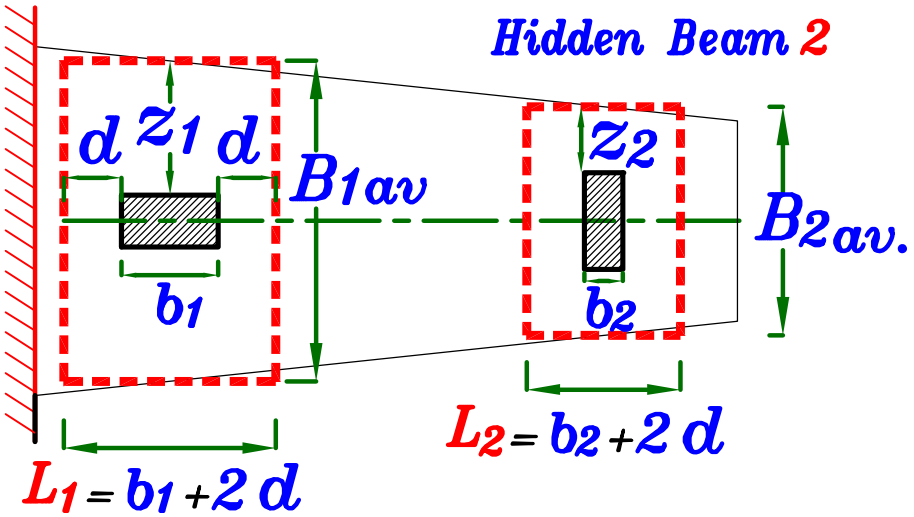

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Hidden Beam 1

$$F_{1act.} = \frac{P_{1\,U.L.}}{B_{1av} * L_1} \quad (kN/m^2)$$

$$Z_1 = \frac{B_{1av} - a_1}{2} \quad (m)$$

$$M_{1act.} = (F_{1act.} * Z_1 * 1.0\,m)\ \frac{Z_1}{2}$$

$(kN.m/1.0\,m)$

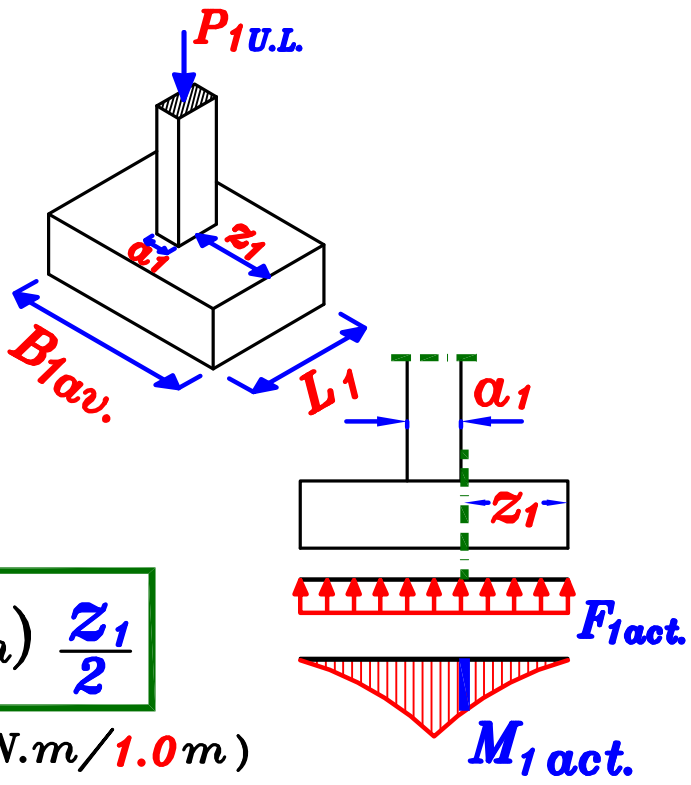

Hidden Beam 2

$$F_{2act.} = \frac{P_{2U.L.}}{B_{2av} * L_2} \quad (kN/m^2)$$

$$Z_2 = \frac{B_{2av} - a_2}{2} \quad (m)$$

$$M_{2act.} = (F_{2act.} * Z_2 * 1.0\,m)\ \frac{Z_2}{2}$$

$(kN.m/1.0\,m)$

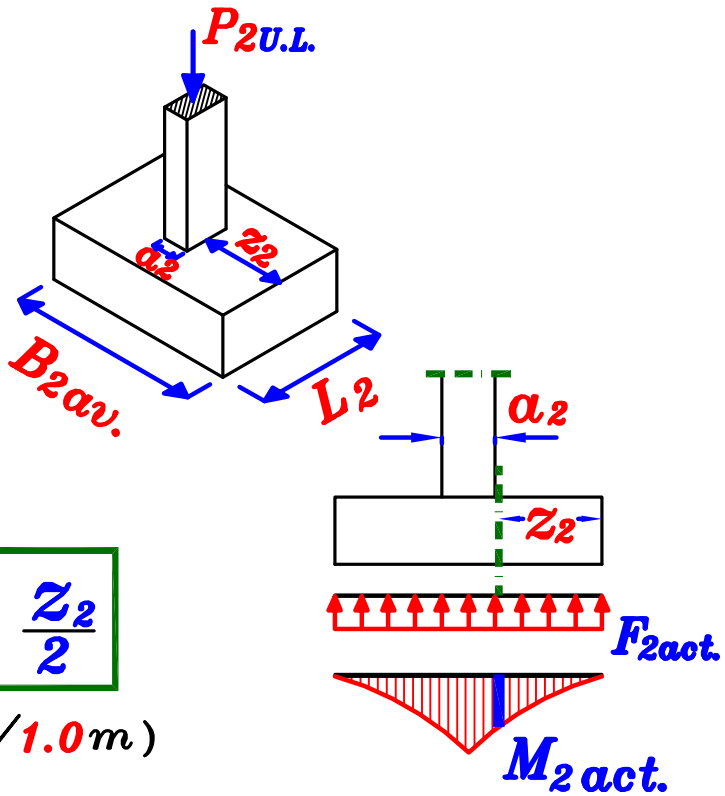

Choose M_{bigger} The bigger value of $M_{1act.}$ & $M_{2act.}$

$$d = C_1 \sqrt{\frac{M_{bigger} * 10^6}{F_{cu} * 1000}} \longrightarrow \text{Get} \longrightarrow C_1$$

Then Check on $C_1 \not< 3.0$

IF $C_1 < 3.0 \longrightarrow$ Increase d

and Recheck the transverse direction.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

3 – Check Shear. at long direction

Critical section For Shear.

$Q_{max.}$ على بعد d من وش العمود اللى عنده

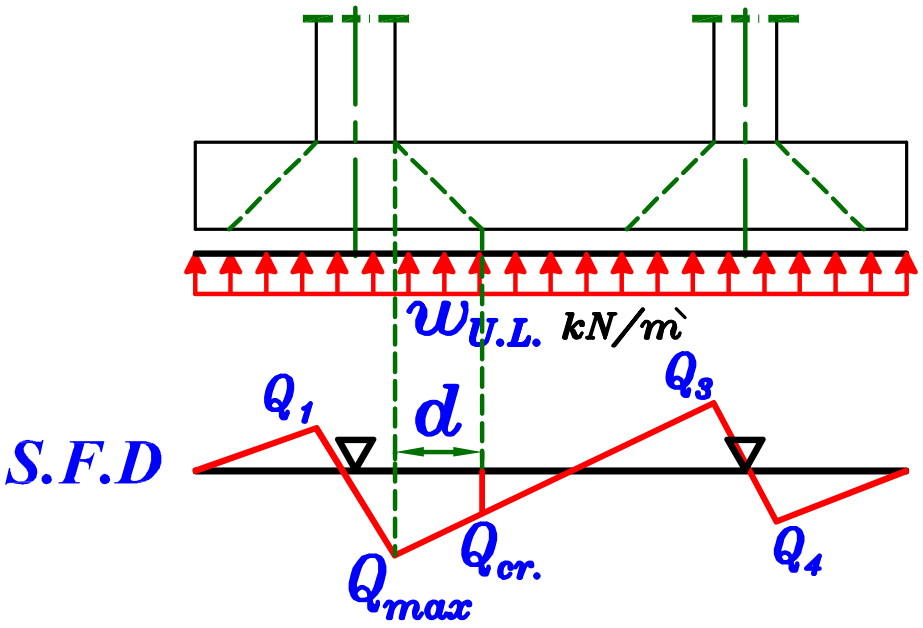

$$Q_{cr.} = Q_{max.} - w_{U.L.} * d$$

* Calculate Actual shear stress. (q_u)

$$q_u = \frac{Q_{cr.}\,(kN) * 10^3}{B\,(mm) * d\,(mm)} \quad (N/mm^2)$$

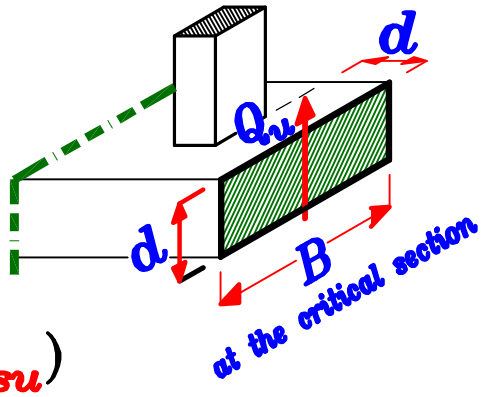

* Calculate Allowable shear stress. (q_{su})

$$q_{su} = 0.16\sqrt{\frac{F_{cu}}{\gamma_c}} \quad (N/mm^2)$$

* Compare between

Actual shear stress (q_u) & Allowable shear stress (q_{su})

* IF $q_u \leqslant q_{su}$ ⟶ Safe shear stresses
No need to increase dimensions.

* IF $q_u > q_{su}$ ⟶ UnSafe shear stresses
We have to increase dimensions.

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

4 – Check Punching Shear. القص الثاقب .

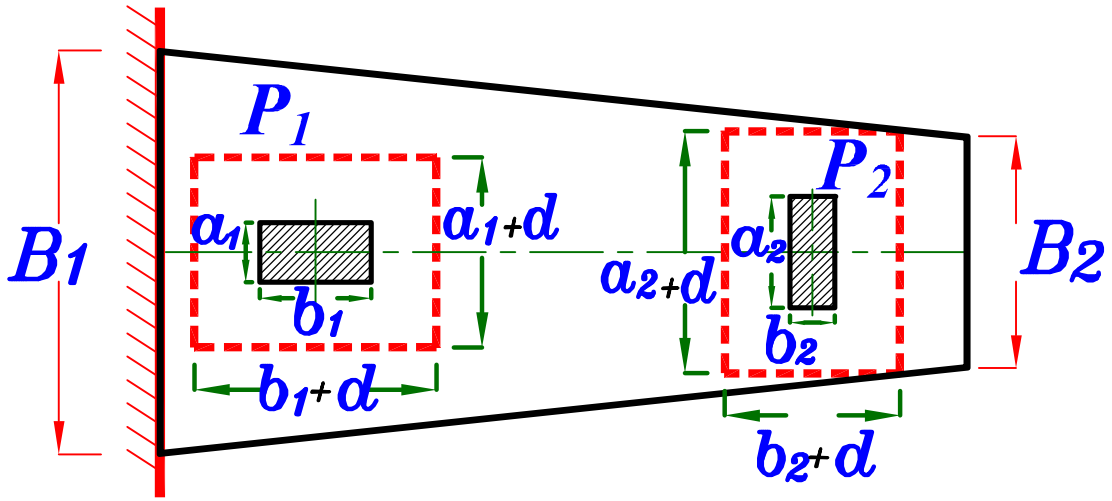

Column 1

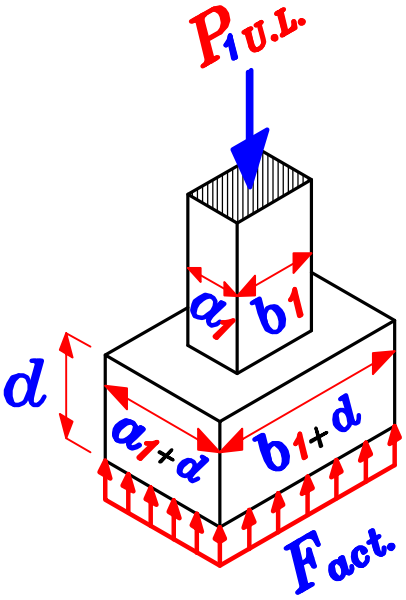

* Calculate Punching Force. (Q_{1p})

$$Q_{1p} = P_{1\,U.L.} - (F_{act.})\left[(a_1+d)(b_1+d)\right]$$

(kN)

* Calculate Punching shear area. (A_{1p})

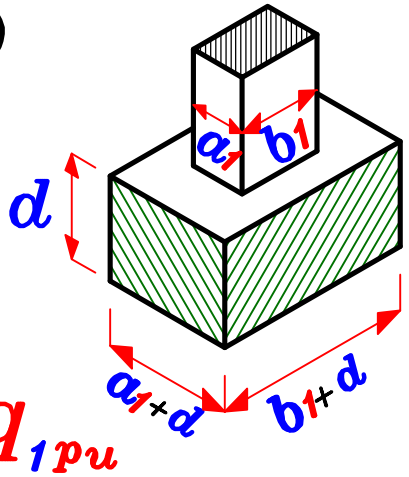

المحيط العمق

$$A_{1p} = \left[2(a_1+d)+2(b_1+d)\right] * d$$

(mm^2)

* Calculate Actual Punching shear stress. q_{1pu}

$$q_{1pu} = \frac{Q_{1p}\ (kN) * 10^3}{\left[2(a_1+d)+2(b_1+d)\right] * d\ \ (mm^2)}$$

(N/mm^2)

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Column 2

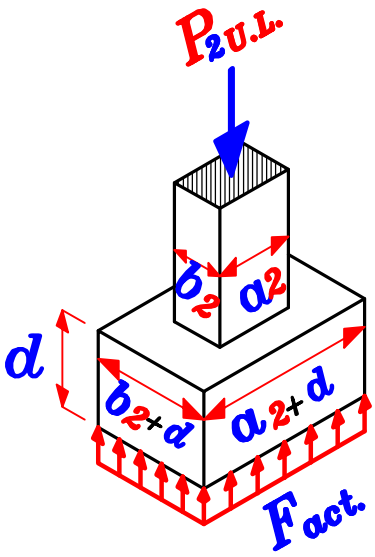

* Calculate Punching Force. (Q_{2p})

$$Q_{2p} = P_{2\,U.L.} - (F_{act.})\left[(a_2+d)(b_2+d)\right] \quad (kN)$$

* Calculate Punching shear area. (A_{2p})

المحيط العمق

$$A_{2p} = \left[2(a_2+d)+2(b_2+d)\right] * d \quad (mm^2)$$

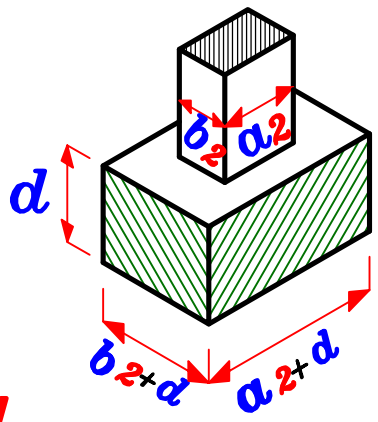

* Calculate Actual Punching shear stress. q_{2pu}

$$q_{2pu} = \frac{Q_{2p}\ (kN) * 10^3}{\left[2(a_2+d)+2(b_2+d)\right] * d\ (mm^2)} \quad (N/mm^2)$$

Choose q_{pumax} the bigger value of q_{1pu} & q_{2pu}

---

* Calculate allowable Punching shear stress. q_{pcu}

$$q_{pcu} = 0.316\left(0.5+\frac{a}{b}\right)\sqrt{\frac{F_{cu}}{\delta_c}} \quad (N/mm^2)$$

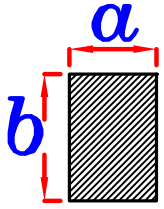

IF $\left(0.5+\frac{a}{b}\right) \leqslant 1.0$ ⟶ Take $q_{pcu} = 0.316\sqrt{\frac{F_{cu}}{\delta_c}}$ (N/mm^2)

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

* Compare between

Actual punching shear stress (q_{pumax}) & Allowable punching shear stress (q_{pcu})

* IF $q_{pumax} \leqslant q_{pcu}$ ⟶ Safe punching shear.
No need to increase dimensions.

* IF $q_{pumax} > q_{pcu}$ ⟶ UnSafe punching shear.
We have to increase dimensions.

5- Reinforcement of the Footing.

Longitudinal direction.

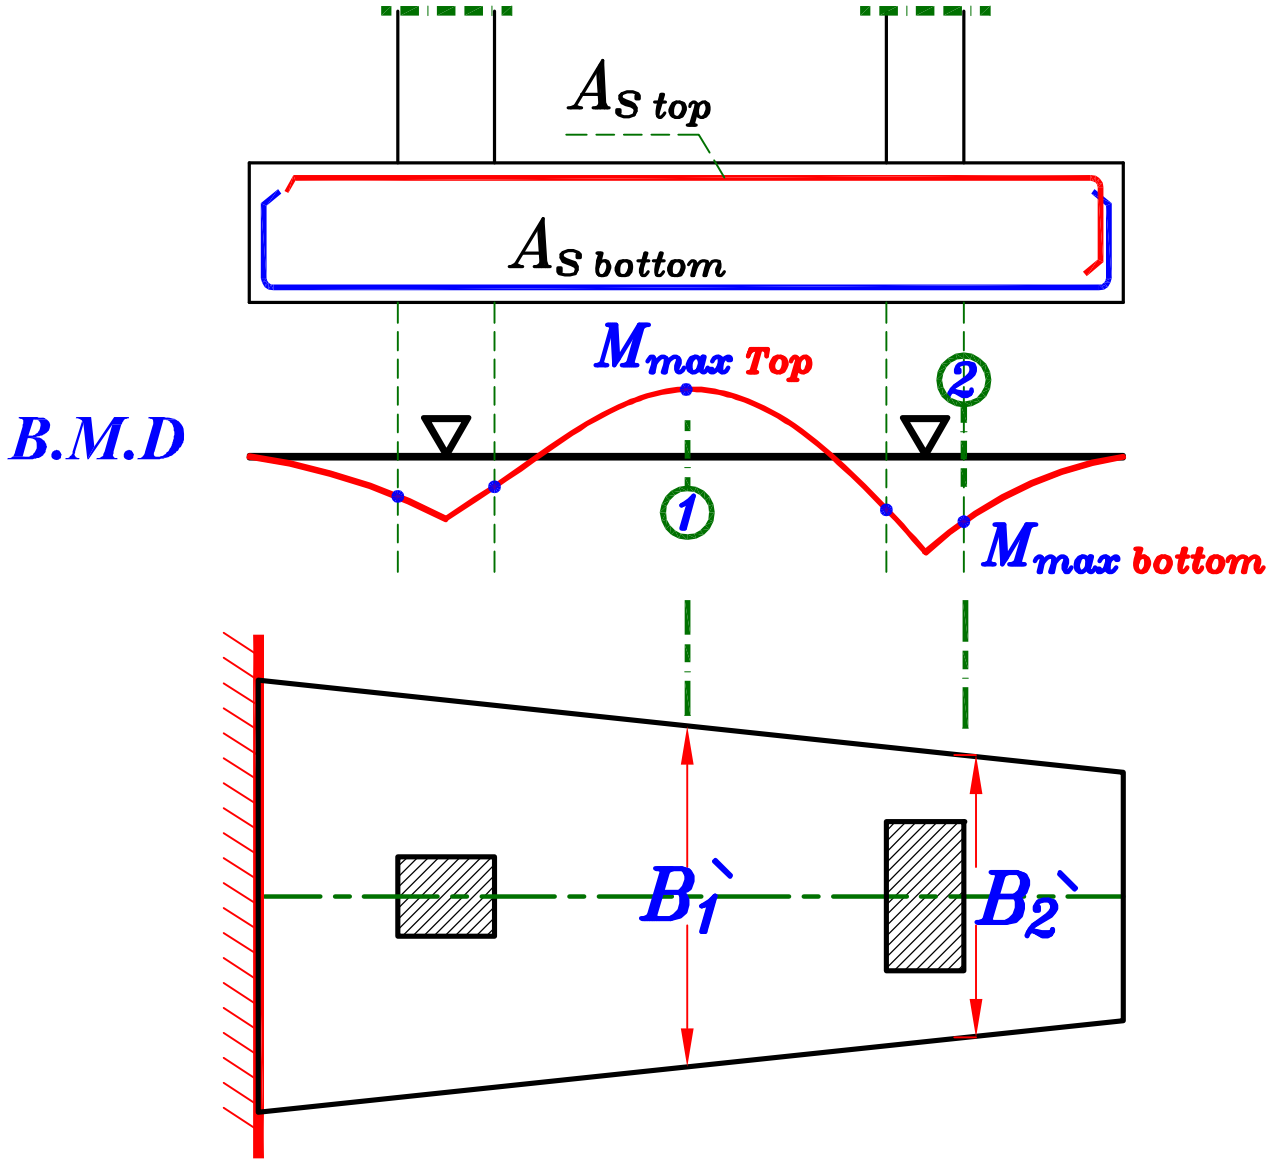

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Sec. ①

$$From\ d = C_1 \sqrt{\frac{M_{max\ Top}}{F_{cu} * B_1`}}$$

$$\xrightarrow{Get} C_1 \longrightarrow J$$

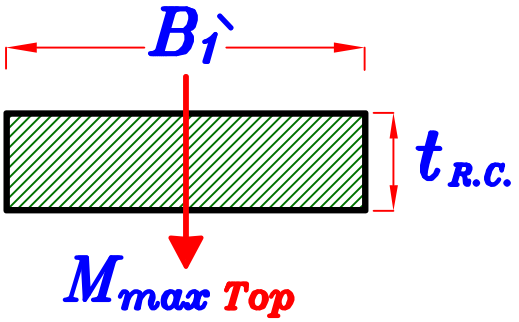

$$Get \quad \boxed{A_{s\,top} = \frac{M_{max\ Top}}{J\ F_y\ d}} \ (mm^2)$$

$$Check\ A_{s\,min} \quad \boxed{A_{s\,min}\ (mm^2/m) = \left\{ \begin{matrix} 1.5\,d\ (mm) \\ 5\,\phi\,12/m` \end{matrix} \right\}\ \text{الأكبر}}$$

$$IF\ A_{s\,top} \geqslant A_{s\,min} \longrightarrow o.k.$$

$$IF\ A_{s\,top} < A_{s\,min} \longrightarrow Take\ A_s = A_{s\,min}$$

Sec. ②

$$From\ d = C_1 \sqrt{\frac{M_{max\ bottom}}{F_{cu} * B_2`}}$$

$$\xrightarrow{Get} C_1 \longrightarrow J$$

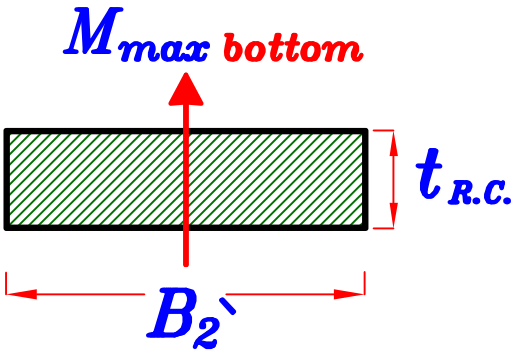

$$Get \quad \boxed{A_{s\,bott} = \frac{M_{max\ bottom}}{J\ F_y\ d}} \ (mm^2)$$

$$Check\ A_{s\,min} \quad \boxed{A_{s\,min}\ (mm^2/m) = \left\{ \begin{matrix} 1.5\,d\ (mm) \\ 5\,\phi\,12/m` \end{matrix} \right\}\ \text{الأكبر}}$$

$$IF\ A_{s\,bott} \geqslant A_{s\,min} \longrightarrow o.k.$$

$$IF\ A_{s\,bott} < A_{s\,min} \longrightarrow Take\ A_s = A_{s\,min}$$

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

Transverse direction. Short direction.

Hidden Beam 1

From $d = C_1 \sqrt{\dfrac{M_{1act.}}{F_{cu} * 1000}}$

Get $\longrightarrow C_1 \longrightarrow J$

Get $\boxed{A_{s1} = \dfrac{M_{1act.}}{J\, F_y\, d}}$ $(mm^2/m`)$

Check $A_{s\,min}$

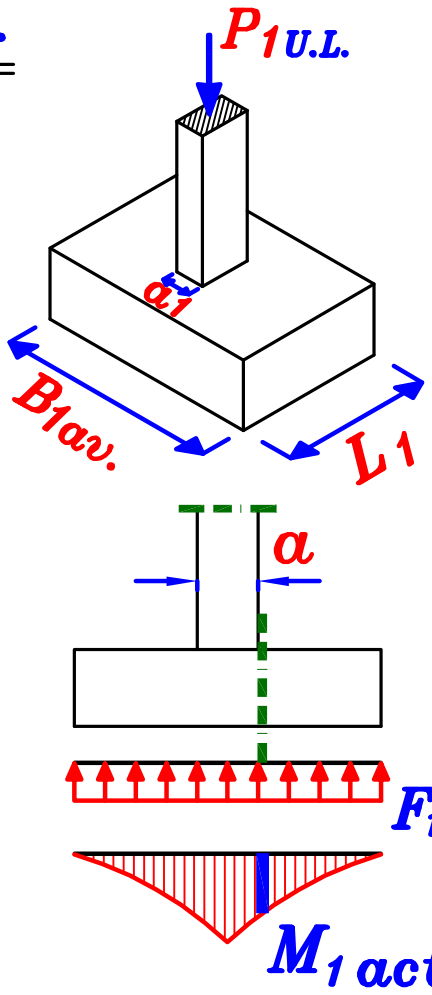

Hidden Beam 2

From $d = C_1 \sqrt{\dfrac{M_{2act.}}{F_{cu} * 1000}}$

Get $\longrightarrow C_1 \longrightarrow J$

Get $\boxed{A_{s2} = \dfrac{M_{2act.}}{J\, F_y\, d}}$ $(mm^2/m`)$

Check $A_{s\,min}$

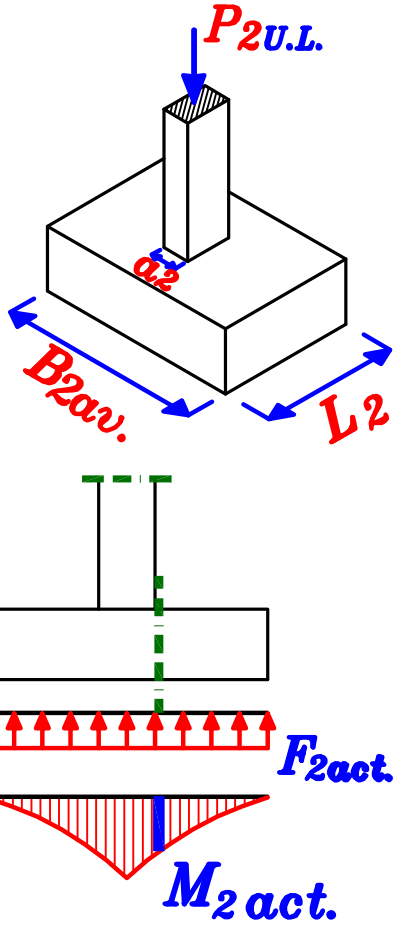

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)

6– Details of Reinforcement.

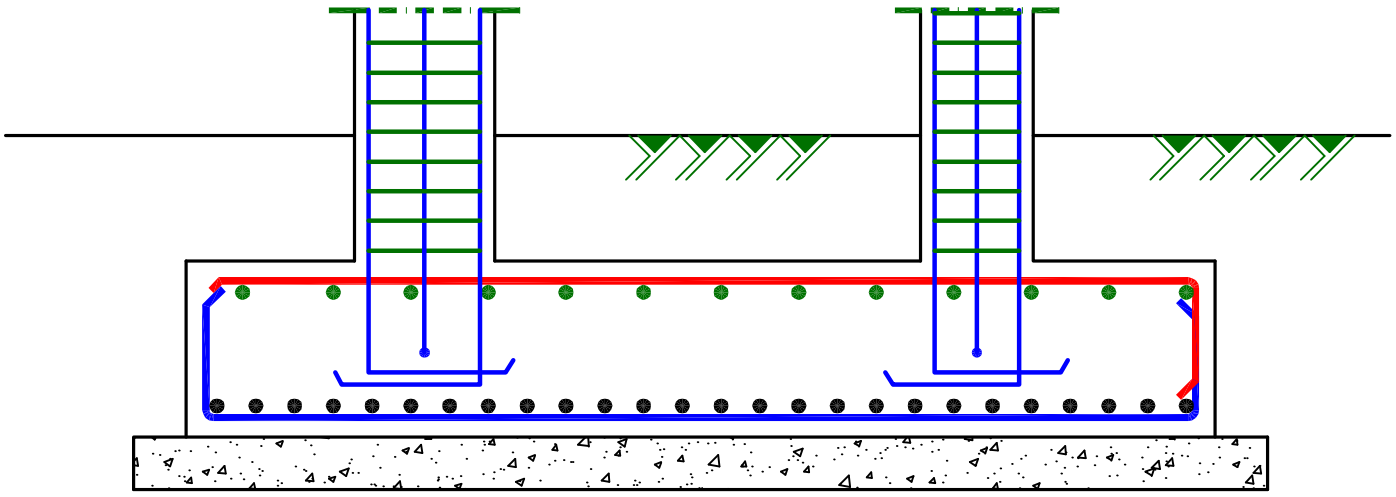

Sec X–X

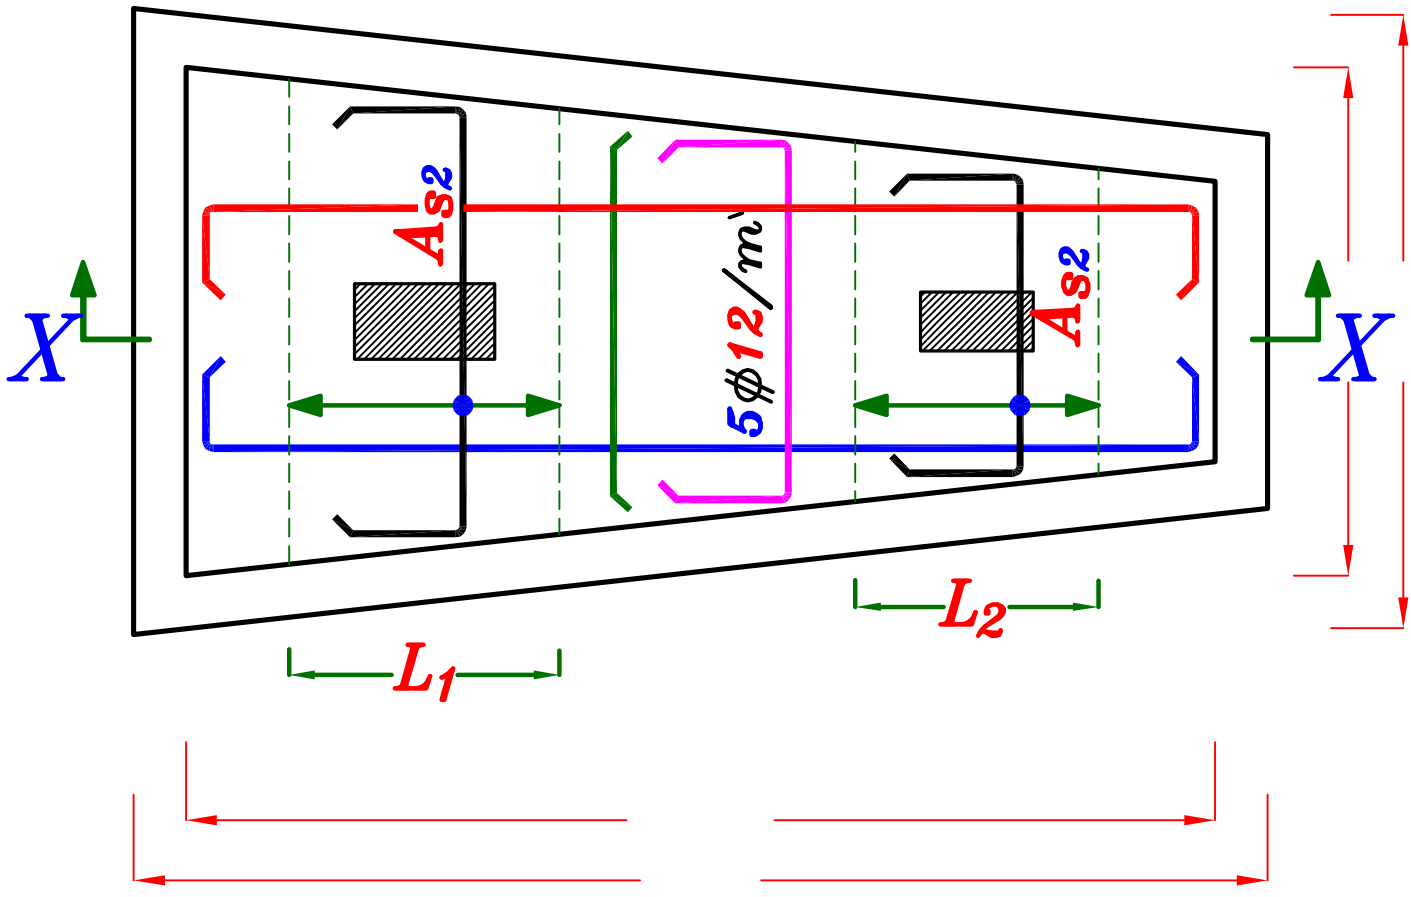

Plan

© Copyright Eng. Yasser El-Leathy 2010 . All copyrights reserved.
Reproduction of these notes in part or as a whole for sale is strictly prohibited.
Printing is allowed for personal use only. (www.yasserelleathy.com)